 


Parts List

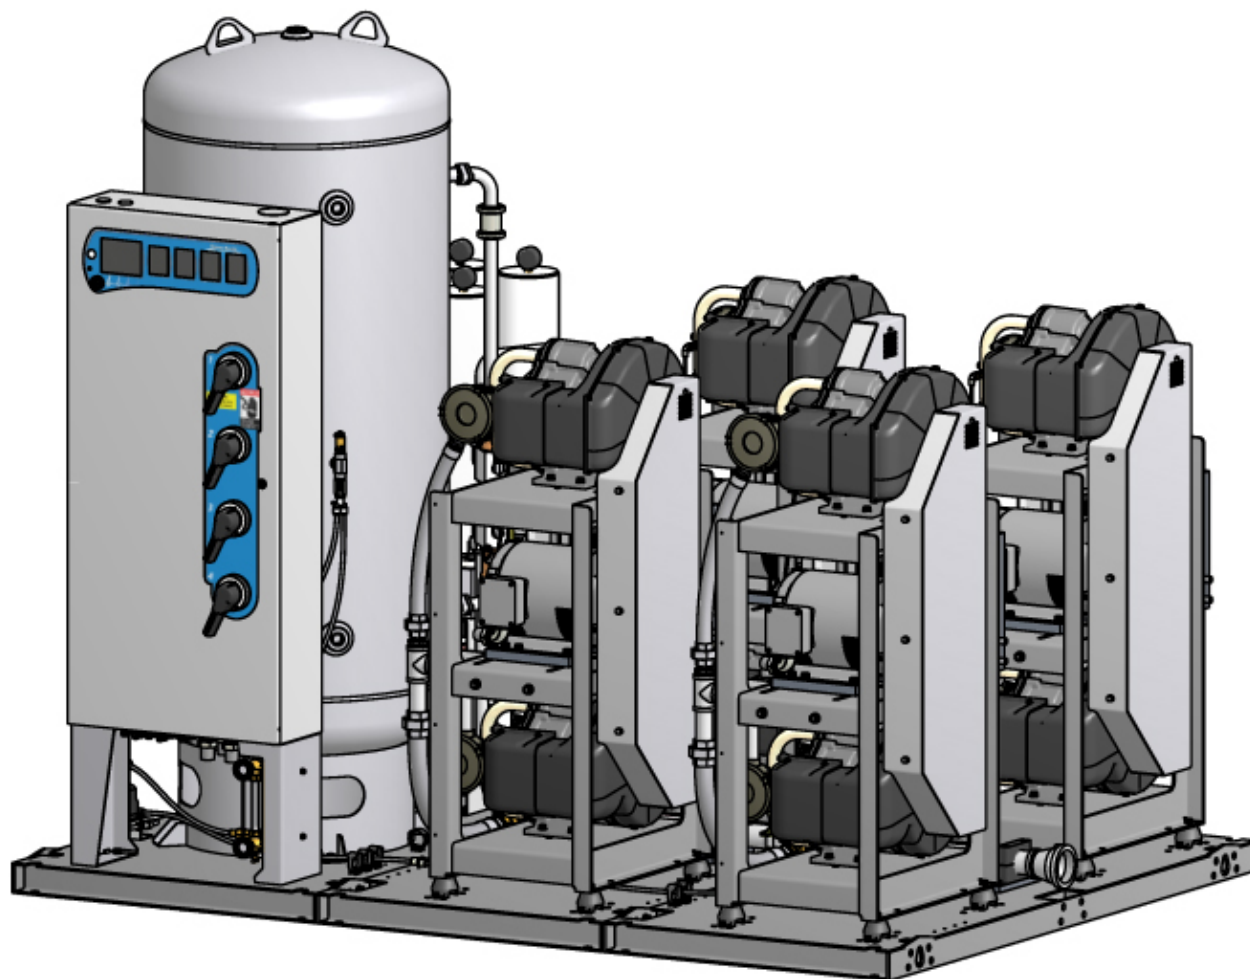

Scroll Medical Air Compressor System: 10 - 15 Hp

Australian MEPS

Part number 4107 9018 16

Revision 01

August 18, 2016



BEACONMEDÆS®



Parts List

10 - 15 Hp "Oil-Less" Scroll Medical Air Systems Australian MEPS

This unit is purchased from: _____

Date purchased: _____

Model number: _____

Serial number: _____

Option(s) included: _____

Any information, service or spare parts requests should include the machine serial number and be directed to:

BeaconMedæ

1800 Overview Drive
Rock Hill, SC 29730

Telephone: (803) 817-5600

Fax: (803) 817-5750

BeaconMedæ reserves the right to make changes and improvements to update products sold previously without notice or obligation.

Part number 4107 9018 16

Revision 01

August 18, 2016

Table of Contents

1	Service kits	9
2	Tower assembly SX 10hp 8bar(e) 50Hz	16
3	Tower assembly SX 15hp 8bar(e) 50Hz	20
4	Tank assembly 200 Gallon with 1/2" bypass piping	24
5	Tank assembly 200 Gallon with 1" bypass piping	26
6	Air inlet piping DX 10hp	28
7	Air inlet piping DX 15hp	30
8	Air inlet piping TX 10hp	32
9	Air inlet piping TX 15hp	36
10	Air inlet piping QX 10hp	40
11	Air inlet piping QX 15hp	44
12	Air inlet piping PX 15hp	48
13	Air inlet piping HX 15hp	52
14	Discharge piping DX 10-15hp	56
15	Discharge piping TX 10-15hp	58
16	Discharge piping QX 10-15hp	60
17	Discharge piping PX 15hp	62
18	Discharge piping HX 15hp	64
19	Dryer assembly DX 55 CFM ISO 2	66
20	Dryer assembly DX 75 & DX 105 CFM ISO 3	72
21	Dryer assembly DX 155 & DX 200 CFM ISO 4	78
22	Tank drain and CO assembly 10-15hp	84
23	Cable group and motor wire DX 10-15hp	86

Table of Contents

24	Cable group and motor wire TX 10-15hp	88
25	Cable group and motor wire QX 10-15hp	90
26	Cable group and motor wire PX 15hp	92
27	Cable group and motor wire HX 15hp	94
28	Base assembly and mounting hardware DX 10-15hp	96
29	Base assembly and mounting hardware TX 10-15hp	98
30	Base assembly and mounting hardware QX 10-15hp	100
31	Base assembly and mounting hardware PX 15hp	102
32	Base assembly and mounting hardware HX 15hp	104
33	Seismic isolator DX 10-15hp	106
34	Seismic isolator TX 10-15hp	108
35	Seismic isolator QX 10-15hp	110
36	Seismic isolator PX 15hp	112
37	Seismic isolator HX 15hp	114
38	Control panel DX 10-15hp	116
39	Control panel TX 10-15hp	120
40	Control panel QX 10-15hp	124
41	Control panel PX 15hp	128
42	Control panel HX 15hp	132

Revision History

Revision	Description	Date
00	Initial release	March 17, 2016
01	Update to Service Kits - changed part number of Zero-loss Drain Valve	August 18, 2016

Service kits

1

Ref.No.	Part Number	Qty	Name	Remarks
	6 - Month service kits			
	4107 4004 63	1	Kit - CO Calibration	
	•	1	20PPM CO gas bottle, 0PPM CO gas bottle, 0.5 LPM regulator #ABL- 4021, Nylon tubing, storage case	
	1 - Year system basic service kits (Control / dryer skid)			
	4107 4017 54	1	Kit - System scroll basic size B (ISO-2, 55CFM)	
			10 - 15hp Duplex	
	2901 2004 02 •	2	ISO-2 Dryer inlet filter	
	2901 2003 02 •	2	ISO-2 Dryer discharge filter	
	2901 2005 02 •	2	ISO-2 Dryer carbon filter	
	2901 0563 00 •	2	ISO-2 Dryer inlet filter float drain	
	4107 6506 22 •	2	ISO-2 Dryer purge muffler	
	4107 4017 85 •	1	Zero - loss drain valve service kit	
	4107 6519 34 •	1	Sight glass tube	
	4107 6506 70 •	1	3/8" polypropylene ball, white	
	4107 6517 11 •	1	3/8" in-line check valve, condensate drain	
	4107 6526 22 •	2	Seal washer 5/8 id	
	4107 6516 37 •	1	1/2" MNPT inline fi lter 90 Micron, sight glass	
	4107 4017 55	1	Kit - System scroll basic size C (ISO-3, 75CFM)	
			10hp Triplex	
			10hp Duplex - EXP	
	2901 2004 03 •	2	ISO-3 Dryer inlet filter	
	2901 2003 03 •	2	ISO-3 Dryer discharge filter	
	2901 2005 03 •	2	ISO-3 Dryer carbon filter	
	2901 0563 00 •	2	ISO-3 Dryer inlet filter float drain	
	4107 6506 23 •	2	ISO-3 Dryer purge muffler	
	4107 4017 85 •	1	Zero - loss drain valve service kit	
	4107 6519 34 •	1	Sight glass tube	
	4107 6506 70 •	1	3/8" polypropylene ball, white	
	4107 6517 11 •	1	3/8" in-line check valve, condensate drain	
	4107 6526 22 •	2	Seal washer 5/8 id	
	4107 6516 37 •	1	1/2" MNPT inline fi lter 90 Micron, sight glass	
	4107 4017 56	1	Kit - System scroll basic size D (ISO-3, 105CFM)	
			15hp Triplex	
			10hp Quadruplex	
			15hp Duplex - EXP	
			10hp Triplex - EXP	
	2901 2004 04 •	2	ISO-3 Dryer inlet filter	
	2901 2003 04 •	2	ISO-3 Dryer discharge filter	
	2901 2005 04 •	2	ISO-3 Dryer carbon filter	
	2901 0563 00 •	2	ISO-3 Dryer inlet filter float drain	

Service kits

1

Ref.No.	Part Number	Qty	Name	Remarks
	4107 6506 23 •	2	ISO-3 Dryer purge muffler	
	4107 4017 85 •	1	Zero - loss drain valve service kit	
	4107 6519 34 •	1	Sight glass tube	
	4107 6506 70 •	1	3/8" polypropylene ball, white	
	4107 6517 11 •	1	3/8" in-line check valve, condensate drain	
	4107 6526 22 •	2	Seal washer 5/8 id	
	4107 6516 37 •	1	1/2" MNPT inline fi lter 90 Micron, sight glass	
	4107 4017 57	1	Kit - System scroll basic size E (ISO-4, 155 - 200CFM)	
			15hp Quadruplex	
			15hp Pentaplex	
			15hp Hexaplex	
			15hp Triplex - EXP	
			15hp Quadruplex - EXP	
			15hp Pentaplex - EXP	
	2901 2004 05 •	2	ISO-4 Dryer inlet filter	
	2901 2003 05 •	2	ISO-4 Dryer discharge filter	
	2901 2005 05 •	2	ISO-4 Dryer carbon filter	
	2901 0563 00 •	2	ISO-4 Dryer inlet filter float drain	
	4107 6506 24 •	2	ISO-4 Dryer purge muffler	
	4107 4017 85 •	1	Zero - loss drain valve service kit	
	4107 6519 34 •	1	Sight glass tube	
	4107 6506 70 •	1	3/8" polypropylene ball, white	
	4107 6517 11 •	1	3/8" in-line check valve, condensate drain	
	4107 6526 22 •	2	Seal washer 5/8 id	
	4107 6516 37 •	1	1/2" MNPT inline fi lter 90 Micron, sight glass	
	1 - Year unit basic service kits (Tower skid)			
	4107 4000 44	1	Kit - Unit scroll basic 10hp (60Hz)	
	4107 6526 04 •	2	Main air inlet filter	
	4107 6515 52 •	4	Compressor V-belts	
	4107 4000 45	1	Kit - Unit scroll basic 15hp (60Hz)	
	4107 6526 04 •	2	Main air inlet filter	
	4107 6505 47 •	4	Compressor V-belts	
	4107 4000 50	1	Kit - Unit scroll basic 10hp (50Hz)	
	4107 6526 04 •	2	Main air inlet filter	
	4107 6515 52 •	4	Compressor V-belts	
	4107 4000 51	1	Kit - Unit scroll basic 15hp (50hz)	
	4107 6526 04 •	2	Main air inlet filter	
	4107 6524 66 •	4	Compressor V-belts	

Service kits

1


Ref.No.	Part Number	Qty	Name	Remarks
	2 - Year system sensor kits			
	4107 4000 59	1	Kit - DP/CO sensors	
	4107 6554 19 •	1	Dew point sensor	
	4107 6530 69 •	1	CO sensor	
	3 - Year system extended service kits (Control / dryer skid)			
	4107 4000 35	1	Kit - System scroll extended size B (ISO-2, 55 CFM)	
			10 - 15hp Duplex	
	4107 4000 60 •	3	Desiccant, 6LB bag	
	4651 1763 92 ••		Desiccant	
	4107 6526 03 ••		Poly bag 16 X 16 X 0.006MIL	
	4107 6507 13 •	4	O-ring 2-120 BUNA-N (Canister)	
	4107 6507 14 •	4	O-ring 2-347 BUNA-N (Tower flange)	
	4107 6505 19 •	4	Check valve CT1 Beacon	
	4107 6512 71 •	4	O-ring 3-920 BUNA-N (CV plug)	
	4107 6510 26 •	2	Val ST25 1/4" SFV 72 CFM @ 75 PSI	
	4107 4000 36	1	Kit - System scroll extended size C (ISO-3, 75CFM)	
			10hp Triplex	
			10hp Duplex - EXP	
	4107 4000 60 •	4	Desiccant, 6LB bag	
	4651 1763 92 ••		Desiccant	
	4107 6526 03 ••		Poly bag 16 X 16 X 0.006MIL	
	4107 6515 88 •	4	O-ring 2-132 BUNA-N (Canister)	
	4107 6513 89 •	4	O-ring 2-355 BUNA-N (Tower flange)	
	4107 6505 19 •	4	Check valve CT1 Beacon	
	4107 6512 71 •	4	O-ring 3-920 BUNA-N (CV plug)	
	4107 6514 73 •	2	Val SB75 3/4" SFV 322 CFM @ 75 PSI	
	4107 4000 37	1	Kit - System scroll extended size D (ISO-3, 105CFM)	
			15hp Triplex	
			10hp Quadruplex	
			15hp Duplex - EXP	
			10hp Triplex - EXP	
	4107 4000 60 •	6	Desiccant, 6LB bag	
	4651 1763 92 ••		Desiccant	
	4107 6526 03 ••		Poly bag 16 X 16 X 0.006MIL	
	4107 6515 88 •	4	O-ring 2-132 BUNA-N (Canister)	
	4107 6513 89 •	4	O-ring 2-355 BUNA-N (Tower flange)	
	4107 6505 19 •	4	Check valve CT1 Beacon	
	4107 6512 71 •	4	O-ring 3-920 BUNA-N (CV plug)	
	4107 6514 73 •	2	Val SB75 3/4" SFV 322 CFM @ 75 PSI	

Service kits

1

Ref.No.	Part Number	Qty	Name	Remarks
	4107 4000 38	1	Kit - System scroll extended size E (ISO-4, 155cfm)	
			15hp Quadruplex	
			15hp Triplex - EXP	
	4107 4000 60 •	9	Desiccant, 6LB bag	
	4651 1763 92 ••		Desiccant	
	4107 6526 03 ••		Poly bag 16 X 16 X 0.006MIL	
	4107 6515 88 •	4	O-ring 2-132 BUNA-N (Canister)	
	4107 6515 90 •	4	O-ring 2-362 BUNA-N (Tower flange)	
	4107 6505 19 •	4	Check valve CT1 Beacon	
	4107 6512 71 •	4	O-ring 3-920 BUNA-N (CV plug)	
	4107 6514 73 •	2	Val SB75 3/4" SFV 322 CFM @ 75 PSI	
	4107 4000 39	1	Kit - System scroll extended size F (ISO-4, 200CFM)	
			15hp Pentaplex	
			15hp Hexaplex	
			15hp Quadruplex - EXP	
	4107 4000 60 •	11	Desiccant, 6LB bag	
	4651 1763 92 ••		Desiccant	
	4107 6526 03 ••		Poly bag 16 X 16 X 0.006MIL	
	4107 6515 88 •	4	O-ring 2-132 BUNA-N (Canister)	
	4107 6515 90 •	4	O-ring 2-362 BUNA-N (Tower flange)	
	4107 6505 19 •	4	Check valve CT1 Beacon	
	4107 6512 71 •	4	O-ring 3-920 BUNA-N (CV plug)	
	4107 6514 73 •	2	Val SB75 3/4" SFV 322 CFM @ 75 PSI	
	3 - Year unit extended service kits (Tower skid)			
	4107 4000 53	1	Kit - Unit scroll extended 10 - 15hp	
	4107 6505 02 •	2	Val SRH187 1/8" SFV 120 CFM @ 145 PSI	
	4107 6507 04 •	2	Check valve CTLB1234-FS Beacon	
	4107 6507 05 •	1	Check valve CT2 Beacon	
	4107 6512 71 •	1	O-ring 3-920 BUNA-N (CV plug)	
	4107 6511 71 •	1	Filter 1/4" inline sintered bronze	
	5,000 Hour pump service kits			
	2903 0139 00	1	Grease pump kit	
	2892 6100 20	1	Replacement grease cartridge	
	10,000 Hour pump tip seal kits			
	4107 4000 57	1	Kit tip seal 10hp scroll pump	
	2901 1584 01 •	2	Tip seal kit 3.7kW (5hp)	
	4107 4000 58	1	Kit tip seal 15hp scroll pump	
	2901 1977 00 •	2	Tip seal kit 5.5kW (7.5hp)	

 2

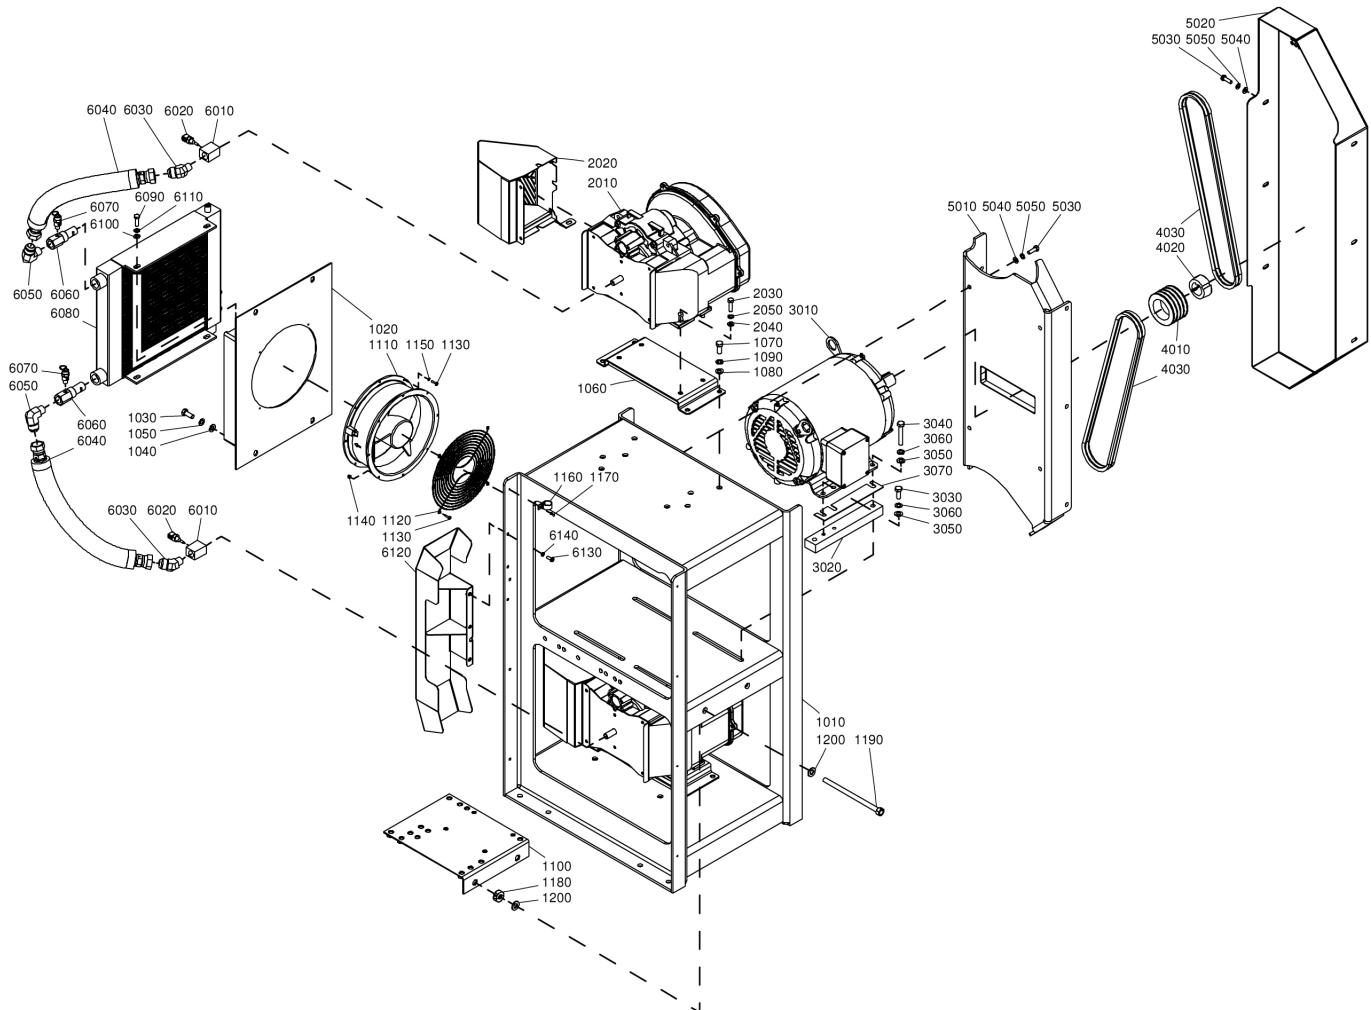


4107 8525 14-01

Tower assembly SX 10hp 8bar(e) 50Hz

2

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6504 92	1	Frame	
1 020	4107 6504 93	1	Bracket	
1 030	0147 1362 03	4	Screw	
1 040	0301 2344 00	4	Washer	
1 050	0333 2230 00	4	Spring washer	
1 060	4107 6504 58	2	Spacer	
1 070	0147 1362 03	8	Screw	
1 080	0301 2344 00	8	Washer	
1 090	0333 2230 00	8	Spring washer	
1 100	4107 6505 01	1	Bracket	
1 110	4107 6507 06	1	Fan	
1 120	4107 6507 07	1	Fan guard	
1 130	0160 0996 11	8	Screw	
1 140	0291 1106 00	4	Lock nut	
1 150	0333 3100 03	4	Lock washer	
1 160	4107 6516 25	4	Clip	
1 170	4107 6517 31	4	Rivet	
1 180	4107 6525 08	2	Clamp	
1 190	4107 6525 09	2	Threaded rod	
1 200	0301 2358 00	4	Washer	
2 010	2236 0501 00	2	Scroll element	
2 020	4107 6514 00	2	Exhaust guard	
2 030	0147 1326 03	8	Screw	
2 040	0301 2335 00	8	Washer	
2 050	0333 2225 00	8	Spring washer	
3 010	4107 6529 81	1	Motor	
3 020	4107 6505 09	2	Spacer	
3 030	0147 1362 03	4	Screw	
3 040	0147 1369 03	4	Screw	
3 050	0301 2344 00	8	Washer	
3 060	0333 2230 00	8	Spring washer	
3 070	4107 6525 74	2	Motor shim	
4 010	4107 6512 83	1	Pulley	
4 020	4107 6505 11	1	Bushing	
4 030	4107 6515 52	4	V-belt	
5 010	4107 6507 20	1	Rear belt guard	
5 020	4107 6544 24	1	Front belt guard	
5 030	0147 1325 03	10	Screw	
5 040	0301 2335 00	10	Washer	
5 050	0333 2225 00	10	Spring washer	
6 010	4107 6514 78	2	Adaptor	
6 020	4107 6511 32	2	Temperature sensor	
6 030	4107 6516 21	2	Elbow	
6 040	4107 6516 26	2	Flexible	
6 050	4107 6516 20	2	Elbow	
6 060	4107 6507 04	2	Check valve	
6 070	4107 6505 02	2	Safety valve	
6 080	4107 6504 94	1	Air cooler	

 2

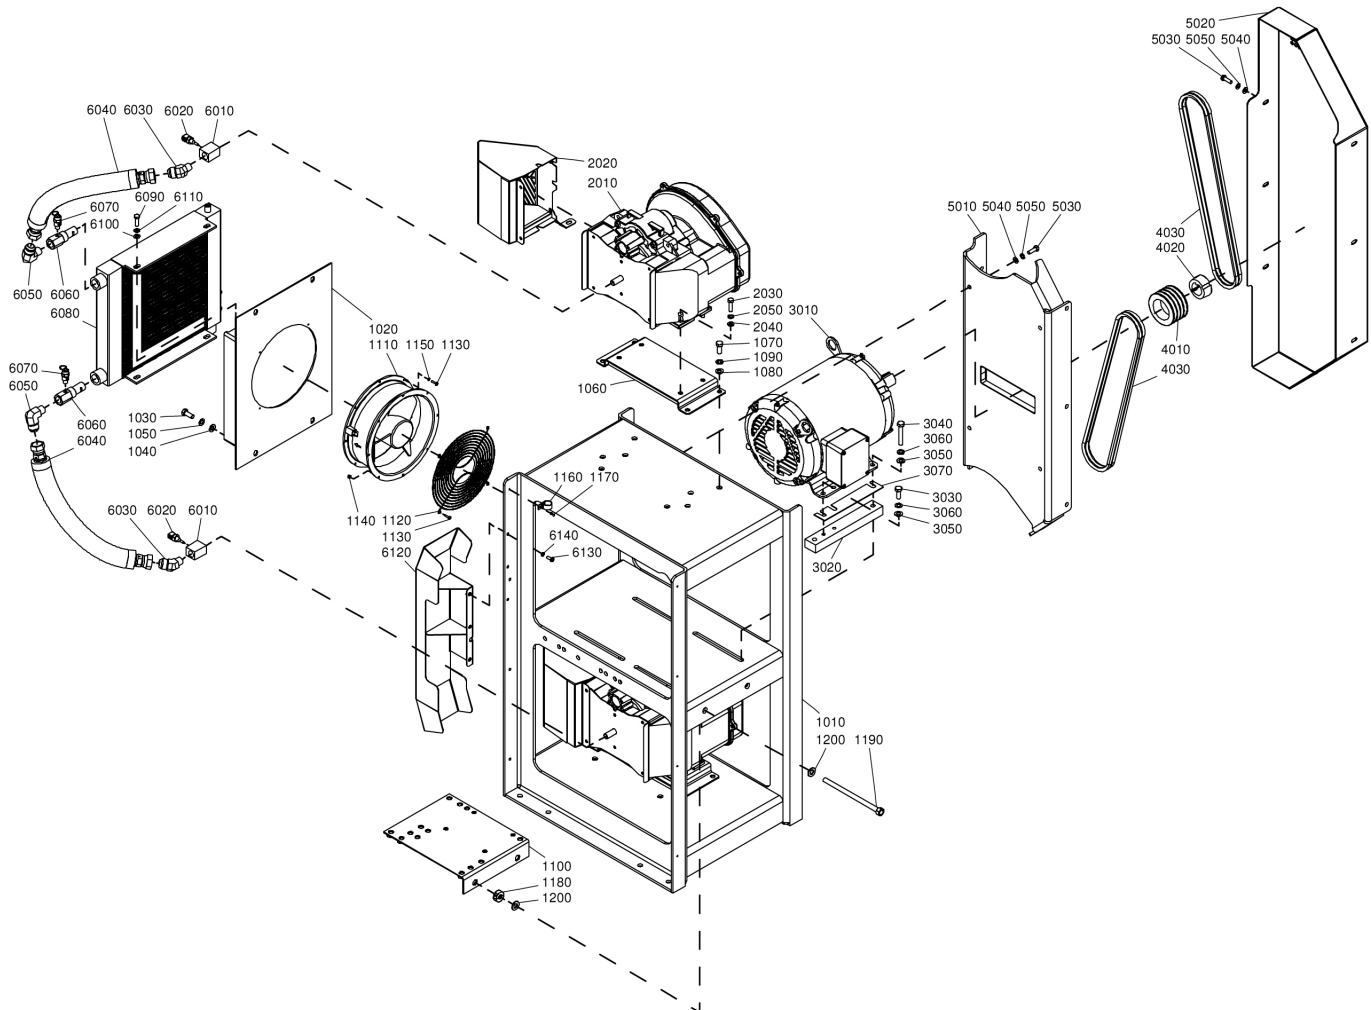


4107 8525 14-01

Tower assembly SX 10hp 8bar(e) 50Hz

2

Ref.No.	Part Number	Qty	Name	Remarks
6 090	0147 1325 03	4	Screw	
6 100	0301 2335 00	4	Washer	
6 110	0333 2225 00	4	Spring washer	
6 120	4107 6523 97	1	Guard	
6 130	0160 0996 83	3	Screw	
6 140	0333 3100 13	3	Lock washer	

 3

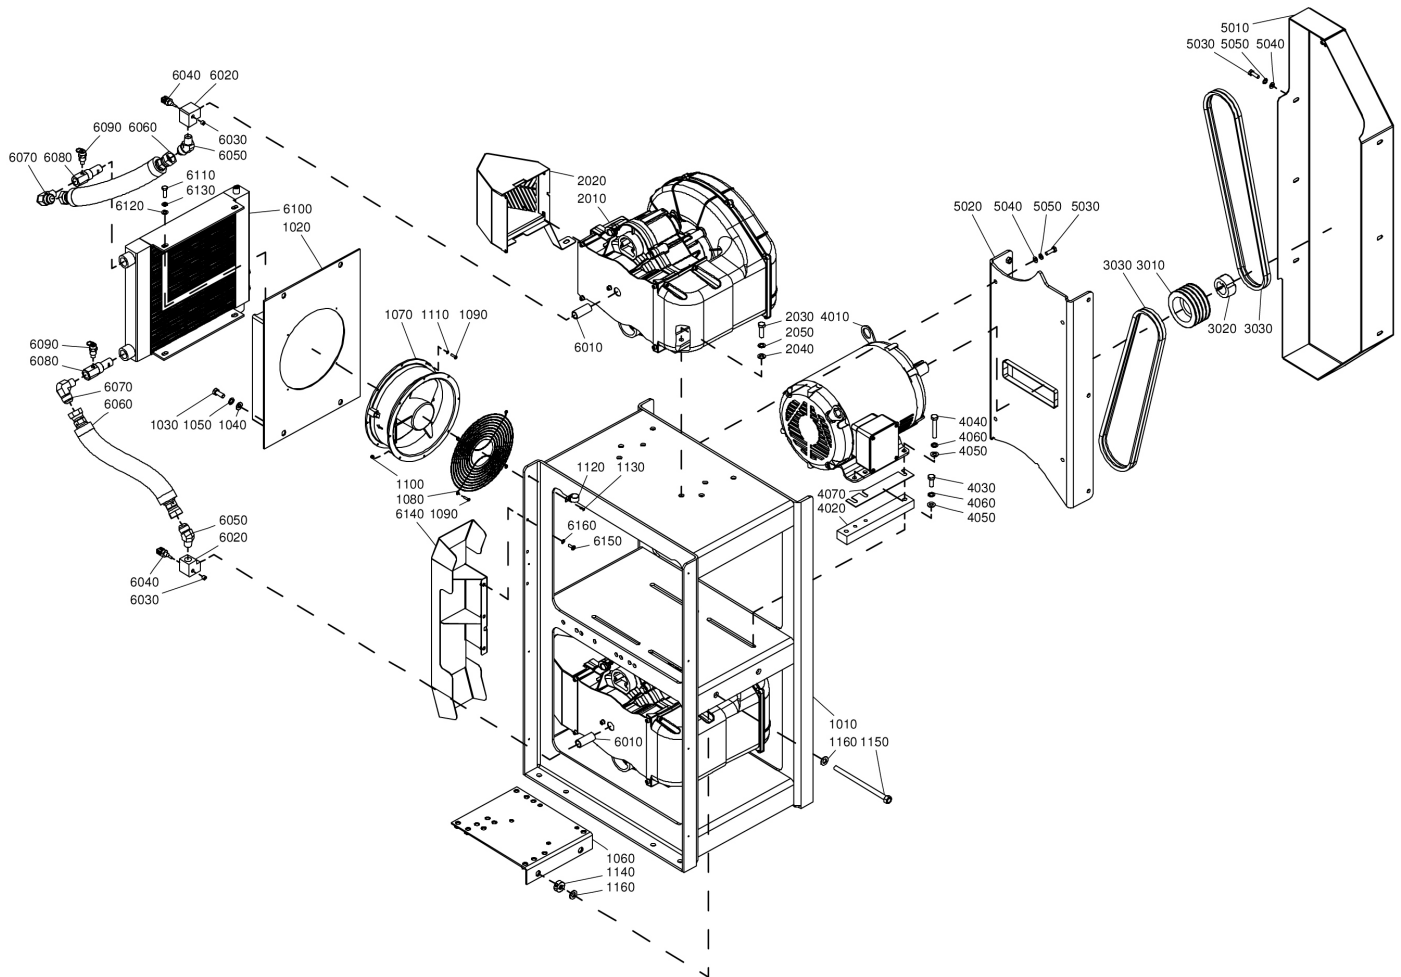


4107 8525 15-01

Tower assembly SX 15hp 8bar(e) 50Hz

3

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6504 92	1	Frame	
1 020	4107 6504 93	1	Bracket	
1 030	0147 1362 03	4	Screw	
1 040	0301 2344 00	4	Washer	
1 050	0333 2230 00	4	Spring washer	
1 060	4107 6505 01	1	Bracket	
1 070	4107 6507 06	1	Fan	
1 080	4107 6507 07	1	Fan guard	
1 090	0160 0996 11	8	Screw	
1 100	0291 1106 00	4	Lock nut	
1 110	0333 3100 03	4	Lock washer	
1 120	4107 6516 25	4	Clip	
1 130	4107 6517 31	4	Rivet	
1 140	4107 6525 08	2	Clamp	
1 150	4107 6525 09	2	Threaded rod	
1 160	0301 2358 00	4	Washer	
2 010	1616 7418 83	2	Scroll element	
2 020	4107 6511 55	2	Exhaust guard	
2 030	0147 1364 03	8	Screw	
2 040	0301 2344 00	8	Washer	
2 050	0333 2230 00	8	Spring washer	
3 010	4107 6523 76	1	Pulley	
3 020	4107 6505 53	1	Bushing	
3 030	4107 6524 66	4	V-belt	
4 010	4107 6529 83	1	Motor	
4 020	4107 6505 09	2	Spacer	
4 030	0147 1362 03	4	Screw	
4 040	0147 1369 03	4	Screw	
4 050	0301 2344 00	8	Washer	
4 060	0333 2230 00	8	Spring washer	
4 070	4107 6525 74	2	Motor shim	
5 010	4107 6544 24	1	Front belt guard	
5 020	4107 6544 25	1	Rear belt guard	
5 030	0147 1325 03	10	Screw	
5 040	0301 2335 00	10	Washer	
5 050	0333 2225 00	10	Spring washer	
6 010	4107 6511 45	2	Nipple	
6 020	4107 6508 39	2	Elbow	
6 030	4107 6512 11	2	Plug	
6 040	4107 6511 32	2	Temperature sensor	
6 050	4107 6516 21	2	Elbow	
6 060	4107 6516 24	2	Flexible	
6 070	4107 6516 20	2	Elbow	
6 080	4107 6507 04	2	Check valve	
6 090	4107 6505 02	2	Safety valve	
6 100	4107 6504 94	1	Air cooler	
6 110	0147 1325 03	4	Screw	
6 120	0301 2335 00	4	Washer	

 3

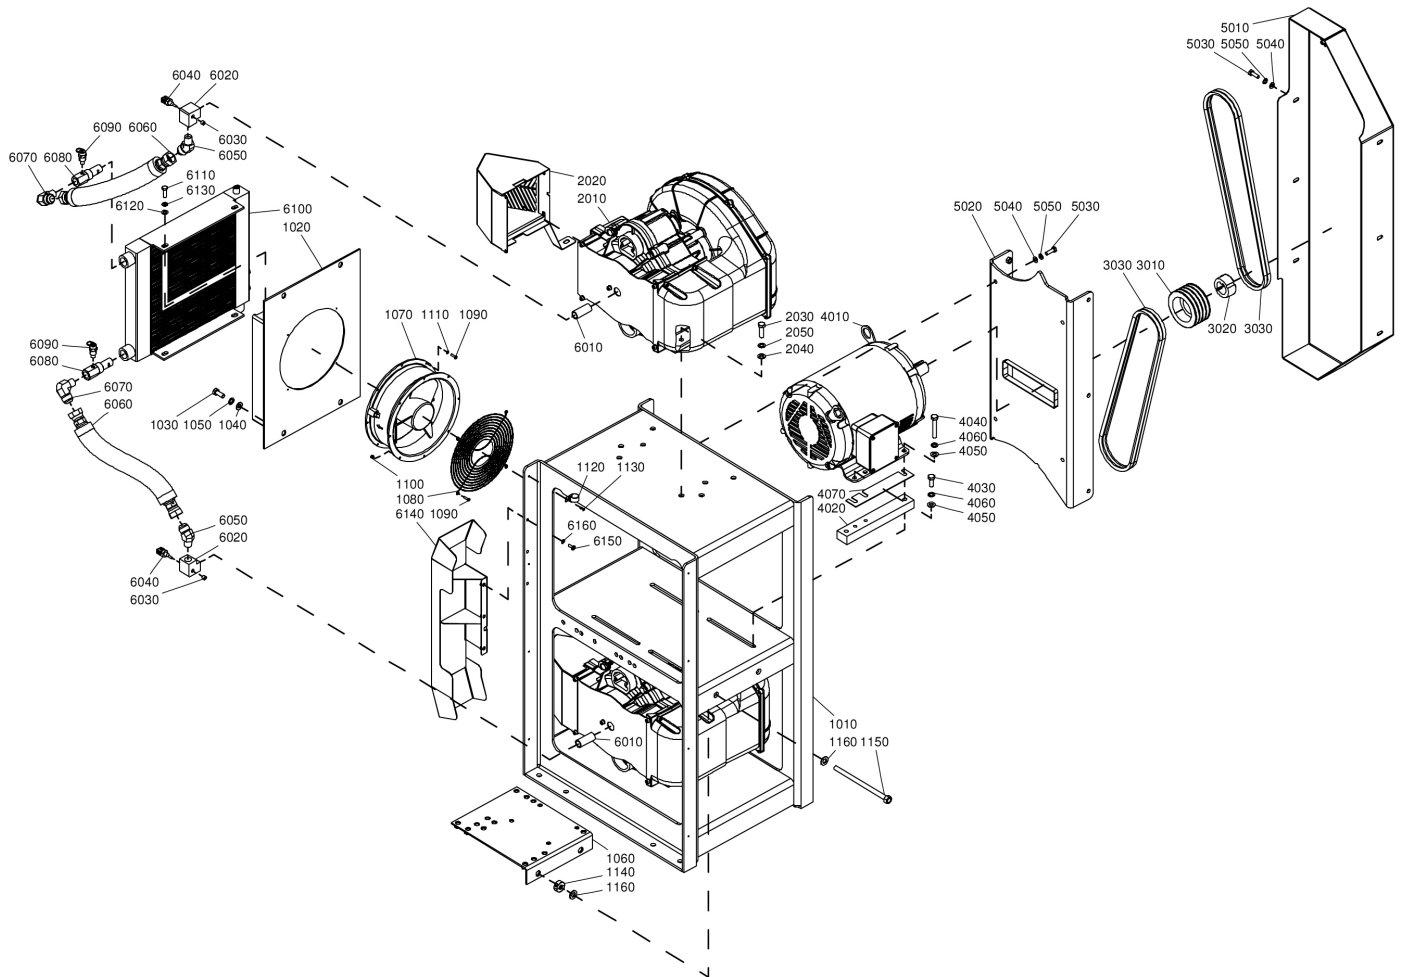


4107 8525 15-01

Tower assembly SX 15hp 8bar(e) 50Hz

3

Ref.No.	Part Number	Qty	Name	Remarks
6 130	0333 2225 00	4	Spring washer	
6 140	4107 6523 97	1	Guard	
6 150	0160 0996 83	3	Screw	
6 160	0333 3100 13	3	Lock washer	

 


Tank assembly 200 Gallon with 1/2” bypass piping

4

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6529 19	1	Tank	
1 030	4107 6501 21	5	Plug	
2 010	4107 6529 22	2	Block	
2 030	0147 1410 03	8	Bolt	
2 040	0301 2358 00	16	Washer	
2 050	0333 2236 00	8	Lock washer	
2 060	0266 2112 00	8	Nut	
2 070	4107 6510 11	7	O-ring	
2 080	4107 6505 94	3	Valve	
2 090	0147 1247 03	12	Bolt	
2 100	0333 2219 00	12	Spring washer	
2 110	4107 6506 73	2	Block	
2 120	4107 6529 24	2	Pipe	
2 130	0147 1249 03	2	Bolt	
2 140	0291 1108 00	2	Lock nut	
2 150	4107 6510 10	1	Coupling	
2 160	4107 6525 95	2	Orifice adaptor	
2 170	4107 6513 44	2	Elbow	
2 180	4107 6534 99	1	Backup pressure switch	
2 190	4107 6517 79	1	Pressure transducer	
3 010	4107 6525 96	1	Tee	
3 020	4107 6510 28	1	Safety valve	
3 030	4107 6510 25	1	Ball valve	
3 040	4107 6510 07	1	Connector	
4 010	4107 6500 95	1	Bushing	
4 020	4107 6512 32	1	Nipple	
4 030	4107 6516 27	1	Tee	
4 040	4107 6510 25	1	Valve	
4 050	4107 6510 06	1	Connector	
5 010	4107 6517 24	1	Nipple	
5 020	4107 6510 27	1	Tee	
5 030	4107 6510 27	2	Valve	
5 040	4107 6510 35	1	Pressure gauge	

 5

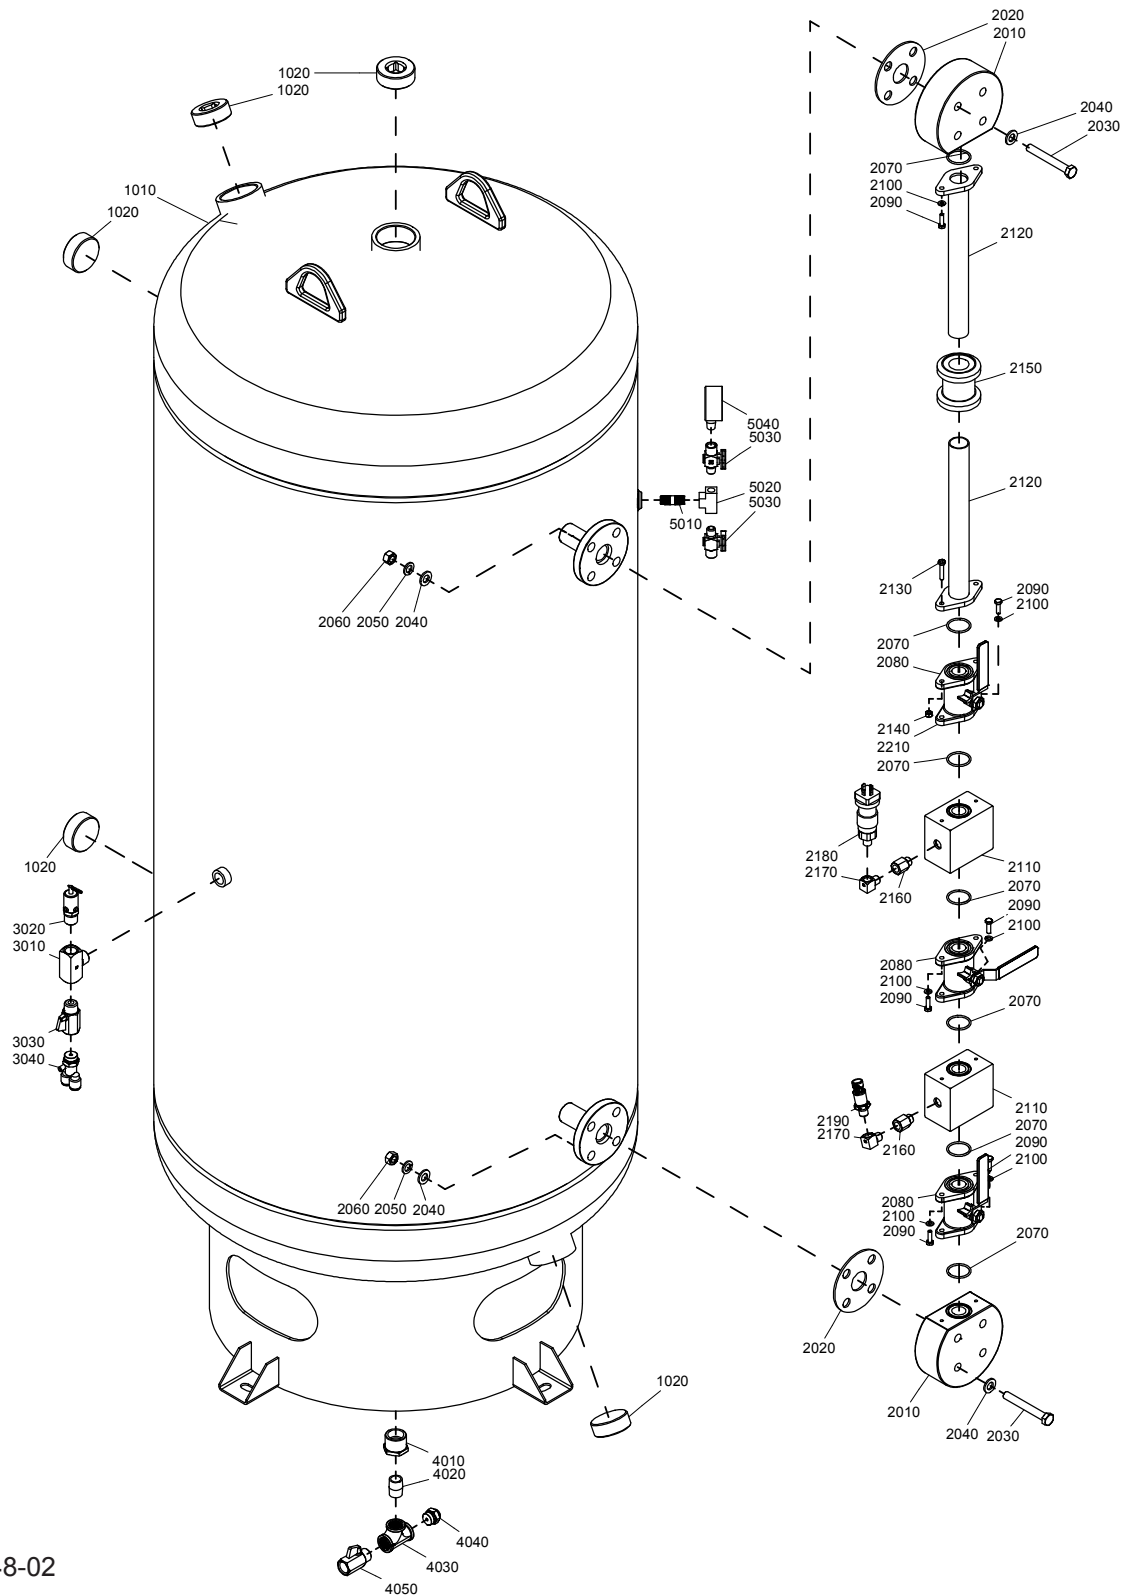


4107 8524 48-02

Tank assembly 200 Gallon with 1” bypass piping

5

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6529 19	1	Tank	
1 020	4107 6501 21	5	Plug	
2010	4107 6529 23	2	Block	
2020	4107 6529 26	2	Gasket	
2030	0147 1413 03	8	Bolt	
2040	0301 2358 00	16	Washer	
2050	0333 2236 00	8	Lock washer	
2060	0266 2112 00	8	Nut	
2070	4107 6510 12	7	O-ring	
2080	4107 6505 93	3	Valve	
2090	0147 1247 03	12	Bolt	
2100	0333 2219 00	12	Spring washer	
2110	4107 6513 13	2	Block	
2120	4107 6529 25	2	Pipe	
2130	0147 1250 03	2	Bolt	
2140	0291 1108 00	2	Lock nut	
2150	4107 6513 95	1	Coupling	
2160	4107 6525 95	2	Orifice adaptor	
2170	4107 6513 44	2	Elbow	
2180	4107 6534 99	1	Backup pressure switch	
2190	4107 6517 79	1	Pressure transducer	
3 010	4107 6525 96	1	Tee	
3 020	4107 6510 28	1	Safety valve	
3 030	4107 6510 25	1	Ball valve	
3 040	4107 6510 07	1	Connector	
4 010	4107 6500 95	1	Bushing	
4 020	4107 6512 32	1	Connector	
4 030	4107 6516 27	1	Tee	
4 040	4107 6510 06	1	Connector	
4 050	4107 6510 25	1	Valve	
5 010	4107 6517 24	1	Nipple	
5 020	2715 9200 OF	1	Elbow	
5 030	4107 6510 27	1	Valve	
5 040	4107 6540 90	1	Pressure gauge	

 6

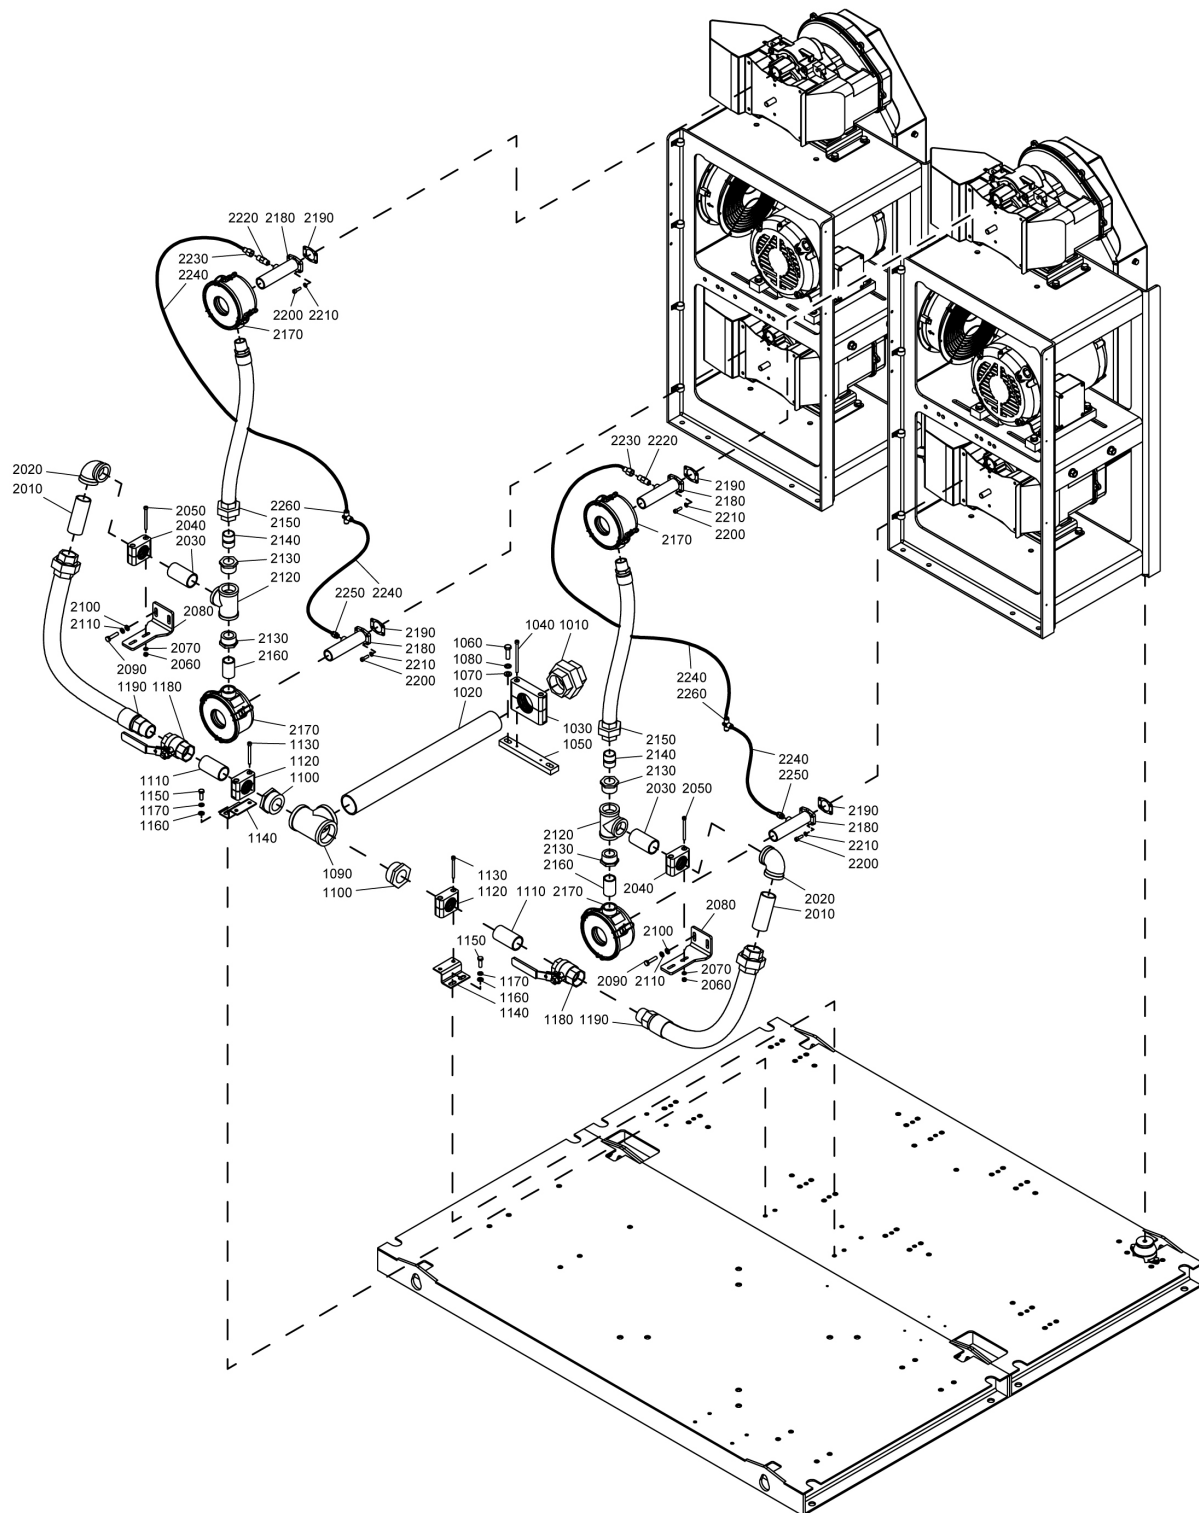


4107 8525 17-01

Air inlet piping DX 10hp

6

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 24	1	Union	
1 020	4107 6525 29	1	Nipple	
1 030	4107 6513 10	1	Clamp	
1 040	0211 1264 03	2	Screw	
1 050	4107 6506 98	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 25	1	Tee	
1 100	4107 6525 28	2	Bushing	
1 110	4107 6525 32	2	Nipple	
1 120	4107 6514 79	2	Clamp	
1 130	0211 1964 98	4	Screw	
1 140	4107 6506 97	2	Bracket	
1 150	0147 1325 03	4	Screw	
1 160	0301 2335 00	4	Washer	
1 170	0333 2225 00	4	Spring washer	
1 180	4107 6525 73	2	Ball valve	
1 190	4107 6511 53	2	Flexible	
2 010	4107 6525 34	2	Nipple	
2 020	4107 6525 46	2	Elbow	
2 030	4107 6525 32	2	Nipple	
2 040	4107 6514 79	2	Clamp	
2 050	0211 1258 03	4	Screw	
2 060	0291 1108 00	4	Lock nut	
2 070	0301 2321 00	4	Washer	
2 080	4107 6507 19	2	Bracket	
2 090	0147 1327 03	4	Screw	
2 100	0301 2335 00	4	Washer	
2 110	0333 2225 00	4	Spring washer	
2 120	4107 6525 47	2	Tee	
2 130	4107 6525 48	4	Bushing	
2 140	4107 6525 49	2	Nipple	
2 150	4107 6511 51	2	Flexible	
2 160	4107 6525 50	2	Nipple	
2 170	4107 6512 14	4	Air Filter	
2 180	4107 6505 35	4	Manifold	
2 190	4107 6507 18	4	Gasket	
2 200	0211 1959 22	16	Screw	
2 210	0333 2219 00	16	Spring washer	
2 220	4107 6511 71	2	Filter	
2 230	4107 6515 78	2	Connector	
2 240	4107 6512 77	4	Tube	
2 250	4107 6510 04	2	Connector	
2 260	4107 6515 80	2	Tee	

 7

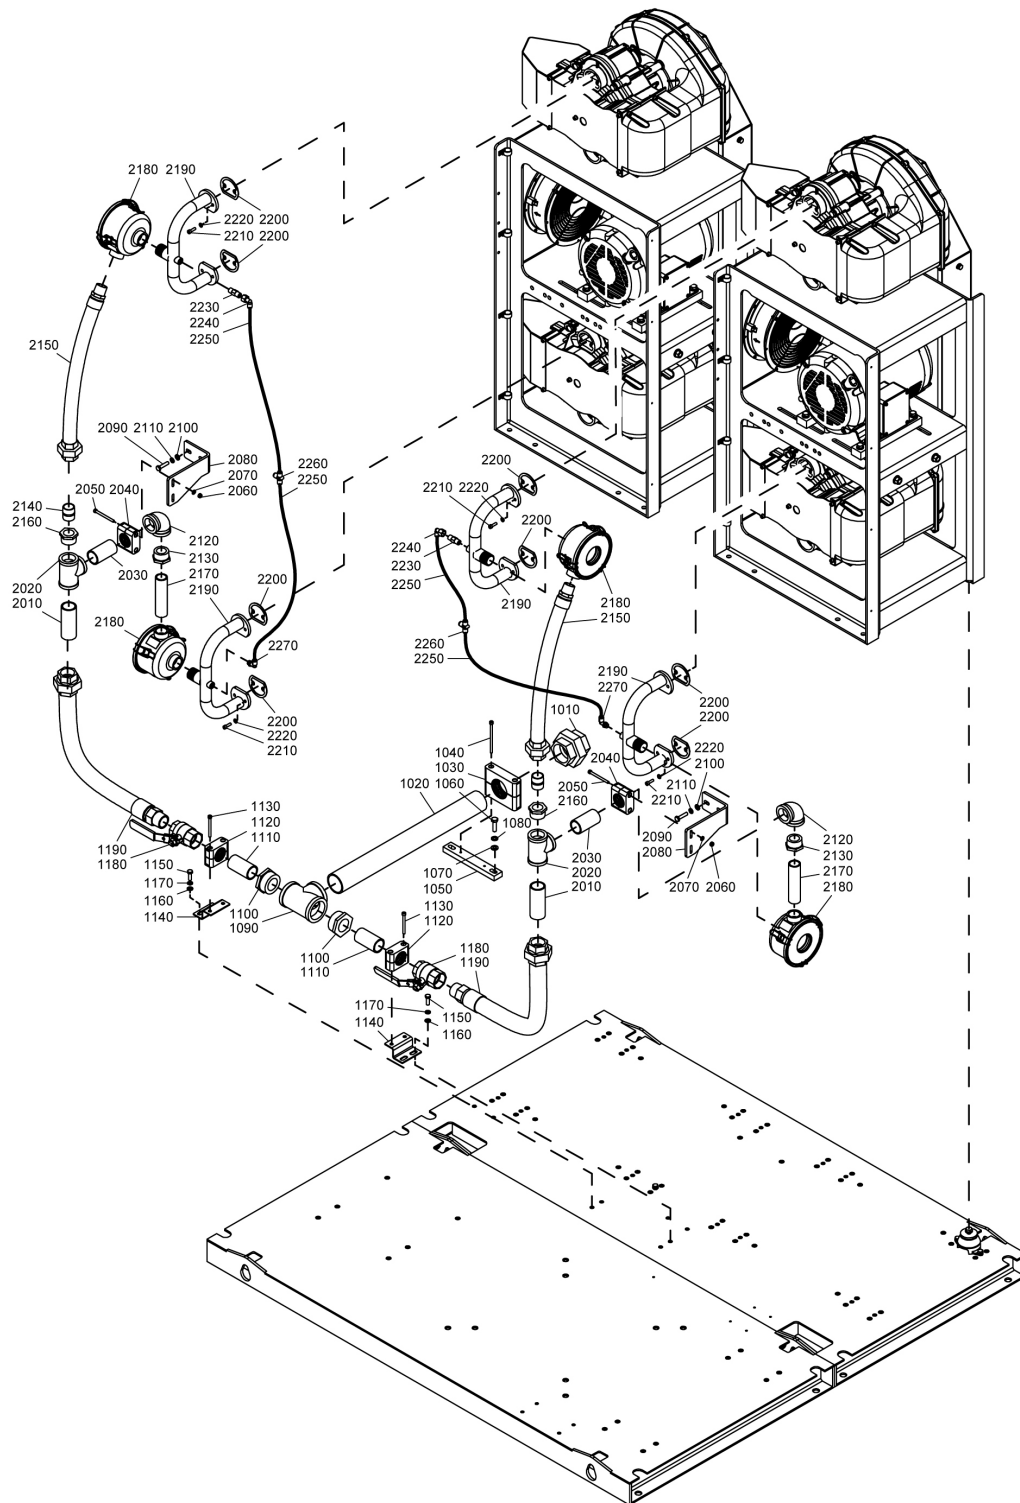


4107 8525 18-01

Air inlet piping DX 15hp

7

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 24	1	Union	
1 020	4107 6525 29	1	Nipple	
1 030	4107 6513 10	1	Clamp	
1 040	0211 1264 03	2	Screw	
1 050	4107 6506 98	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 25	1	Tee	
1 100	4107 6525 28	2	Bushing	
1 110	4107 6525 32	2	Nipple	
1 120	4107 6514 79	2	Clamp	
1 130	0211 1964 98	4	Screw	
1 140	4107 6506 97	2	Bracket	
1 150	0147 1325 03	4	Screw	
1 160	0301 2335 00	4	Washer	
1 170	0333 2225 00	4	Spring washer	
1 180	4107 6525 73	2	Ball valve	
1 190	4107 6511 53	2	Flexible	
2 010	4107 6525 34	2	Nipple	
2 020	4107 6525 47	2	Tee	
2 030	4107 6525 32	2	Nipple	
2 040	4107 6514 79	2	Clamp	
2 050	0211 1258 03	4	Screw	
2 060	0291 1108 00	4	Lock nut	
2 070	0301 2321 00	4	Washer	
2 080	4107 6506 96	2	Bracket	
2 090	0147 1327 03	4	Screw	
2 100	0301 2335 00	4	Washer	
2 110	0333 2225 00	4	Spring washer	
2 120	4107 6525 46	2	Elbow	
2 130	4107 6525 48	2	Bushing	
2 140	4107 6525 49	2	Nipple	
2 150	4107 6511 52	2	Flexible	
2 160	4107 6525 48	2	Bushing	
2 170	4107 6525 53	2	Nipple	
2 180	4107 6512 14	4	Air Filter	
2 190	4107 6505 48	4	Manifold	
2 200	4107 6507 17	8	Gasket	
2 210	0211 1959 22	16	Screw	
2 220	0333 2219 00	16	Spring washer	
2 230	4107 6511 71	2	Filter	
2 240	4107 6512 85	2	Elbow coupling	
2 250	4107 6512 77	4	Tube	
2 260	4107 6515 80	2	Tee	
2 270	4107 6510 08	2	Elbow coupling	

 8

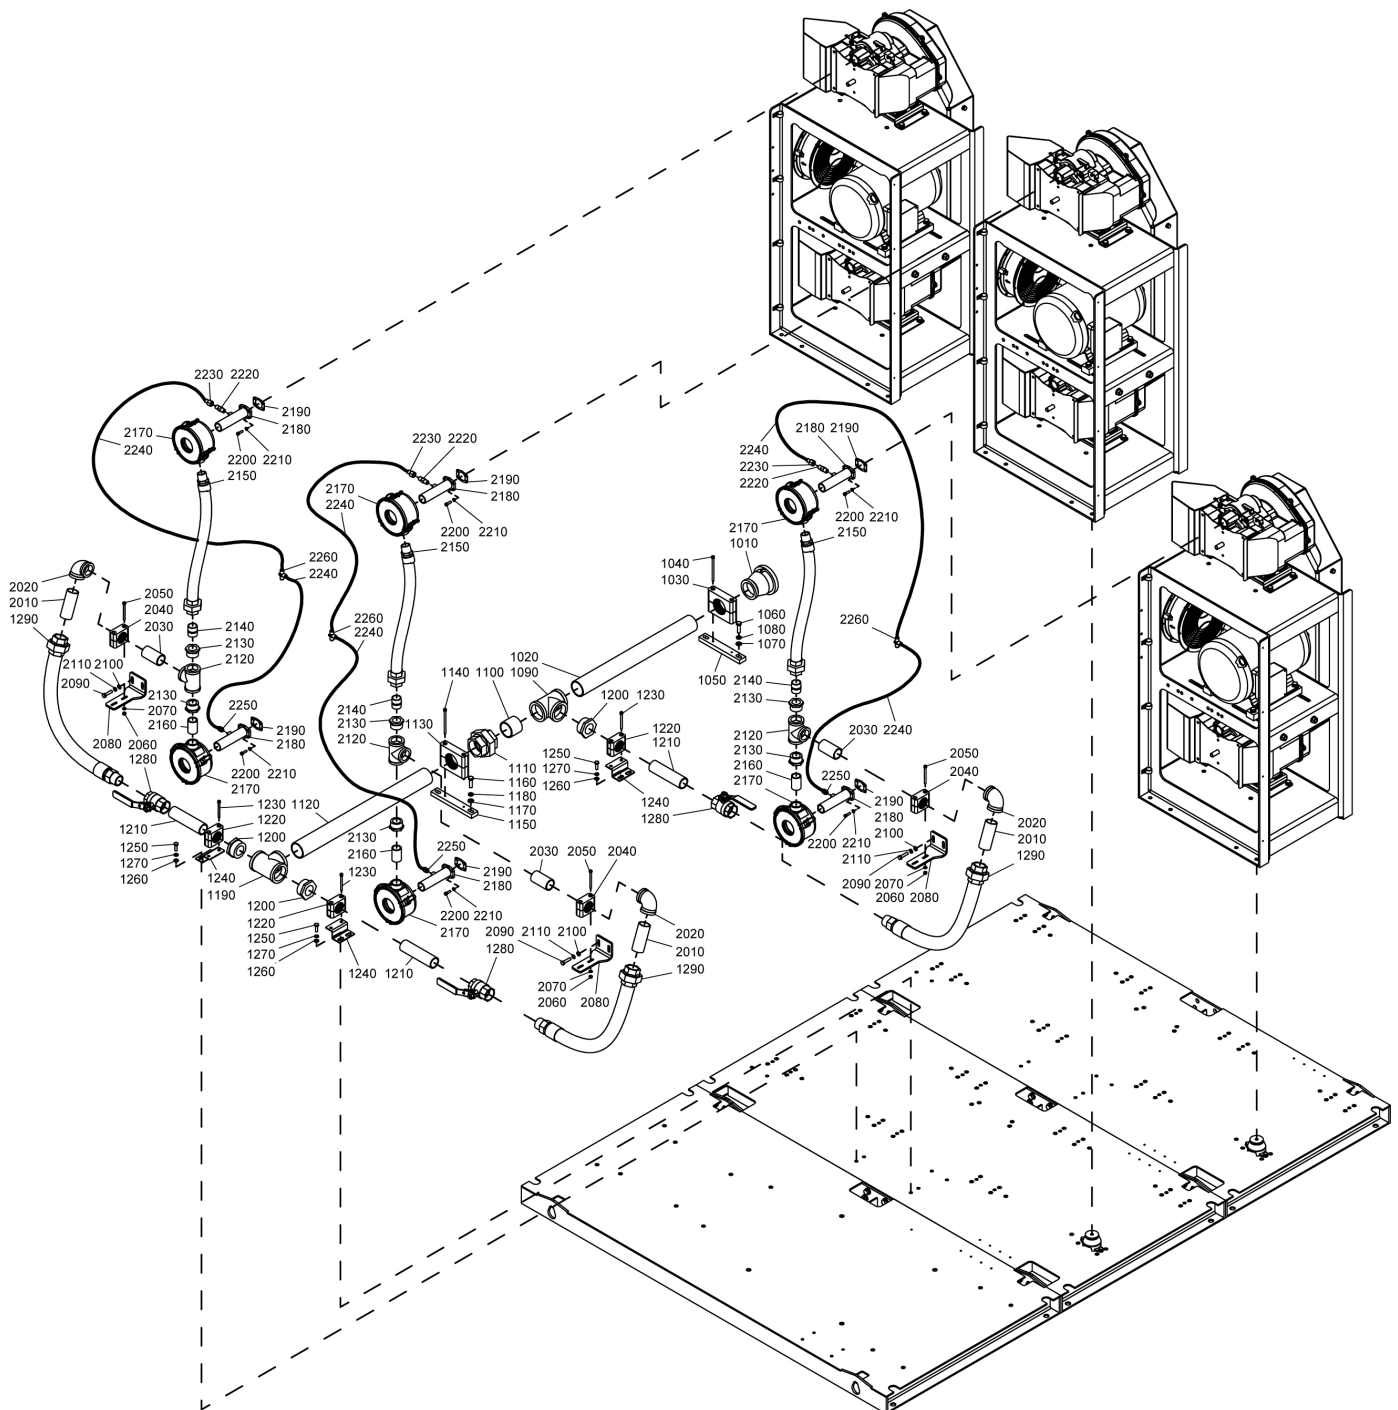


4107 8525 19-01

Air inlet piping TX 10hp

8

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 27	1	Reducer	
1 020	4107 6525 29	1	Nipple	
1 030	4107 6513 10	1	Clamp	
1 040	0211 1264 03	2	Screw	
1 050	4107 6506 98	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 25	1	Tee	
1 100	4107 6525 31	1	Nipple	
1 110	4107 6525 24	1	Union	
1 120	4107 6525 30	1	Nipple	
1 130	4107 6513 10	1	Clamp	
1 140	0211 1264 03	2	Screw	
1 150	4107 6506 98	1	Spacer	
1 160	0147 1364 03	2	Screw	
1 170	0301 2344 00	2	Washer	
1 180	0333 2230 00	2	Spring washer	
1 190	4107 6525 25	1	Tee	
1 200	4107 6525 28	3	Bushing	
1 210	4107 6527 42	3	Nipple	
1 220	4107 6514 79	3	Clamp	
1 230	0211 1964 98	6	Screw	
1 240	4107 6506 97	3	Bracket	
1 250	0147 1325 03	6	Screw	
1 260	0301 2335 00	6	Washer	
1 270	0333 2225 00	6	Spring washer	
1 280	4107 6525 73	3	Ball valve	
1 290	4107 6511 53	3	Flexible	
2 010	4107 6525 34	3	Nipple	
2 020	4107 6525 46	3	Elbow	
2 030	4107 6525 32	3	Nipple	
2 040	4107 6514 79	3	Clamp	
2 050	0211 1258 03	6	Screw	
2 060	0291 1108 00	6	Lock nut	
2 070	0301 2321 00	6	Washer	
2 080	4107 6507 19	3	Bracket	
2 090	0147 1327 03	6	Screw	
2 100	0301 2335 00	6	Washer	
2 110	0333 2225 00	6	Spring washer	
2 120	4107 6525 47	3	Tee	
2 130	4107 6525 48	6	Bushing	
2 140	4107 6525 49	3	Nipple	
2 150	4107 6511 51	3	Flexible	
2 160	4107 6525 50	3	Nipple	
2 170	4107 6512 14	6	Air Filter	
2 180	4107 6505 35	6	Manifold	
2 190	4107 6507 18	6	Gasket	

 8

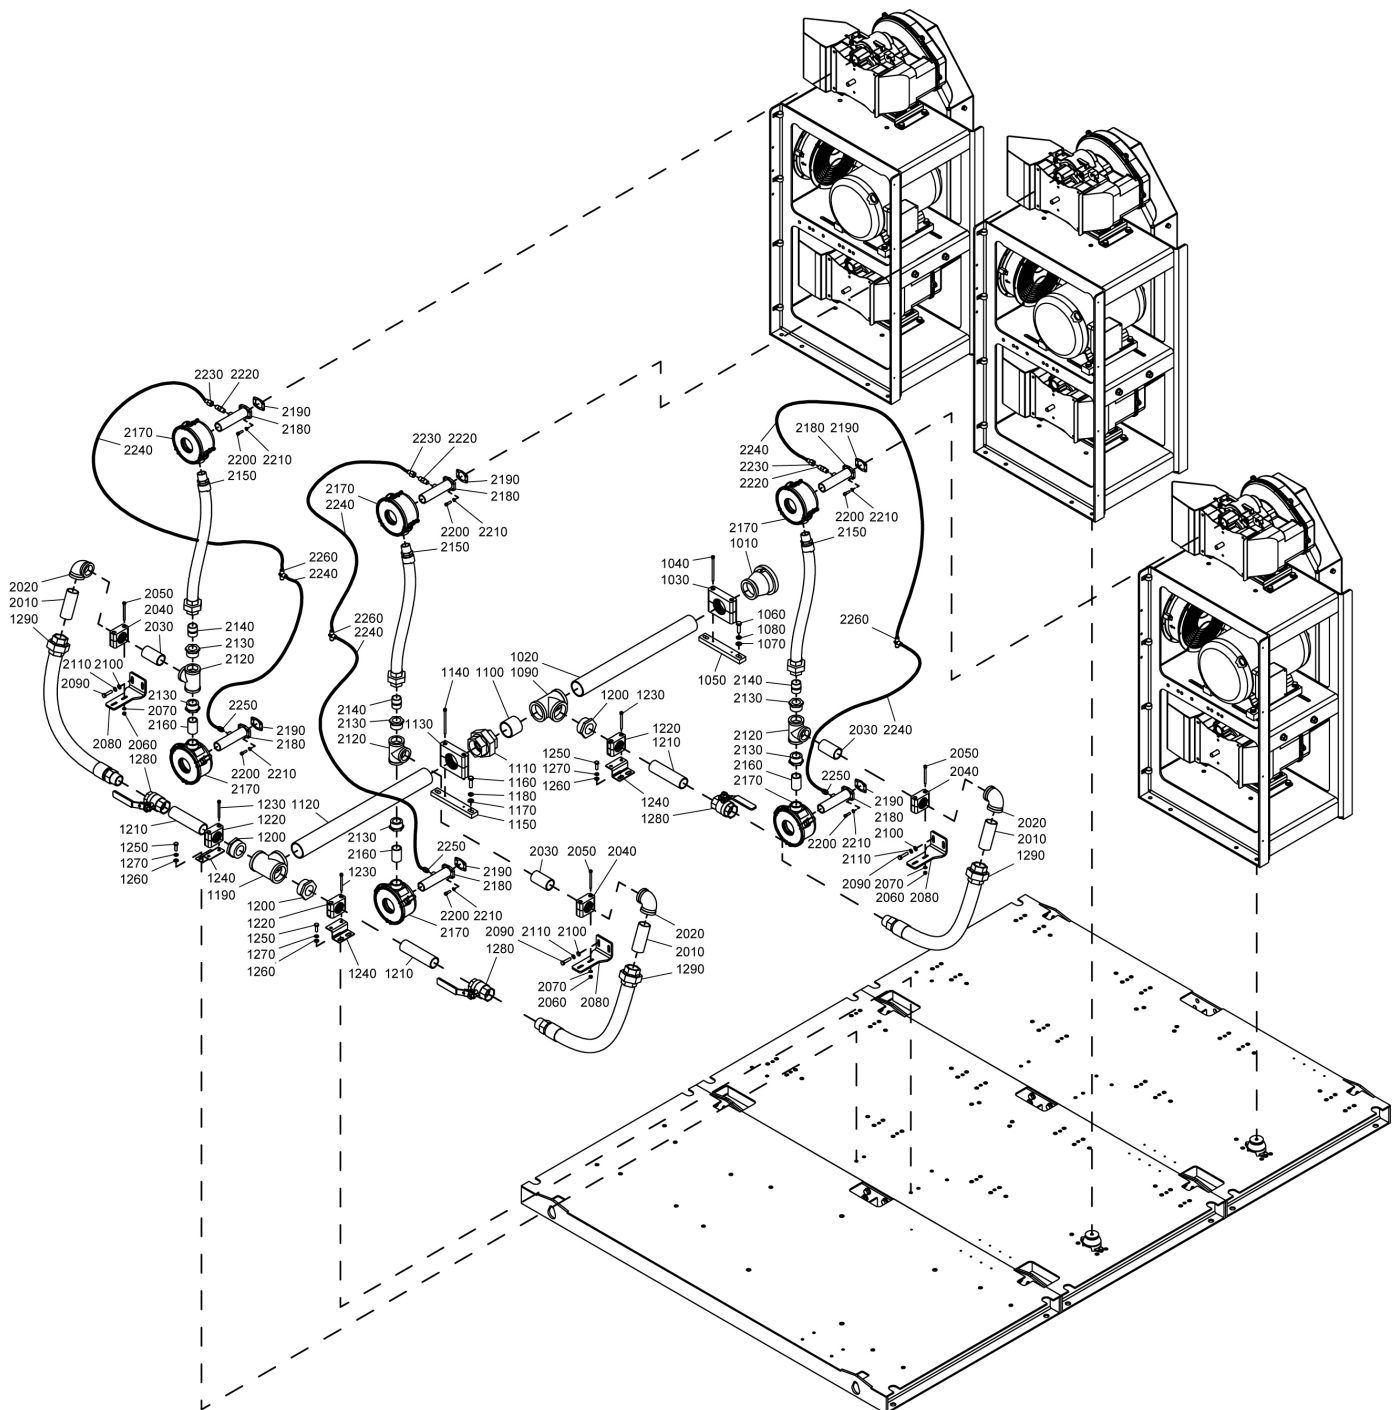


4107 8525 19-01

Air inlet piping TX 10hp

8

Ref.No.	Part Number	Qty	Name	Remarks
2 200	0211 1959 22	24	Screw	
2 210	0333 2219 00	24	Spring washer	
2 220	4107 6511 71	3	Filter	
2 230	4107 6515 78	3	Connector	
2 240	4107 6512 77	6	Tube	
2 250	4107 6510 04	3	Connector	
2 260	4107 6515 80	3	Tee	

 9

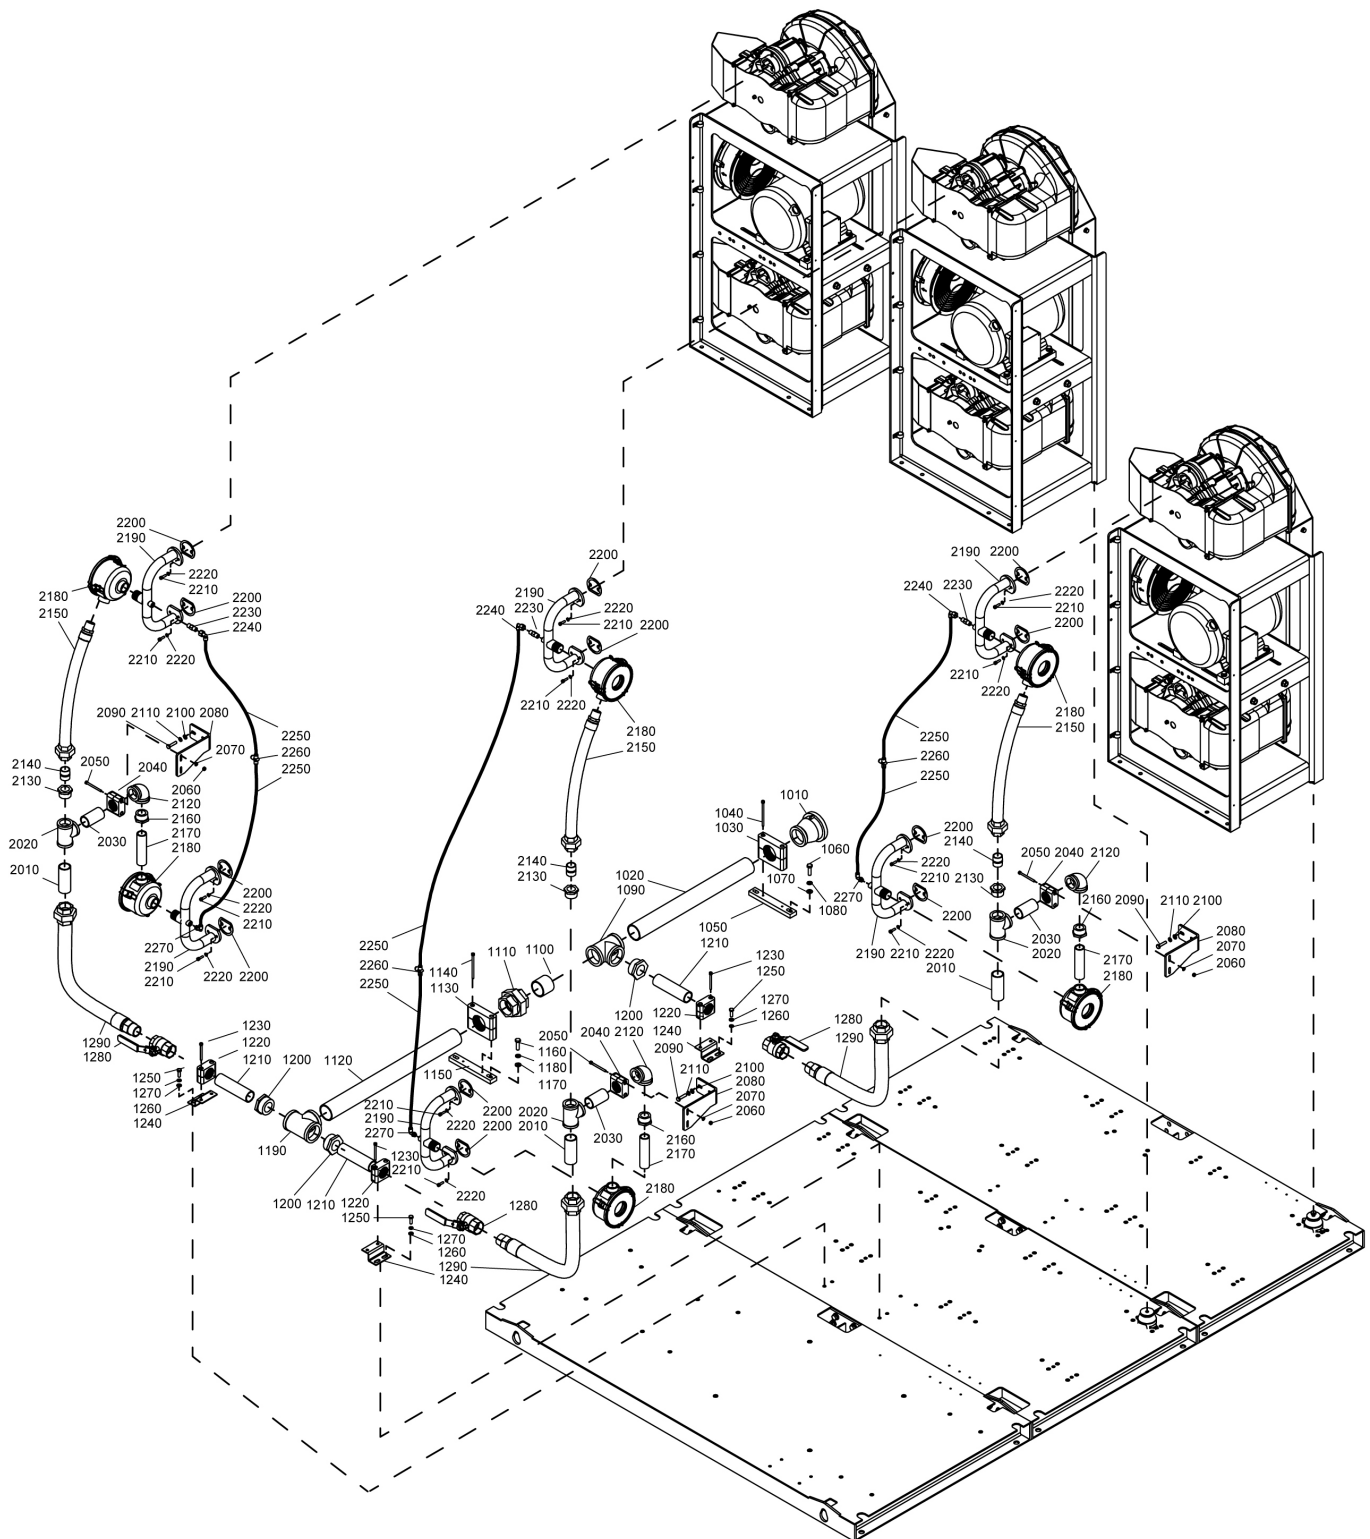


4107 8525 20-01

Air inlet piping TX 15hp

9

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 27	1	Reducer	
1 020	4107 6525 29	1	Nipple	
1 030	4107 6513 10	1	Clamp	
1 040	0211 1264 03	2	Screw	
1 050	4107 6506 98	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 25	1	Tee	
1 100	4107 6525 31	1	Nipple	
1 110	4107 6525 24	1	Union	
1 120	4107 6525 30	1	Nipple	
1 130	4107 6513 10	1	Clamp	
1 140	0211 1264 03	2	Screw	
1 150	4107 6506 98	1	Spacer	
1 160	0147 1364 03	2	Screw	
1 170	0301 2344 00	2	Washer	
1 180	0333 2230 00	2	Spring washer	
1 190	4107 6525 25	1	Tee	
1 200	4107 6525 28	3	Bushing	
1 210	4107 6527 42	3	Nipple	
1 220	4107 6514 79	3	Clamp	
1 230	0211 1964 98	6	Screw	
1 240	4107 6506 97	3	Bracket	
1 250	0147 1325 03	6	Screw	
1 260	0301 2335 00	6	Washer	
1 270	0333 2225 00	6	Spring washer	
1 280	4107 6525 73	3	Ball valve	
1 290	4107 6511 53	3	Flexible	
2 010	4107 6525 34	3	Nipple	
2 020	4107 6525 47	3	Tee	
2 030	4107 6525 32	3	Nipple	
2 040	4107 6514 79	3	Clamp	
2 050	0211 1258 03	6	Screw	
2 060	0291 1108 00	6	Lock nut	
2 070	0301 2321 00	6	Washer	
2 080	4107 6506 96	3	Bracket	
2 090	0147 1327 03	6	Screw	
2 100	0301 2335 00	6	Washer	
2 110	0333 2225 00	6	Spring washer	
2 120	4107 6525 46	3	Elbow	
2 130	4107 6525 48	3	Bushing	
2 140	4107 6525 49	3	Nipple	
2 150	4107 6511 52	3	Flexible	
2 160	4107 6525 48	3	Bushing	
2 170	4107 6525 53	3	Nipple	
2 180	4107 6512 14	6	Air Filter	
2 190	4107 6505 48	6	Manifold	

 


Air inlet piping TX 15hp

9

Ref.No.	Part Number	Qty	Name	Remarks
2 200	4107 6507 17	12	Gasket	
2 210	0211 1959 22	24	Screw	
2 220	0333 2219 00	24	Spring washer	
2 230	4107 6511 71	3	Filter	
2 240	4107 6512 85	3	Elbow coupling	
2 250	4107 6512 77	6	Tube	
2 260	4107 6515 80	3	Tee	
2 270	4107 6510 08	3	Elbow coupling	

 10

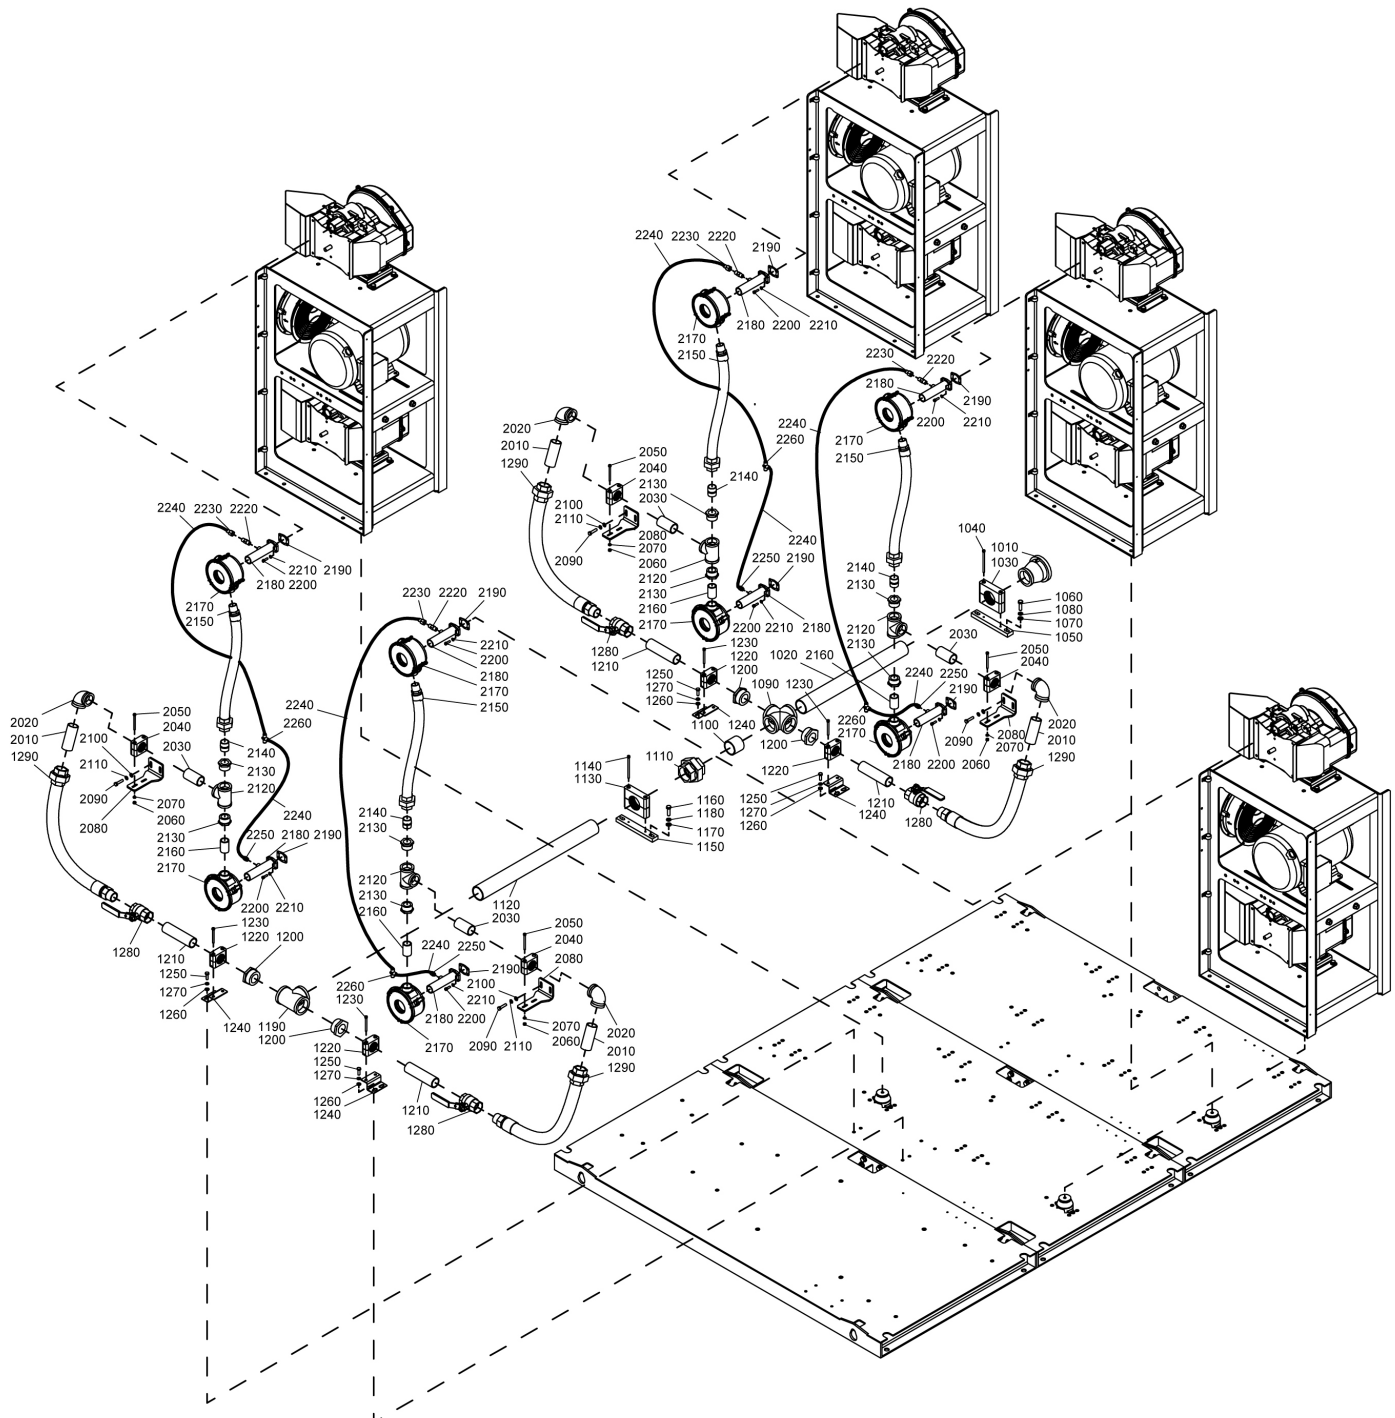


4107 8525 21-01

Air inlet piping QX 10hp

10

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 27	1	Reducer	
1 020	4107 6525 29	1	Nipple	
1 030	4107 6513 10	1	Clamp	
1 040	0211 1264 03	2	Screw	
1 050	4107 6506 98	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 26	1	Cross	
1 100	4107 6525 31	1	Nipple	
1 110	4107 6525 24	1	Union	
1 120	4107 6525 30	1	Nipple	
1 130	4107 6513 10	1	Clamp	
1 140	0211 1264 03	2	Screw	
1 150	4107 6506 98	1	Spacer	
1 160	0147 1364 03	2	Screw	
1 170	0301 2344 00	2	Washer	
1 180	0333 2230 00	2	Spring washer	
1 190	4107 6525 25	1	Tee	
1 200	4107 6525 28	4	Bushing	
1 210	4107 6527 42	4	Nipple	
1 220	4107 6514 79	4	Clamp	
1 230	0211 1964 98	8	Screw	
1 240	4107 6506 97	4	Bracket	
1 250	0147 1325 03	8	Screw	
1 260	0301 2335 00	8	Washer	
1 270	0333 2225 00	8	Spring washer	
1 280	4107 6525 73	4	Ball valve	
1 290	4107 6511 53	4	Flexible	
2 010	4107 6525 34	4	Nipple	
2 020	4107 6525 46	4	Elbow	
2 030	4107 6525 32	4	Nipple	
2 040	4107 6514 79	4	Clamp	
2 050	0211 1258 03	8	Screw	
2 060	0291 1108 00	8	Lock nut	
2 070	0301 2321 00	8	Washer	
2 080	4107 6507 19	4	Bracket	
2 090	0147 1327 03	8	Screw	
2 100	0301 2335 00	8	Washer	
2 110	0333 2225 00	8	Spring washer	
2 120	4107 6525 47	4	Tee	
2 130	4107 6525 48	8	Bushing	
2 140	4107 6525 49	4	Nipple	
2 150	4107 6511 51	4	Flexible	
2 160	4107 6525 50	4	Nipple	
2 170	4107 6512 14	8	Air Filter	
2 180	4107 6505 35	8	Manifold	
2 190	4107 6507 18	8	Gasket	

 10

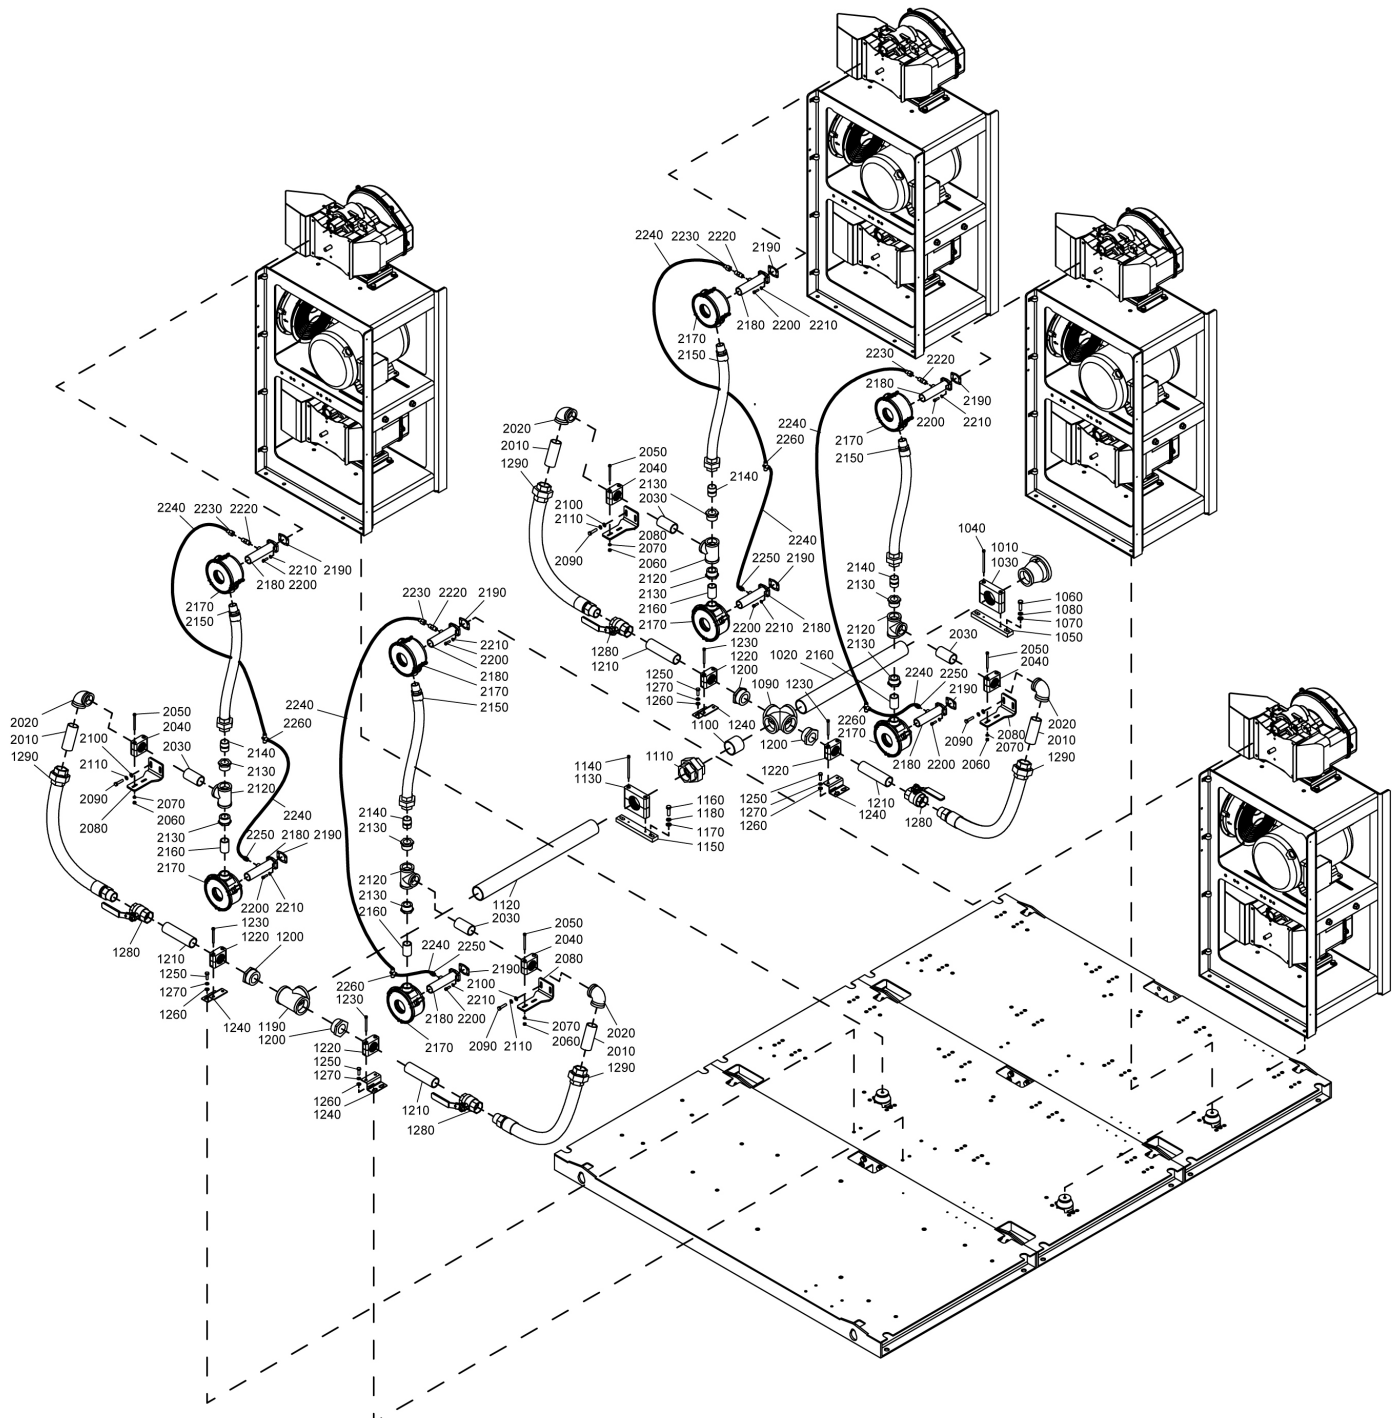

4107 8525 21-01

Air inlet piping QX 10hp

10

Ref.No.	Part Number	Qty	Name	Remarks
2 200	0211 1959 22	32	Screw	
2 210	0333 2219 00	32	Spring washer	
2 220	4107 6511 71	4	Filter	
2 230	4107 6515 78	4	Connector	
2 240	4107 6512 77	8	Tube	
2 250	4107 6510 04	4	Connector	
2 260	4107 6515 80	4	Tee	


4107 9018 16.01

Air inlet piping QX 15hp

11

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 27	1	Reducer	
1 020	4107 6525 29	1	Nipple	
1 030	4107 6513 10	1	Clamp	
1 040	0211 1264 03	2	Screw	
1 050	4107 6506 98	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 26	1	Cross	
1 100	4107 6525 31	1	Nipple	
1 110	4107 6525 24	1	Union	
1 120	4107 6525 30	1	Nipple	
1 130	4107 6513 10	1	Clamp	
1 140	0211 1264 03	2	Screw	
1 150	4107 6506 98	1	Spacer	
1 160	0147 1364 03	2	Screw	
1 170	0301 2344 00	2	Washer	
1 180	0333 2230 00	2	Spring washer	
1 190	4107 6525 25	1	Tee	
1 200	4107 6525 28	4	Bushing	
1 210	4107 6527 42	4	Nipple	
1 220	4107 6514 79	4	Clamp	
1 230	0211 1964 98	8	Screw	
1 240	4107 6506 97	4	Bracket	
1 250	0147 1325 03	8	Screw	
1 260	0301 2335 00	8	Washer	
1 270	0333 2225 00	8	Spring washer	
1 280	4107 6525 73	4	Ball valve	
1 290	4107 6511 53	4	Flexible	
2 010	4107 6525 34	4	Nipple	
2 020	4107 6525 47	4	Tee	
2 030	4107 6525 32	4	Nipple	
2 040	4107 6514 79	4	Clamp	
2 050	0211 1258 03	8	Screw	
2 060	0291 1108 00	8	Lock nut	
2 070	0301 2321 00	8	Washer	
2 080	4107 6506 96	4	Bracket	
2 090	0147 1327 03	8	Screw	
2 100	0301 2335 00	8	Washer	
2 110	0333 2225 00	8	Spring washer	
2 120	4107 6525 46	4	Elbow	
2 130	4107 6525 48	4	Bushing	
2 140	4107 6525 49	4	Nipple	
2 150	4107 6511 52	4	Flexible	
2 160	4107 6525 48	4	Bushing	
2 170	4107 6525 53	4	Nipple	
2 180	4107 6512 14	8	Air Filter	
2 190	4107 6505 48	8	Manifold	

 11

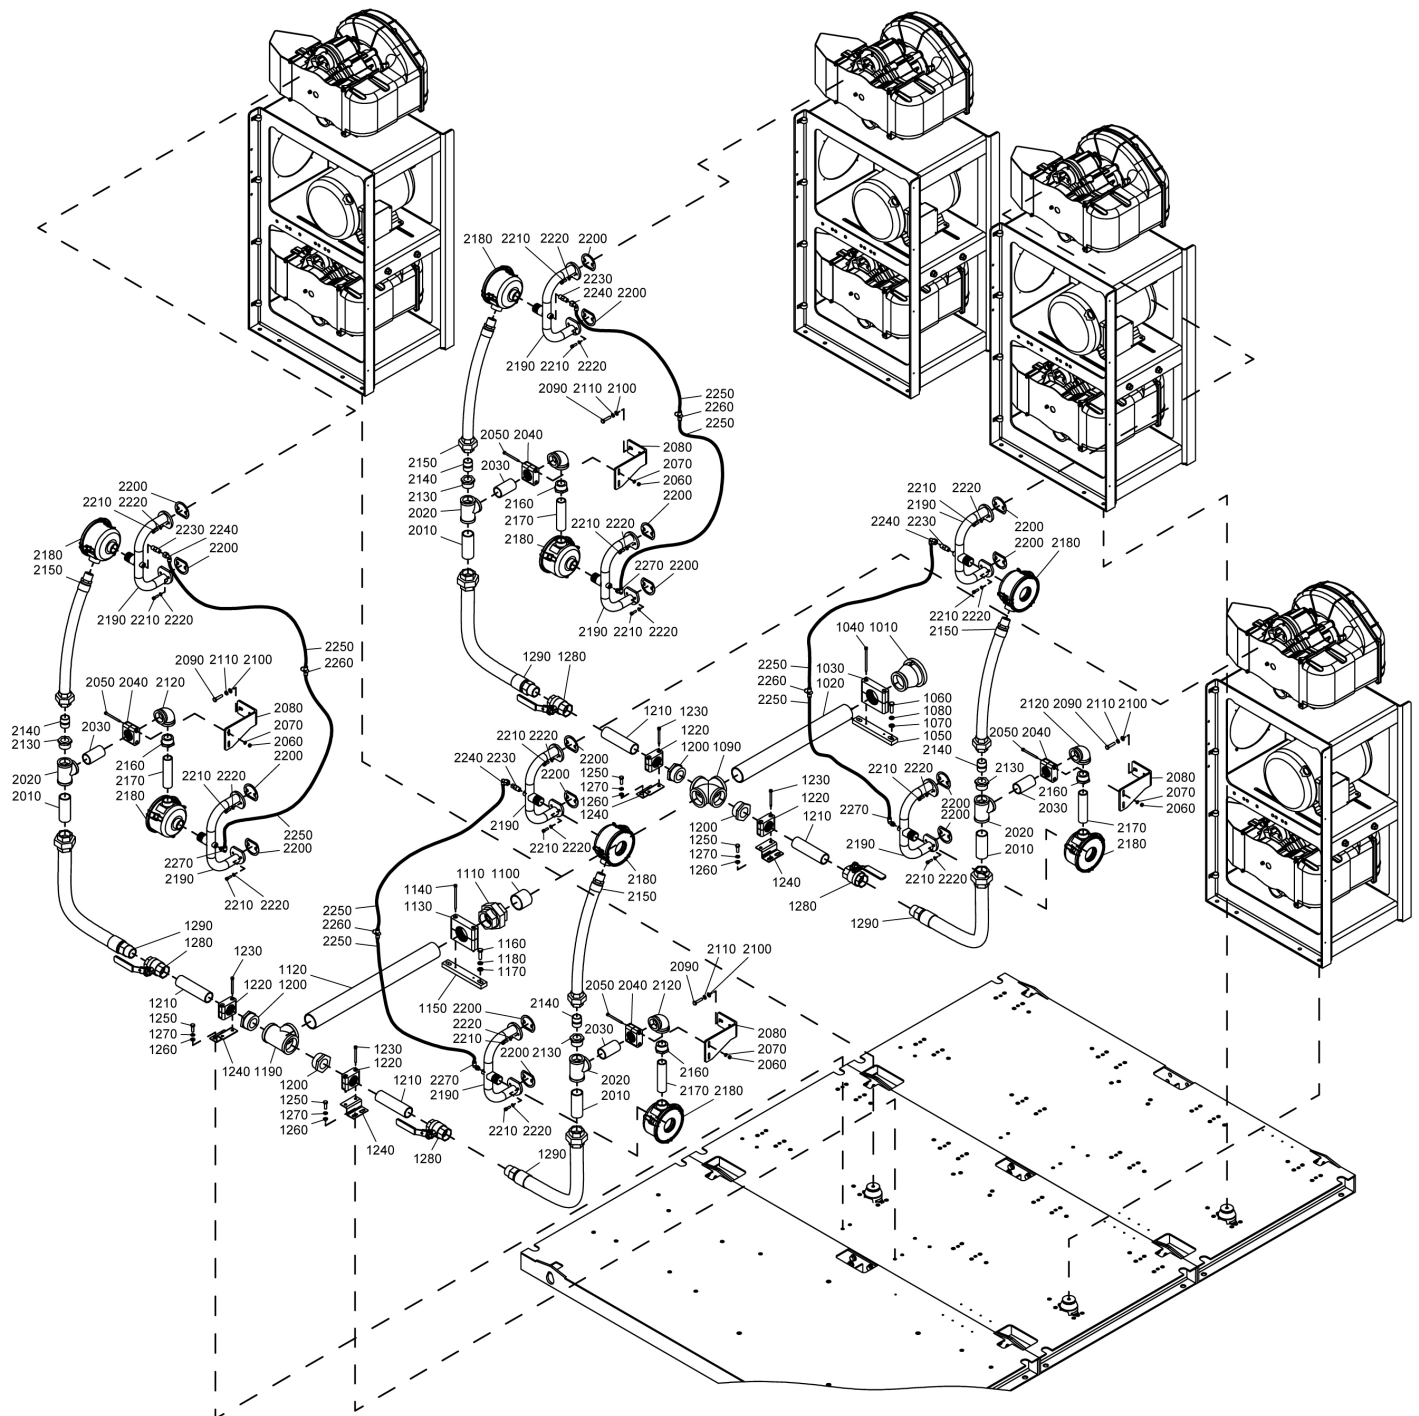


4107 8525 22-01

Air inlet piping QX 15hp

11

Ref.No.	Part Number	Qty	Name	Remarks
2 200	4107 6507 17	16	Gasket	
2 210	0211 1959 22	32	Screw	
2 220	0333 2219 00	32	Spring washer	
2 230	4107 6511 71	4	Filter	
2 240	4107 6512 85	4	Elbow coupling	
2 250	4107 6512 77	8	Tube	
2 260	4107 6515 80	4	Tee	
2 270	4107 6510 08	4	Elbow coupling	

 12

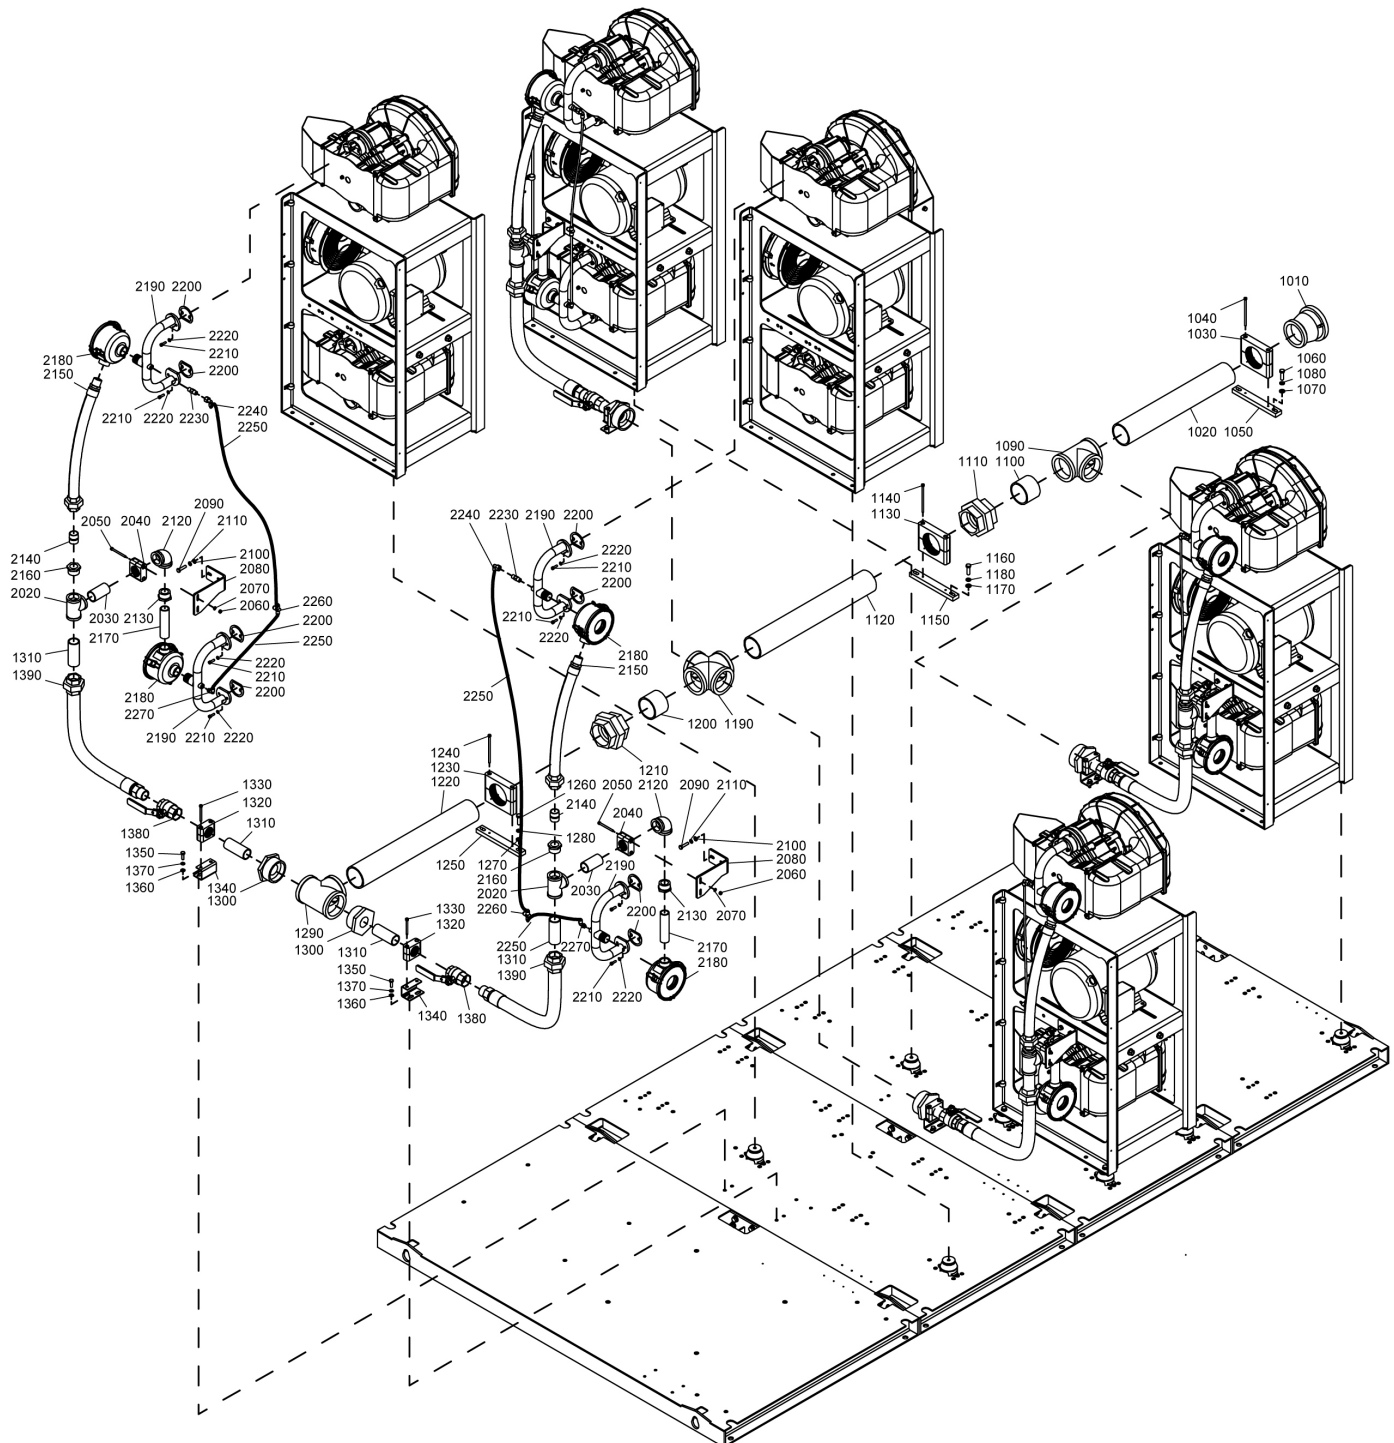


4107 8525 23-01

Air inlet piping PX 15hp

12

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 35	1	Reducer	
1 020	4107 6525 40	1	Nipple	
1 030	4107 6501 46	1	Clamp	
1 040	0211 1965 54	2	Screw	
1 050	4107 6523 99	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 36	1	Tee	
1 100	4107 6525 42	1	Nipple	
1 110	4107 6525 37	1	Union	
1 120	4107 6525 41	1	Nipple	
1 130	4107 6501 46	1	Clamp	
1 140	0211 1965 54	2	Screw	
1 150	4107 6523 99	1	Spacer	
1 160	0147 1364 03	2	Screw	
1 170	0301 2344 00	2	Washer	
1 180	0333 2230 00	2	Spring washer	
1 190	4107 6525 38	1	Cross	
1 200	4107 6525 42	1	Nipple	
1 210	4107 6525 37	1	Union	
1 220	4107 6525 41	1	Nipple	
1 230	4107 6501 46	1	Clamp	
1 240	0211 1965 54	2	Screw	
1 250	4107 6523 99	1	Spacer	
1 260	0147 1364 03	2	Screw	
1 270	0301 2344 00	2	Washer	
1 280	0333 2230 00	2	Spring washer	
1 290	4107 6525 36	1	Tee	
1 300	4107 6525 39	5	Bushing	
1 310	4107 6525 34	5	Nipple	
1 320	4107 6514 79	5	Clamp	
1 330	0211 1964 98	10	Screw	
1 340	4107 6524 00	5	Bracket	
1 350	0147 1325 03	10	Screw	
1 360	0301 2335 00	10	Washer	
1 370	0333 2225 00	10	Spring washer	
1 380	4107 6525 73	5	Ball valve	
1 390	4107 6511 53	5	Flexible	
2 010	4107 6525 34	5	Nipple	
2 020	4107 6525 47	5	Tee	
2 030	4107 6525 32	5	Nipple	
2 040	4107 6514 79	5	Clamp	
2 050	0211 1258 03	10	Screw	
2 060	0291 1108 00	10	Lock nut	
2 070	0301 2321 00	10	Washer	
2 080	4107 6506 96	5	Bracket	
2 090	0147 1327 03	10	Screw	

 12

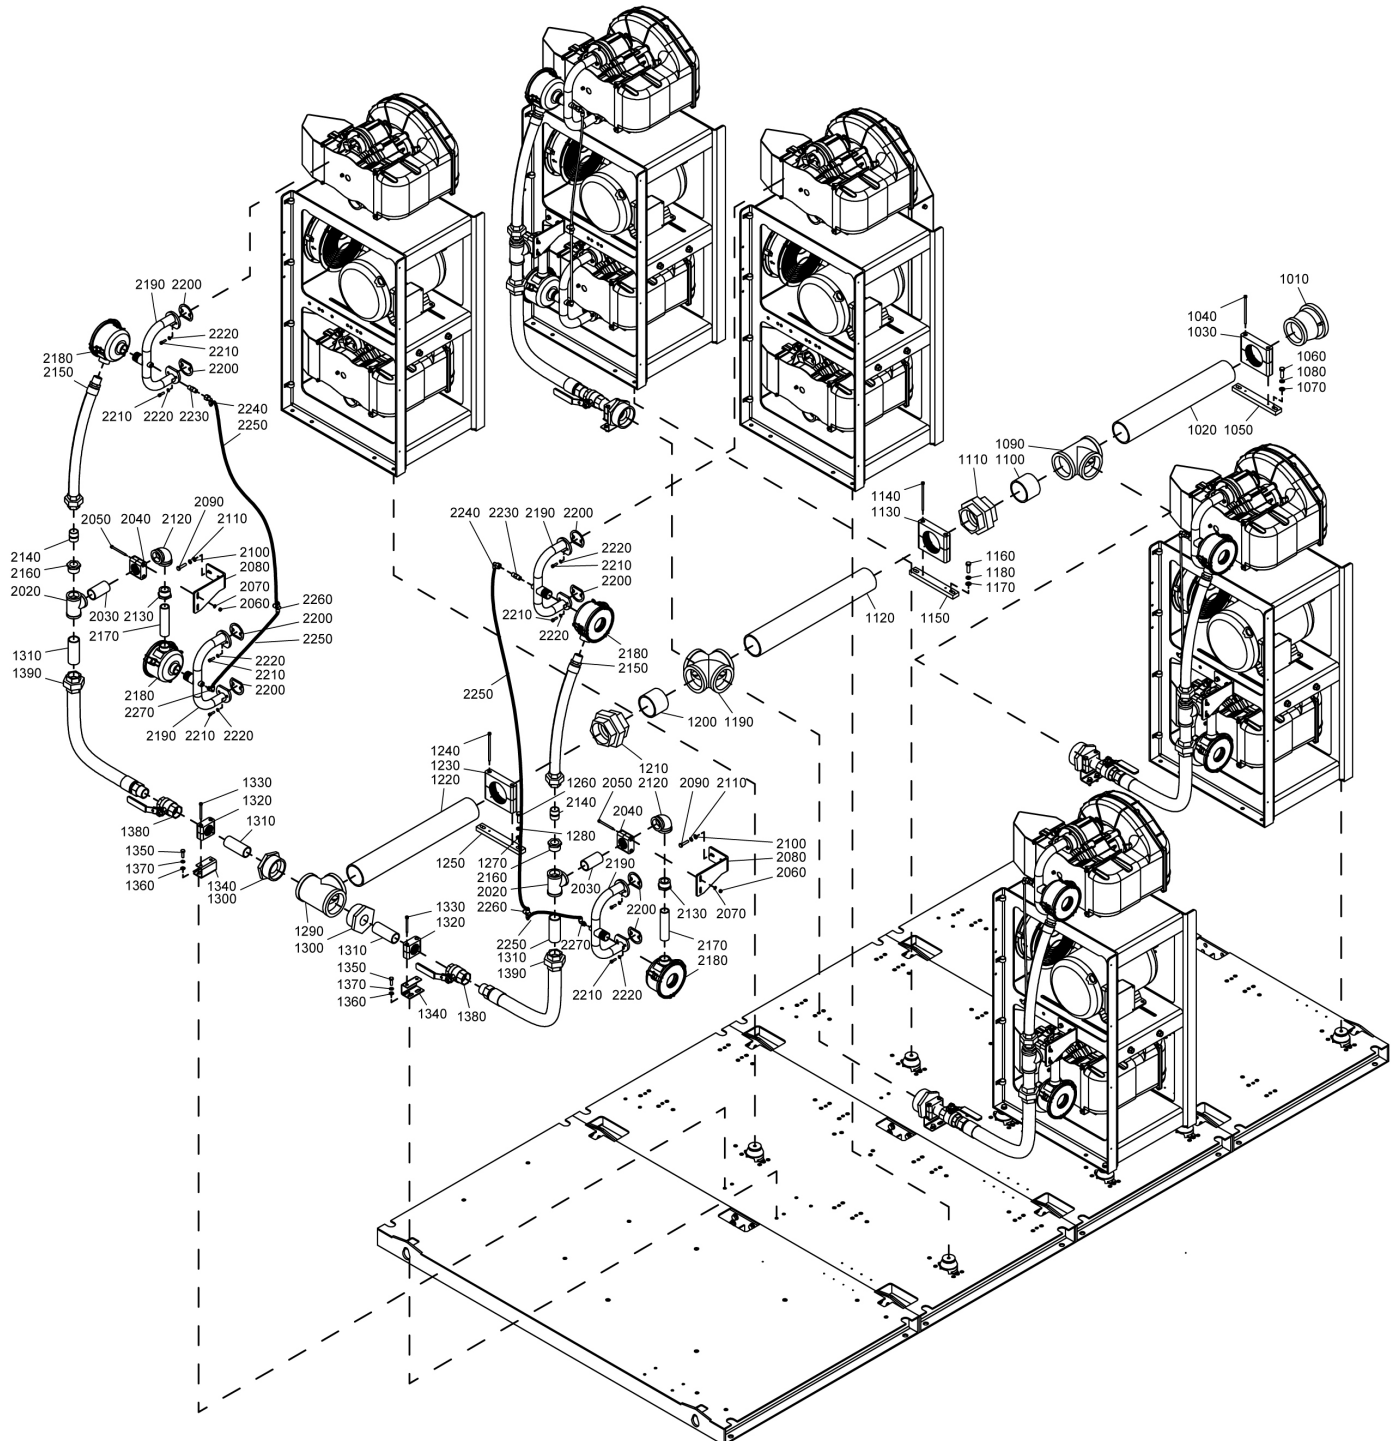


4107 8525 23-01

Air inlet piping PX 15hp

12

Ref.No.	Part Number	Qty	Name	Remarks
2 100	0301 2335 00	10	Washer	
2 110	0333 2225 00	10	Spring washer	
2 120	4107 6525 46	5	Elbow	
2 130	4107 6525 48	5	Bushing	
2 140	4107 6525 49	5	Nipple	
2 150	4107 6511 52	5	Flexible	
2 160	4107 6525 48	5	Bushing	
2 170	4107 6525 53	5	Nipple	
2 180	4107 6512 14	10	Air Filter	
2 190	4107 6505 48	10	Manifold	
2 200	4107 6507 17	20	Gasket	
2 210	0211 1959 22	40	Screw	
2 220	0333 2219 00	40	Spring washer	
2 230	4107 6511 71	5	Filter	
2 240	4107 6512 85	5	Elbow coupling	
2 250	4107 6512 77	10	Tube	
2 260	4107 6515 80	5	Tee	
2 270	4107 6510 08	5	Elbow coupling	

 13

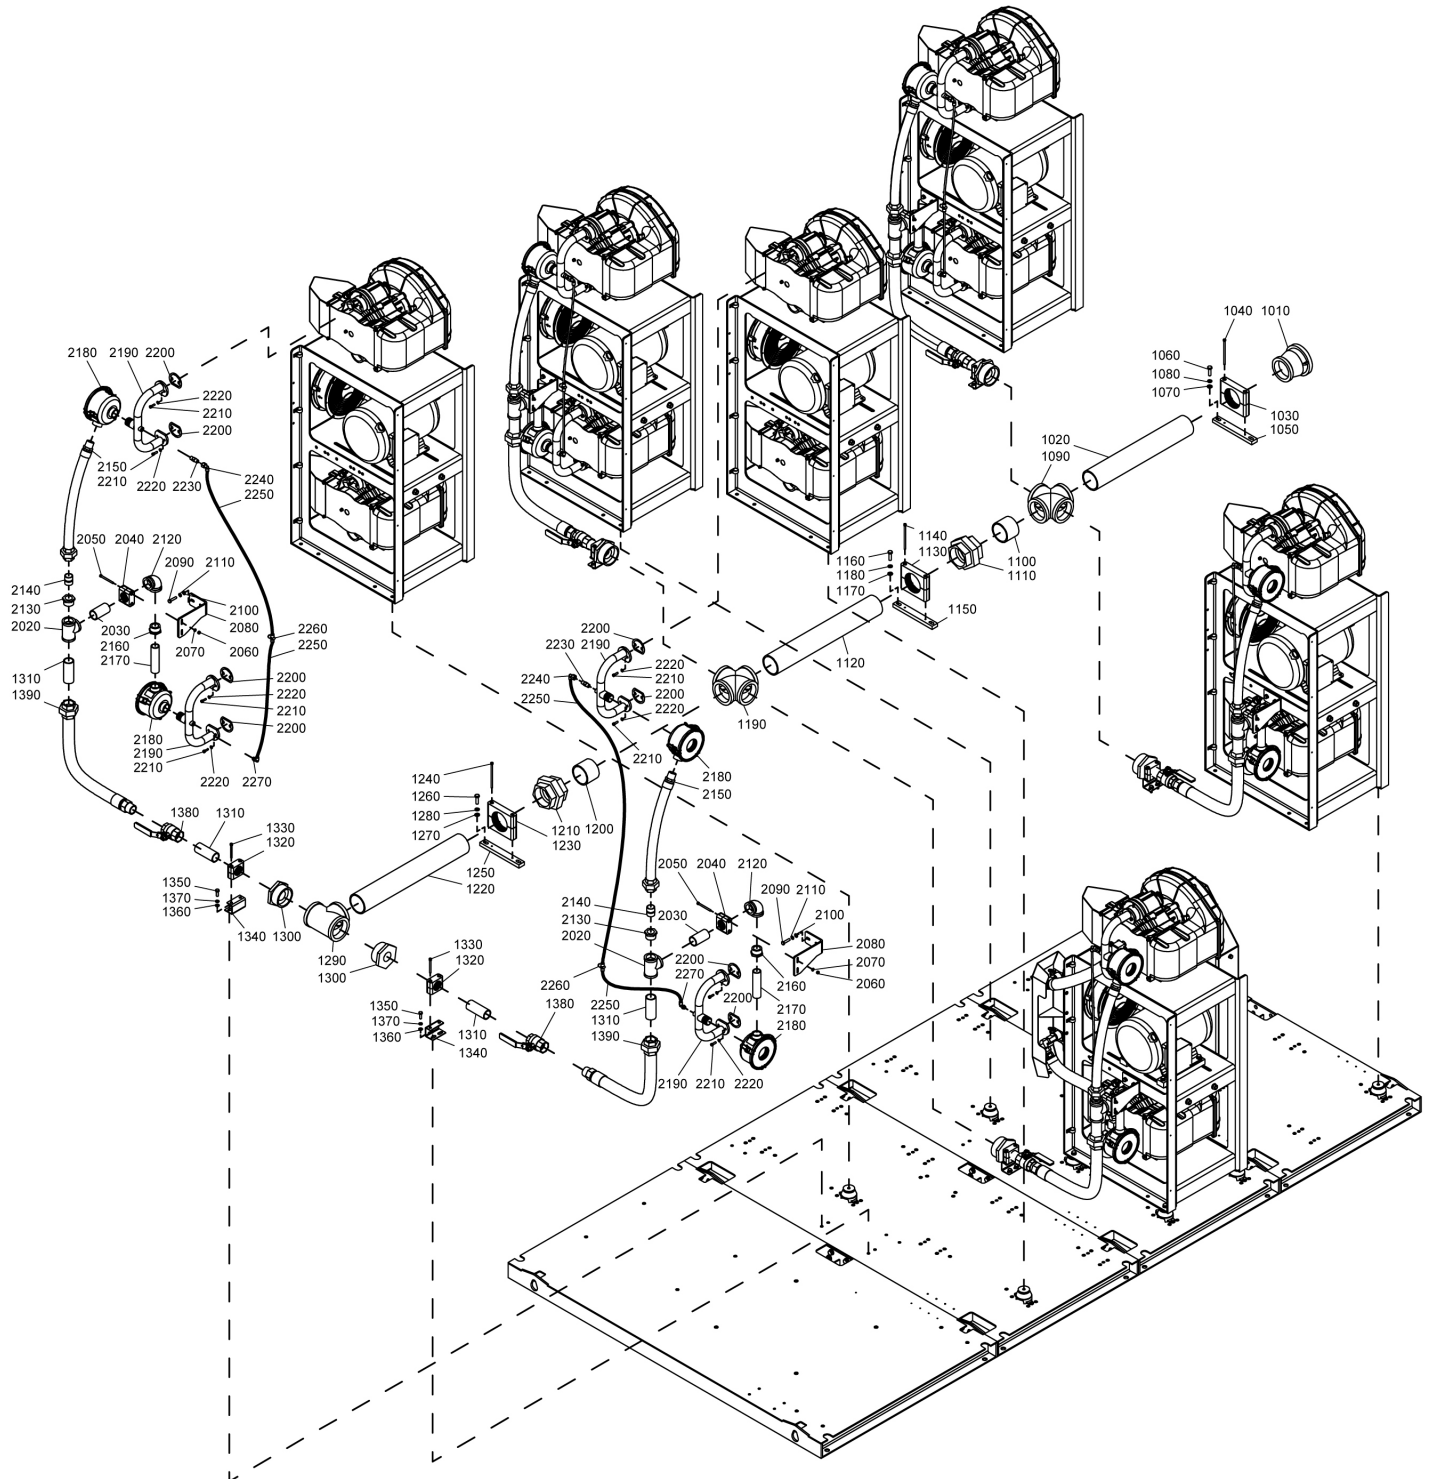


4107 8525 24-01

Air inlet piping HX 15hp

13

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 35	1	Reducer	
1 020	4107 6525 40	1	Nipple	
1 030	4107 6501 46	1	Clamp	
1 040	0211 1965 54	2	Screw	
1 050	4107 6523 99	1	Spacer	
1 060	0147 1364 03	2	Screw	
1 070	0301 2344 00	2	Washer	
1 080	0333 2230 00	2	Spring washer	
1 090	4107 6525 38	1	Cross	
1 100	4107 6525 42	1	Nipple	
1 110	4107 6525 37	1	Union	
1 120	4107 6525 41	1	Nipple	
1 130	4107 6501 46	1	Clamp	
1 140	0211 1965 54	2	Screw	
1 150	4107 6523 99	1	Spacer	
1 160	0147 1364 03	2	Screw	
1 170	0301 2344 00	2	Washer	
1 180	0333 2230 00	2	Spring washer	
1 190	4107 6525 38	1	Cross	
1 200	4107 6525 42	1	Nipple	
1 210	4107 6525 37	1	Union	
1 220	4107 6525 41	1	Nipple	
1 230	4107 6501 46	1	Clamp	
1 240	0211 1965 54	2	Screw	
1 250	4107 6523 99	1	Spacer	
1 260	0147 1364 03	2	Screw	
1 270	0301 2344 00	2	Washer	
1 280	0333 2230 00	2	Spring washer	
1 290	4107 6525 36	1	Tee	
1 300	4107 6525 39	6	Bushing	
1 310	4107 6525 34	6	Nipple	
1 320	4107 6514 79	6	Clamp	
1 330	0211 1964 98	12	Screw	
1 340	4107 6524 00	6	Bracket	
1 350	0147 1325 03	12	Screw	
1 360	0301 2335 00	12	Washer	
1 370	0333 2225 00	12	Spring washer	
1 380	4107 6525 73	6	Ball valve	
1 390	4107 6511 53	6	Flexible	
2 010	4107 6525 34	6	Nipple	
2 020	4107 6525 47	6	Tee	
2 030	4107 6525 32	6	Nipple	
2 040	4107 6514 79	6	Clamp	
2 050	0211 1258 03	12	Screw	
2 060	0291 1108 00	12	Lock nut	
2 070	0301 2321 00	12	Washer	
2 080	4107 6506 96	6	Bracket	
2 090	0147 1327 03	12	Screw	

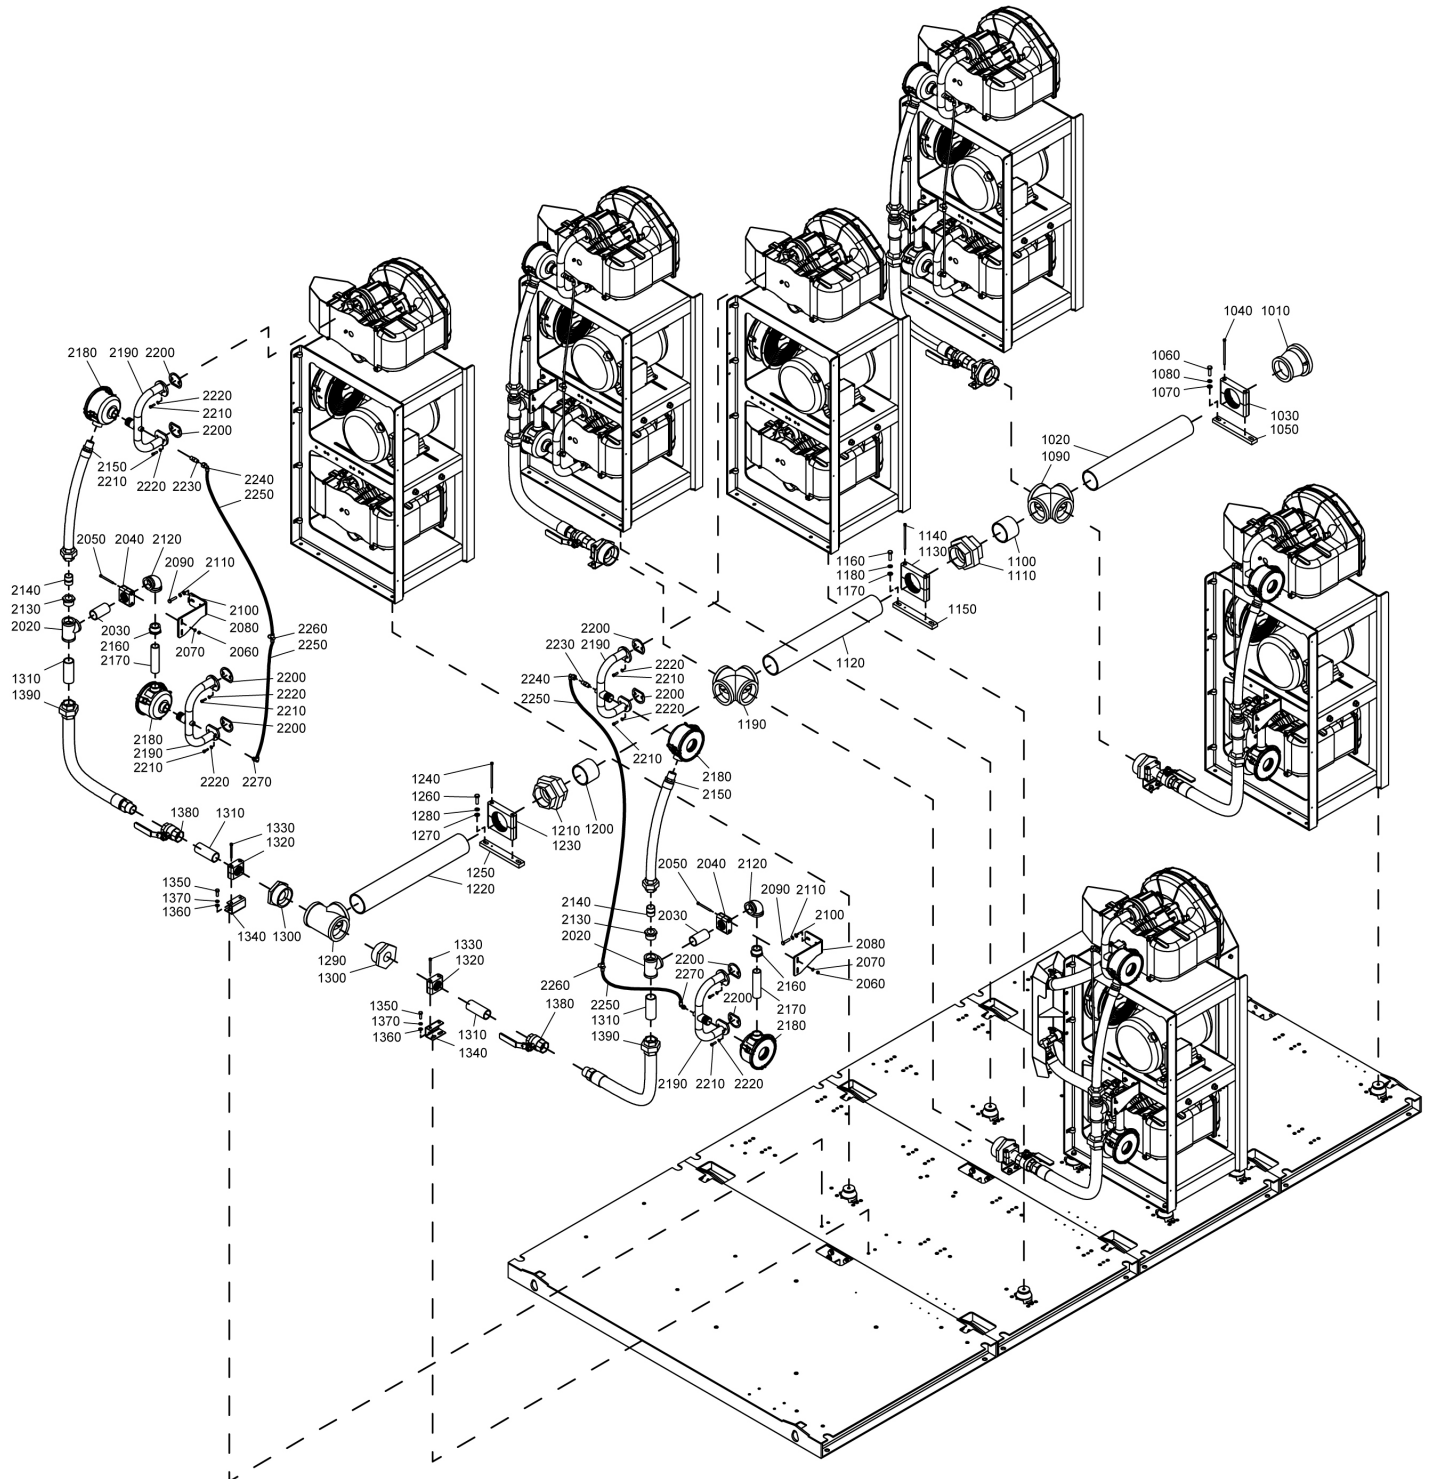 


Air inlet piping HX 15hp

13

Ref.No.	Part Number	Qty	Name	Remarks
2 100	0301 2335 00	12	Washer	
2 110	0333 2225 00	12	Spring washer	
2 120	4107 6525 46	6	Elbow	
2 130	4107 6525 48	6	Bushing	
2 140	4107 6525 49	6	Nipple	
2 150	4107 6511 52	6	Flexible	
2 160	4107 6525 48	6	Bushing	
2 170	4107 6525 53	6	Nipple	
2 180	4107 6512 14	12	Air Filter	
2 190	4107 6505 48	12	Manifold	
2 200	4107 6507 17	24	Gasket	
2 210	0211 1959 22	48	Screw	
2 220	0333 2219 00	48	Spring washer	
2 230	4107 6511 71	6	Filter	
2 240	4107 6512 85	6	Elbow coupling	
2 250	4107 6512 77	12	Tube	
2 260	4107 6515 80	6	Tee	
2 270	4107 6510 08	6	Elbow coupling	

 14

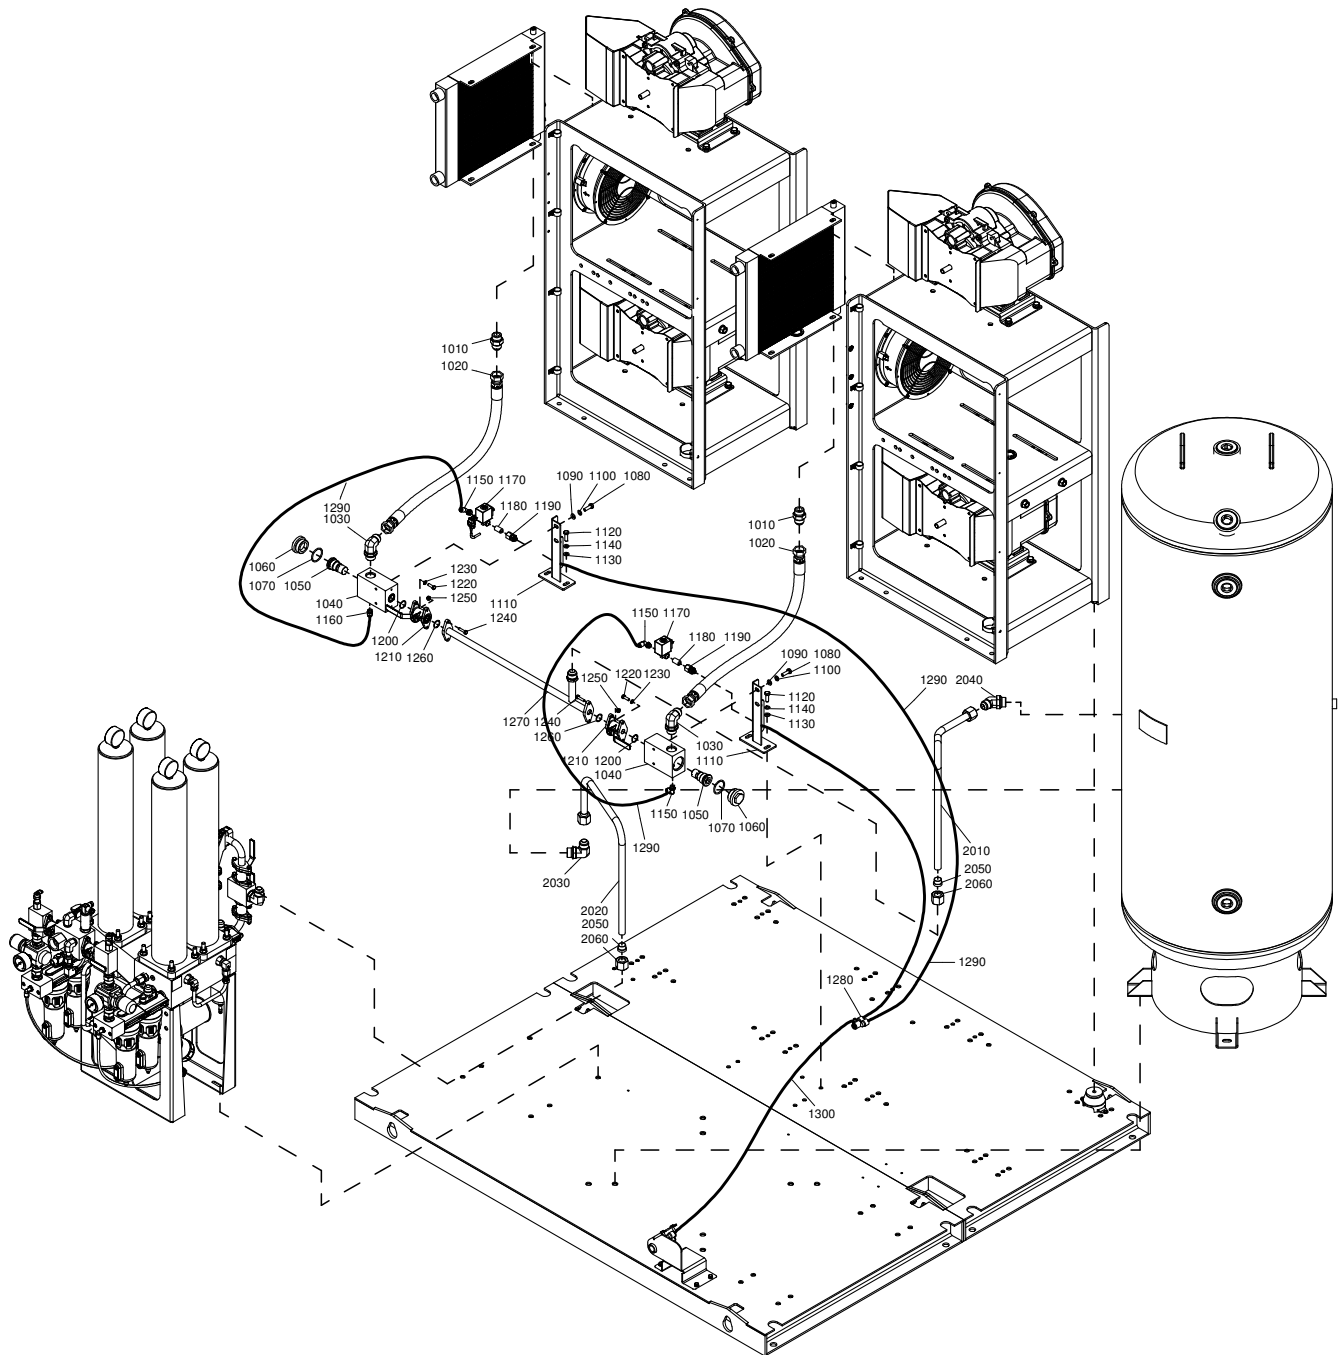


4107 8558 23-01

Discharge piping DX 10-15hp

14

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 90	2	Adaptor	
1 020	4107 6516 67	2	Flexible	
1 030	4107 6525 88	2	Elbow	
1 040	4107 6506 94	2	Block	
1 050	4107 6507 05	2	Check valve	
1 060	4107 6505 90	2	Plug	
1 070	4107 6512 71	2	O-ring	
1 080	0147 1325 03	4	Screw	
1 090	0301 2335 00	4	Washer	
1 100	0333 2225 00	4	Spring washer	
1 110	4107 6506 95	2	Bracket	
1 120	0147 1325 03	4	Screw	
1 130	0301 2335 00	4	Washer	
1 140	0333 2225 00	4	Spring washer	
1 150	4107 6510 08	3	Elbow coupling	
1 160	4107 6510 04	1	Connector	
1 170	4107 6511 70	2	Solenoid valve	
1 180	4107 6519 12	2	Nipple	
1 190	4107 6525 91	2	Connector	
1 200	4107 6510 11	2	O-ring	
1 210	4107 6505 94	2	Valve	
1 220	0147 1247 03	4	Screw	
1 230	0333 2219 00	4	Spring washer	
1 240	0147 1249 03	4	Screw	
1 250	0291 1108 00	4	Lock nut	
1 260	4107 6510 11	2	O-ring	
1 270	4107 6506 99	1	Pipe	
1 280	4107 6517 41	1	Connector	
1 290	4107 6512 77	4	Tube	
1 300	4107 6512 78	1	Tube	
2 010	4107 6517 03	1	Pipe	
2 020	4107 6517 04	1	Pipe	
2 030	4107 6525 88	1	Elbow	
2 040	4107 6525 97	1	Elbow	
2 050	4107 6513 26	2	Sleeve	
2 060	4107 6513 34	2	Nut	

 15

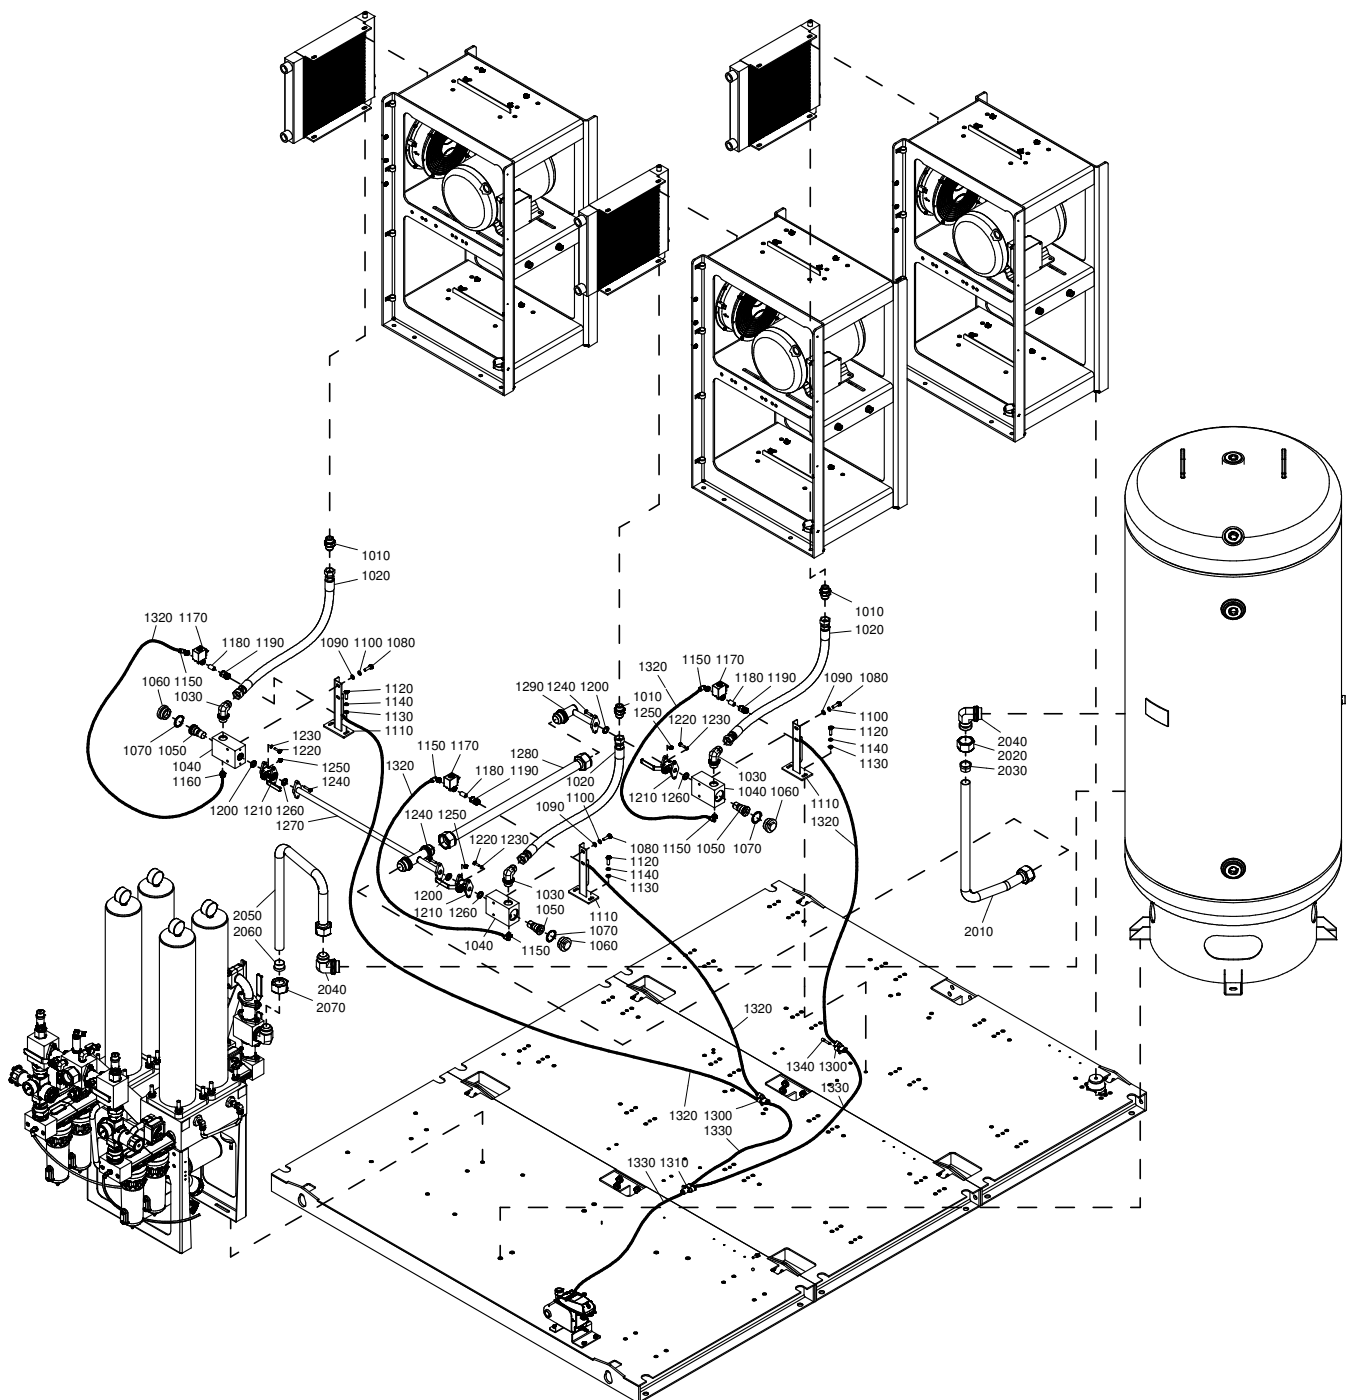


4107 8558 24-01

Discharge piping TX 10-15hp

15

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 90	3	Adaptor	
1 020	4107 6516 67	3	Flexible	
1 030	4107 6525 88	3	Elbow	
1 040	4107 6506 94	3	Block	
1 050	4107 6507 05	3	Check valve	
1 060	4107 6505 90	3	Plug	
1 070	4107 6512 71	3	O-ring	
1 080	0147 1325 03	6	Screw	
1 090	0301 2335 00	6	Washer	
1 100	0333 2225 00	6	Spring washer	
1 110	4107 6506 95	3	Bracket	
1 120	0147 1325 03	6	Screw	
1 130	0301 2335 00	6	Washer	
1 140	0333 2225 00	6	Spring washer	
1 150	4107 6510 08	5	Elbow coupling	
1 160	4107 6510 04	1	Connector	
1 170	4107 6511 70	3	Solenoid valve	
1 180	4107 6519 12	3	Nipple	
1 190	4107 6525 91	3	Connector	
1 200	4107 6510 11	3	O-ring	
1 210	4107 6505 94	3	Valve	
1 220	0147 1247 03	6	Screw	
1 230	0333 2219 00	6	Spring washer	
1 240	0147 1249 03	6	Screw	
1 250	0291 1108 00	6	Lock nut	
1 260	4107 6510 11	3	O-ring	
1 270	4107 6515 33	1	Pipe	
1 280	4107 6515 34	1	Pipe	
1 290	4107 6515 36	1	Pipe	
1 300	4107 6517 41	2	Connector	
1 310	4107 6517 42	1	Connector	
1 320	4107 6512 77	6	Tube	
1 330	4107 6512 78	3	Tube	
1 340	4107 6517 80	1	Plug	
2 010	4107 6515 29	1	Pipe	
2 020	4107 6513 37	1	Nut	
2 030	4107 6513 29	1	Sleeve	
2 040	4107 6525 89	2	Elbow	
2 050	4107 6515 31	1	Pipe	
2 060	4107 6513 29	1	Sleeve	
2 070	4107 6513 37	1	Nut	

 16

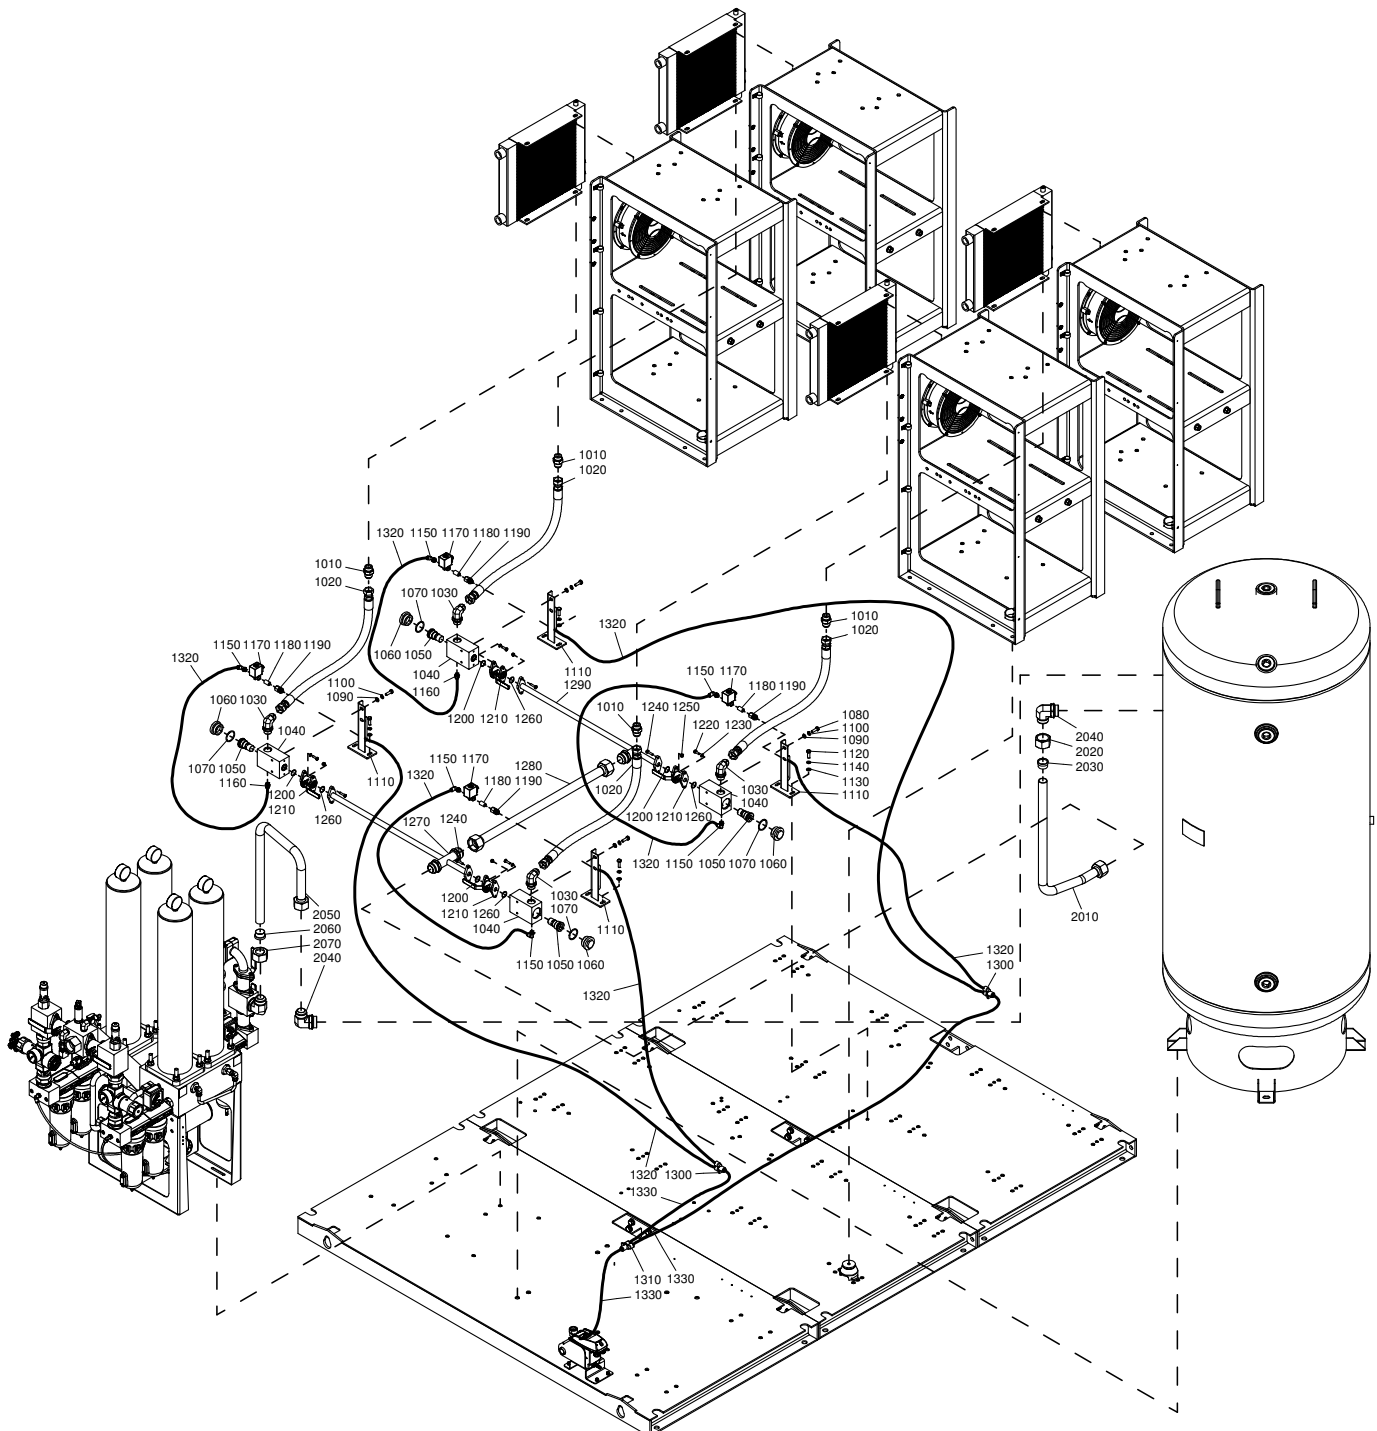


4107 8558 25-01

Discharge piping QX 10-15hp

16

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 90	4	Adaptor	
1 020	4107 6516 67	4	Flexible	
1 030	4107 6525 88	4	Elbow	
1 040	4107 6506 94	4	Block	
1 050	4107 6507 05	4	Check valve	
1 060	4107 6505 90	4	Plug	
1 070	4107 6512 71	4	O-ring	
1 080	0147 1325 03	8	Screw	
1 090	0301 2335 00	8	Washer	
1 100	0333 2225 00	8	Spring washer	
1 110	4107 6506 95	4	Bracket	
1 120	0147 1325 03	8	Screw	
1 130	0301 2335 00	8	Washer	
1 140	0333 2225 00	8	Spring washer	
1 150	4107 6510 08	6	Elbow coupling	
1 160	4107 6510 04	2	Connector	
1 170	4107 6511 70	4	Solenoid valve	
1 180	4107 6519 12	4	Nipple	
1 190	4107 6525 91	4	Connector	
1 200	4107 6510 11	4	O-ring	
1 210	4107 6505 94	4	Valve	
1 220	0147 1247 03	8	Screw	
1 230	0333 2219 00	8	Spring washer	
1 240	0147 1249 03	8	Screw	
1 250	0291 1108 00	8	Lock nut	
1 260	4107 6510 11	4	O-ring	
1 270	4107 6515 33	1	Pipe	
1 280	4107 6515 34	1	Pipe	
1 290	4107 6515 35	1	Pipe	
1 300	4107 6517 41	2	Connector	
1 310	4107 6517 42	1	Connector	
1 320	4107 6512 77	8	Tube	
1 330	4107 6512 78	3	Tube	
2 010	4107 6515 29	1	Pipe	
2 020	4107 6513 37	1	Nut	
2 030	4107 6513 29	1	Sleeve	
2 040	4107 6525 89	2	Elbow	
2 050		1	Pipe	
	4107 6515 31		QX 10hp	
	4107 6515 32		QX 15hp	
2 060	4107 6513 29	1	Sleeve	
2 070	4107 6513 37	1	Nut	

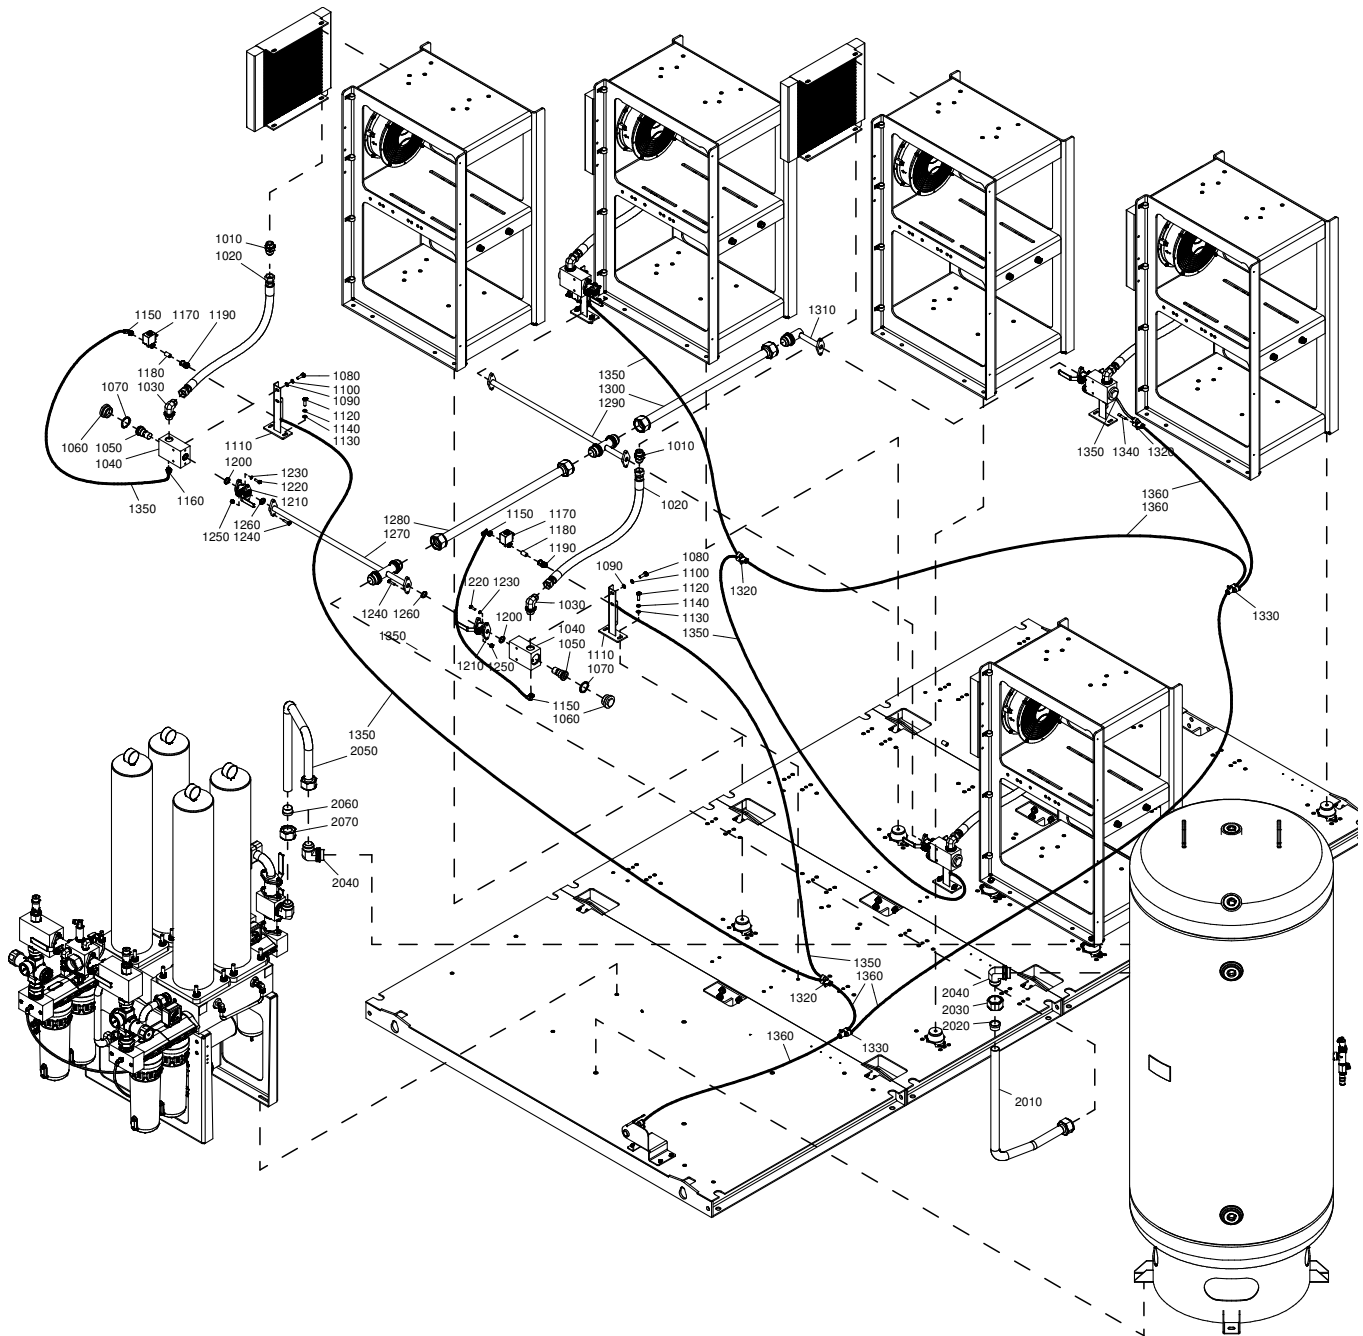 


Discharge piping PX 15hp

17

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 90	5	Adaptor	
1 020	4107 6516 67	5	Flexible	
1 030	4107 6525 88	5	Elbow	
1 040	4107 6506 94	5	Block	
1 050	4107 6507 05	5	Check valve	
1 060	4107 6505 90	5	Plug	
1 070	4107 6512 71	5	O-ring	
1 080	0147 1325 03	10	Screw	
1 090	0301 2335 00	10	Washer	
1 100	0333 2225 00	10	Spring washer	
1 110	4107 6506 95	5	Bracket	
1 120	0147 1325 03	10	Screw	
1 130	0301 2335 00	10	Washer	
1 140	0333 2225 00	10	Spring washer	
1 150	4107 6510 08	8	Elbow coupling	
1 160	4107 6510 04	2	Connector	
1 170	4107 6511 70	5	Solenoid valve	
1 180	4107 6519 12	5	Nipple	
1 190	4107 6525 91	5	Connector	
1 200	4107 6510 11	5	O-ring	
1 210	4107 6505 94	5	Valve	
1 220	0147 1247 03	10	Screw	
1 230	0333 2219 00	10	Spring washer	
1 240	0147 1249 03	10	Screw	
1 250	0291 1108 00	10	Lock nut	
1 260	4107 6510 11	5	O-ring	
1 270	4107 6515 33	1	Pipe	
1 280	4107 6515 34	1	Pipe	
1 290	4107 6515 33	1	Pipe	
1 300	4107 6515 34	1	Pipe	
1 310	4107 6515 36	1	Pipe	
1 320	4107 6517 41	3	Connector	
1 330	4107 6517 42	2	Connector	
1 340	4107 6517 80	1	Plug	
1 350	4107 6512 77	10	Tube	
1 360	4107 6512 78	5	Tube	
2 010	4107 6515 30	1	Pipe	
2 020	4107 6513 29	1	Sleeve	
2 030	4107 6513 37	1	Nut	
2 040	4107 6525 89	2	Elbow	
2 050	4107 6515 32	1	Pipe	
2 060	4107 6513 29	1	Sleeve	
2 070	4107 6513 37	1	Nut	

 18

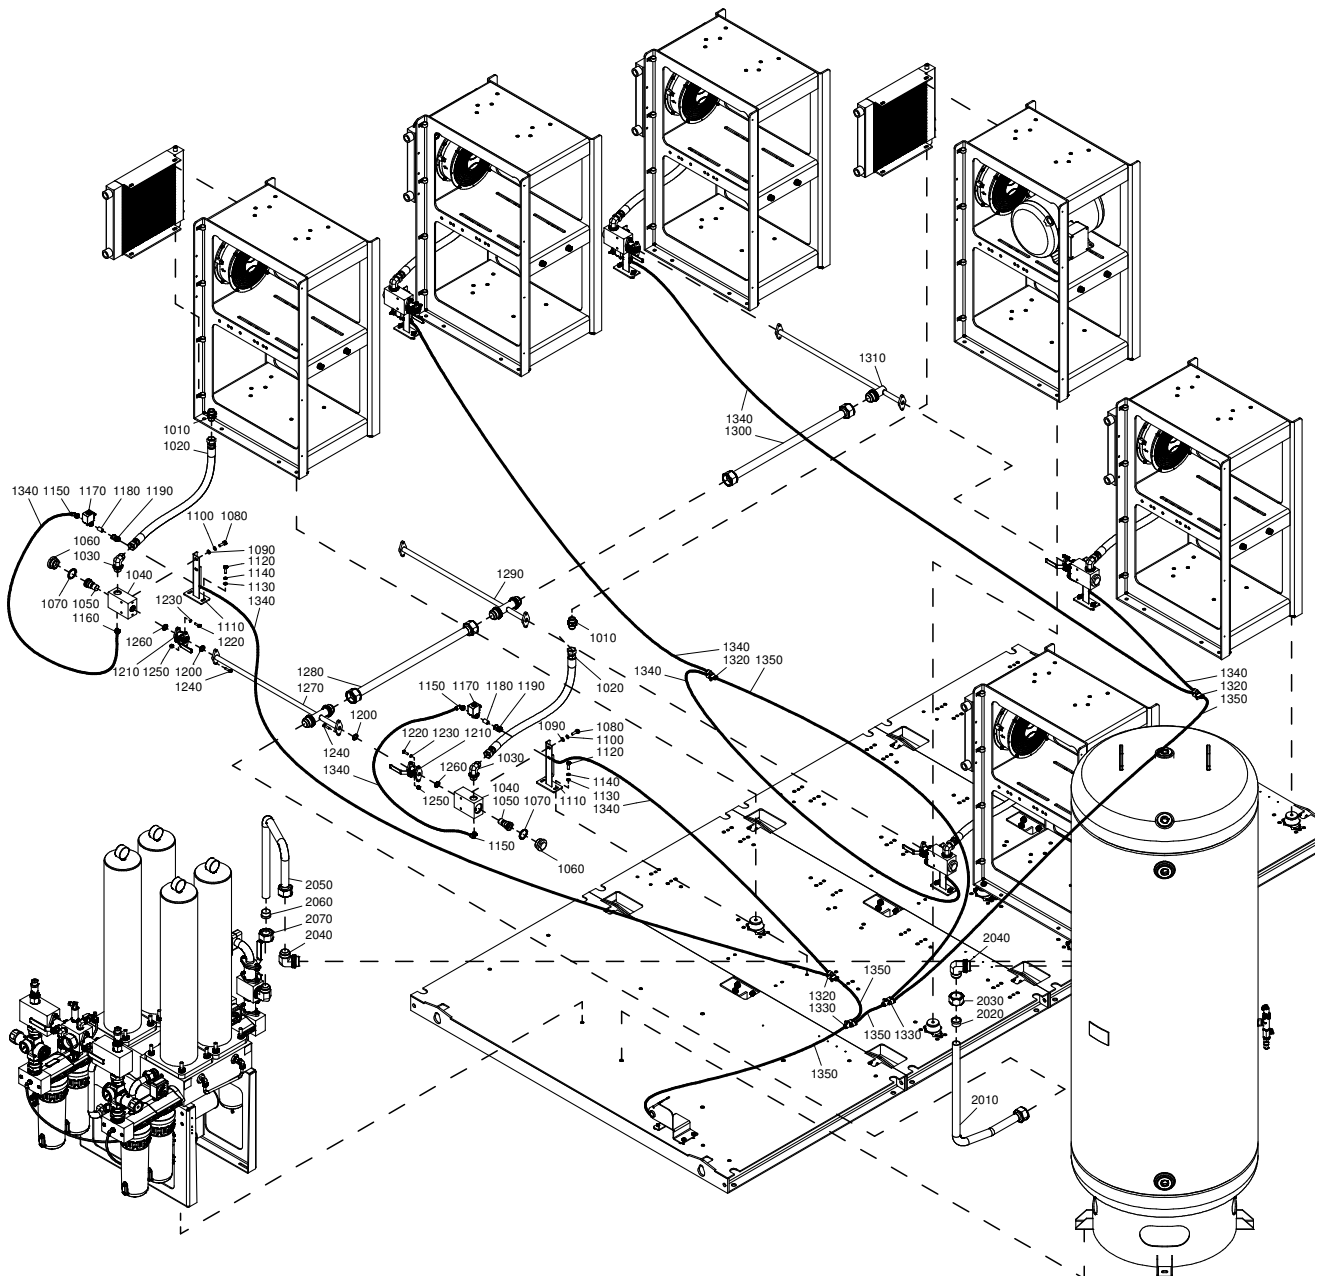


4107 8558 27-01

Discharge piping HX 15hp

18

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6525 90	6	Adaptor	
1 020	4107 6516 67	6	Flexible	
1 030	4107 6525 88	6	Elbow	
1 040	4107 6506 94	6	Block	
1 050	4107 6507 05	6	Check valve	
1 060	4107 6505 90	6	Plug	
1 070	4107 6512 71	6	O-ring	
1 080	0147 1325 03	12	Screw	
1 090	0301 2335 00	12	Washer	
1 100	0333 2225 00	12	Spring washer	
1 110	4107 6506 95	6	Bracket	
1 120	0147 1325 03	12	Screw	
1 130	0301 2335 00	12	Washer	
1 140	0333 2225 00	12	Spring washer	
1 150	4107 6510 08	9	Elbow coupling	
1 160	4107 6510 04	3	Connector	
1 170	4107 6511 70	6	Solenoid valve	
1 180	4107 6519 12	6	Nipple	
1 190	4107 6525 91	6	Connector	
1 200	4107 6510 11	6	O-ring	
1 210	4107 6505 94	6	Valve	
1 220	0147 1247 03	12	Screw	
1 230	0333 2219 00	12	Spring washer	
1 240	0147 1249 03	12	Screw	
1 250	0291 1108 00	12	Lock nut	
1 260	4107 6510 11	6	O-ring	
1 270	4107 6515 33	1	Pipe	
1 280	4107 6515 34	1	Pipe	
1 290	4107 6515 33	1	Pipe	
1 300	4107 6515 34	1	Pipe	
1 310	4107 6515 35	1	Pipe	
1 320	4107 6517 41	3	Connector	
1 330	4107 6517 42	2	Connector	
1 340	4107 6512 77	12	Tube	
1 350	4107 6512 78	5	Tube	
2 010	4107 6515 30	1	Pipe	
2 020	4107 6513 29	1	Sleeve	
2 030	4107 6513 37	1	Nut	
2 040	4107 6525 89	2	Elbow	
2 050	4107 6515 32	1	Pipe	
2 060	4107 6513 29	1	Sleeve	
2 070	4107 6513 37	1	Nut	

 19

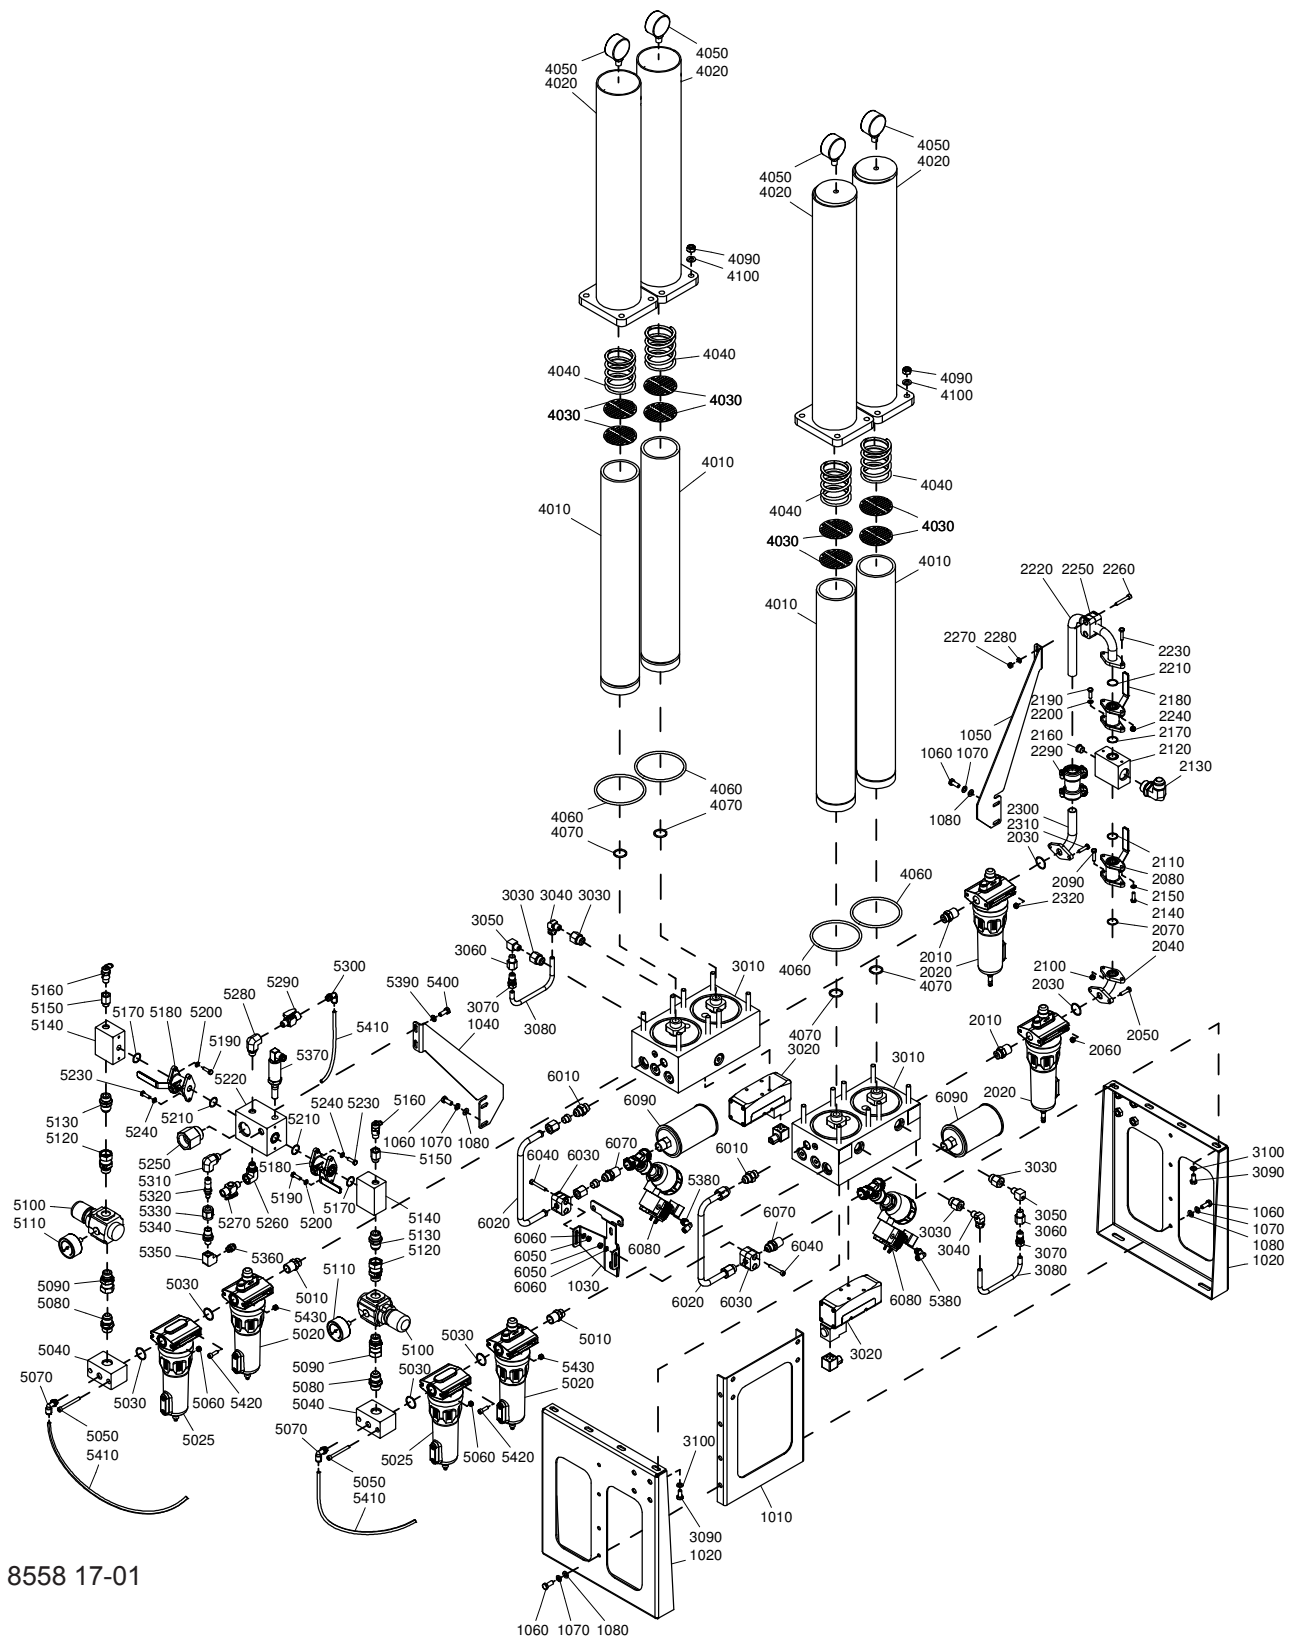

4107 8558 17-01

Dryer assembly DX 55 CFM ISO 2

19


Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6506 78	1	Bracket	
1 020	4107 6506 77	2	Bracket	
1 030	4107 6506 87	1	Bracket	
1 040	4107 6513 48	1	Bracket	
1 050	4107 6512 55	1	Bracket	
1 060	0147 1323 03	10	Screw	
1 070	0333 2225 00	10	Spring washer	
1 080	0301 2335 00	10	Washer	
2 010	4107 6506 25	2	Adaptor	
2 020	8102 2605 39	2	Air filter PD32	
2 030	0663 2100 24	2	O-ring	
2 040	4107 6506 75	1	Pipe	
2 050	0147 1249 03	2	Screw	
2 060	0291 1108 00	2	Lock nut	
2 070	4107 6510 11	1	O-ring	
2 080	4107 6505 94	1	Valve	
2 090	0147 1249 03	2	Screw	
2 100	0291 1108 00	2	Lock nut	
2 110	4107 6510 11	1	O-ring	
2 120	4107 6506 73	1	Block	
2 130	4107 6525 88	1	Elbow	
2 140	0147 1247 03	2	Screw	
2 150	0333 2219 00	2	Spring washer	
2 160	4107 6510 91	1	Plug	
2 170	4107 6510 11	1	O-ring	
2 180	4107 6505 94	1	Valve	
2 190	0147 1247 03	2	Screw	
2 200	0333 2219 00	2	Spring washer	
2 210	4107 6510 11	1	O-ring	
2 220	4107 6506 79	1	Pipe	
2 230	0147 1249 03	2	Screw	
2 240	0291 1108 00	2	Lock nut	
2 250	4107 6501 12	1	Clamp	
2 260	0211 1252 03	2	Screw	
2 270	0291 1108 00	2	Lock nut	
2 280	0301 2321 00	2	Washer	
2 290	4107 6510 10	1	Coupling	
2 300	4107 6506 71	1	Pipe	
2 310	0147 1249 03	2	Screw	
2 320	0291 1108 00	2	Lock nut	
3 010	4107 7835 02	2	Manifold	
3 020	4107 6506 43	2	Solenoid valve	
3 030	4107 6507 16	4	Adaptor	
3 040	4107 6510 33	2	Elbow	
3 050	4107 6513 44	2	Elbow	
3 060	4107 6512 74	2	Orifice adaptor	
3 070	4107 6515 13	2	Connector	
3 080	4107 6506 19	2	Tube	



Dryer assembly DX 55 CFM ISO 2

19

Ref.No.	Part Number	Qty	Name	Remarks
3 090	0147 1322 03	8	Screw	
3 100	0333 2225 00	8	Spring washer	
4 010	4107 6506 01	4	Desiccant canister	
4 020	4107 6506 06	4	Desiccant tower	
4 030	4107 6506 11	8	Screen	
4 040	4107 6506 12	4	Compression spring	
4 050	4107 6510 35	4	Pressure gauge	
4 060	4107 6507 14	4	O-ring	
4 070	4107 6507 13	4	O-ring	
4 080	4651 1763 92	17	Desiccant	
4 090	0291 1111 00	16	Lock nut	
4 100	0301 2344 00	16	Washer	
5 010	4107 6506 25	2	Adaptor	
5 020	8102 2605 47	2	Filter DDp32	
5 025	8102 2605 54	2	Filter QD32	
5 030	0663 2100 24	4	O-ring	
5 040	4107 6506 80	2	Block	
5 050	0211 1256 03	4	Screw	
5 060	0291 1108 00	4	Lock nut	
5 070	4107 6510 08	2	Elbow coupling	
5 080	4107 6510 17	2	Connector	
5 090	4107 6506 83	2	Connector	
5 100	4107 6510 20	2	Pressure regulator	
5 110	4107 6513 42	2	Pressure gauge	
5 120	4107 6506 83	2	Connector	
5 130	4107 6510 17	2	Connector	
5 140	4107 6512 15	2	Block	
5 150	4107 6512 56	2	Adaptor	
5 160	4107 6510 26	2	Safety valve	
5 170	4107 6510 11	2	O-ring	
5 180	4107 6505 94	2	Valve	
5 190	0147 1247 03	4	Screw	
5 200	0333 2219 00	4	Spring washer	
5 210	4107 6510 11	2	O-ring	
5 220	4107 6541 59	1	Block	
5 230	0147 1247 03	4	Screw	
5 240	0333 2219 00	4	Spring washer	
5 250	4107 6541 60	1	Adaptor	
5 260	4107 6510 16	1	Elbow	
5 270	4107 6510 27	1	Valve	
5 280	4107 6510 16	1	Elbow	
5 290	4107 6510 27	1	Valve	
5 300	4107 6510 08	1	Elbow coupling	
5 310	4107 6510 16	1	Elbow	
5 320	4107 6513 49	1	Nipple	
5 330	4107 6513 47	1	Nut	
5 340	4107 6513 48	1	Adaptor	
5 350	4107 6513 50	1	Elbow	

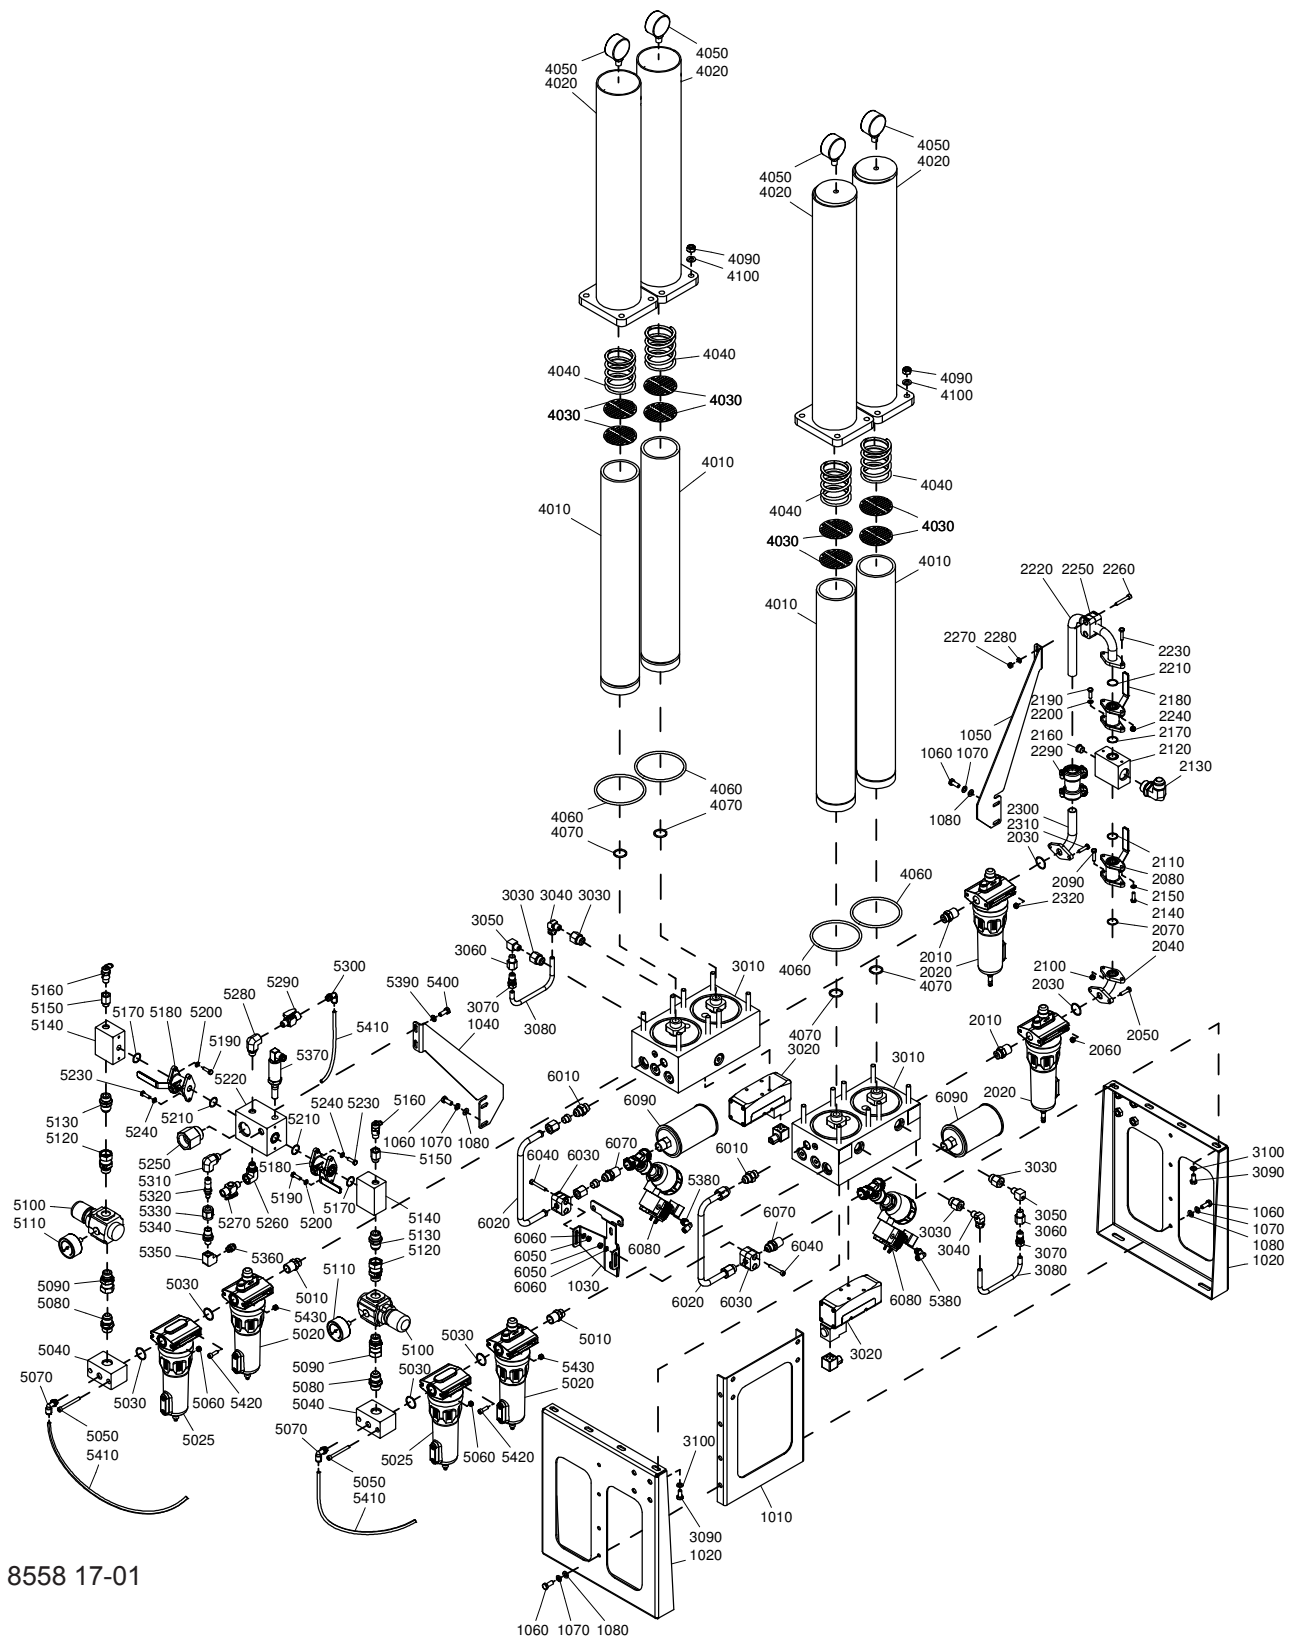 


Dryer assembly DX 55 CFM ISO 2

19

Ref.No.	Part Number	Qty	Name	Remarks
5360	4107 6510 04	1	Connector	
5370	4107 6554 19	1	Sensor	
5380	4107 6510 08	2	Elbow coupling	
5390	0333 2225 00	2	Spring washer	
5400	0147 1323 03	2	Screw	
5410	4107 6515 53	3	Tube	
5420	0211 1959 22	4	Screw	
5430	0291 1108 00	4	Lock nut	
6010	4107 6506 30	2	Connector	
6020	4107 6507 15	2	Pipe	
6030	4107 6510 23	2	Clamp	
6040	0211 1252 03	4	Screw	
6050	0291 1108 00	4	Lock nut	
6060	0301 2321 00	4	Washer	
6070	4107 6510 34	2	Connector	
6080	4107 6506 46	2	Pilot valve	
6090	4107 6506 22	2	Muffler	

 20

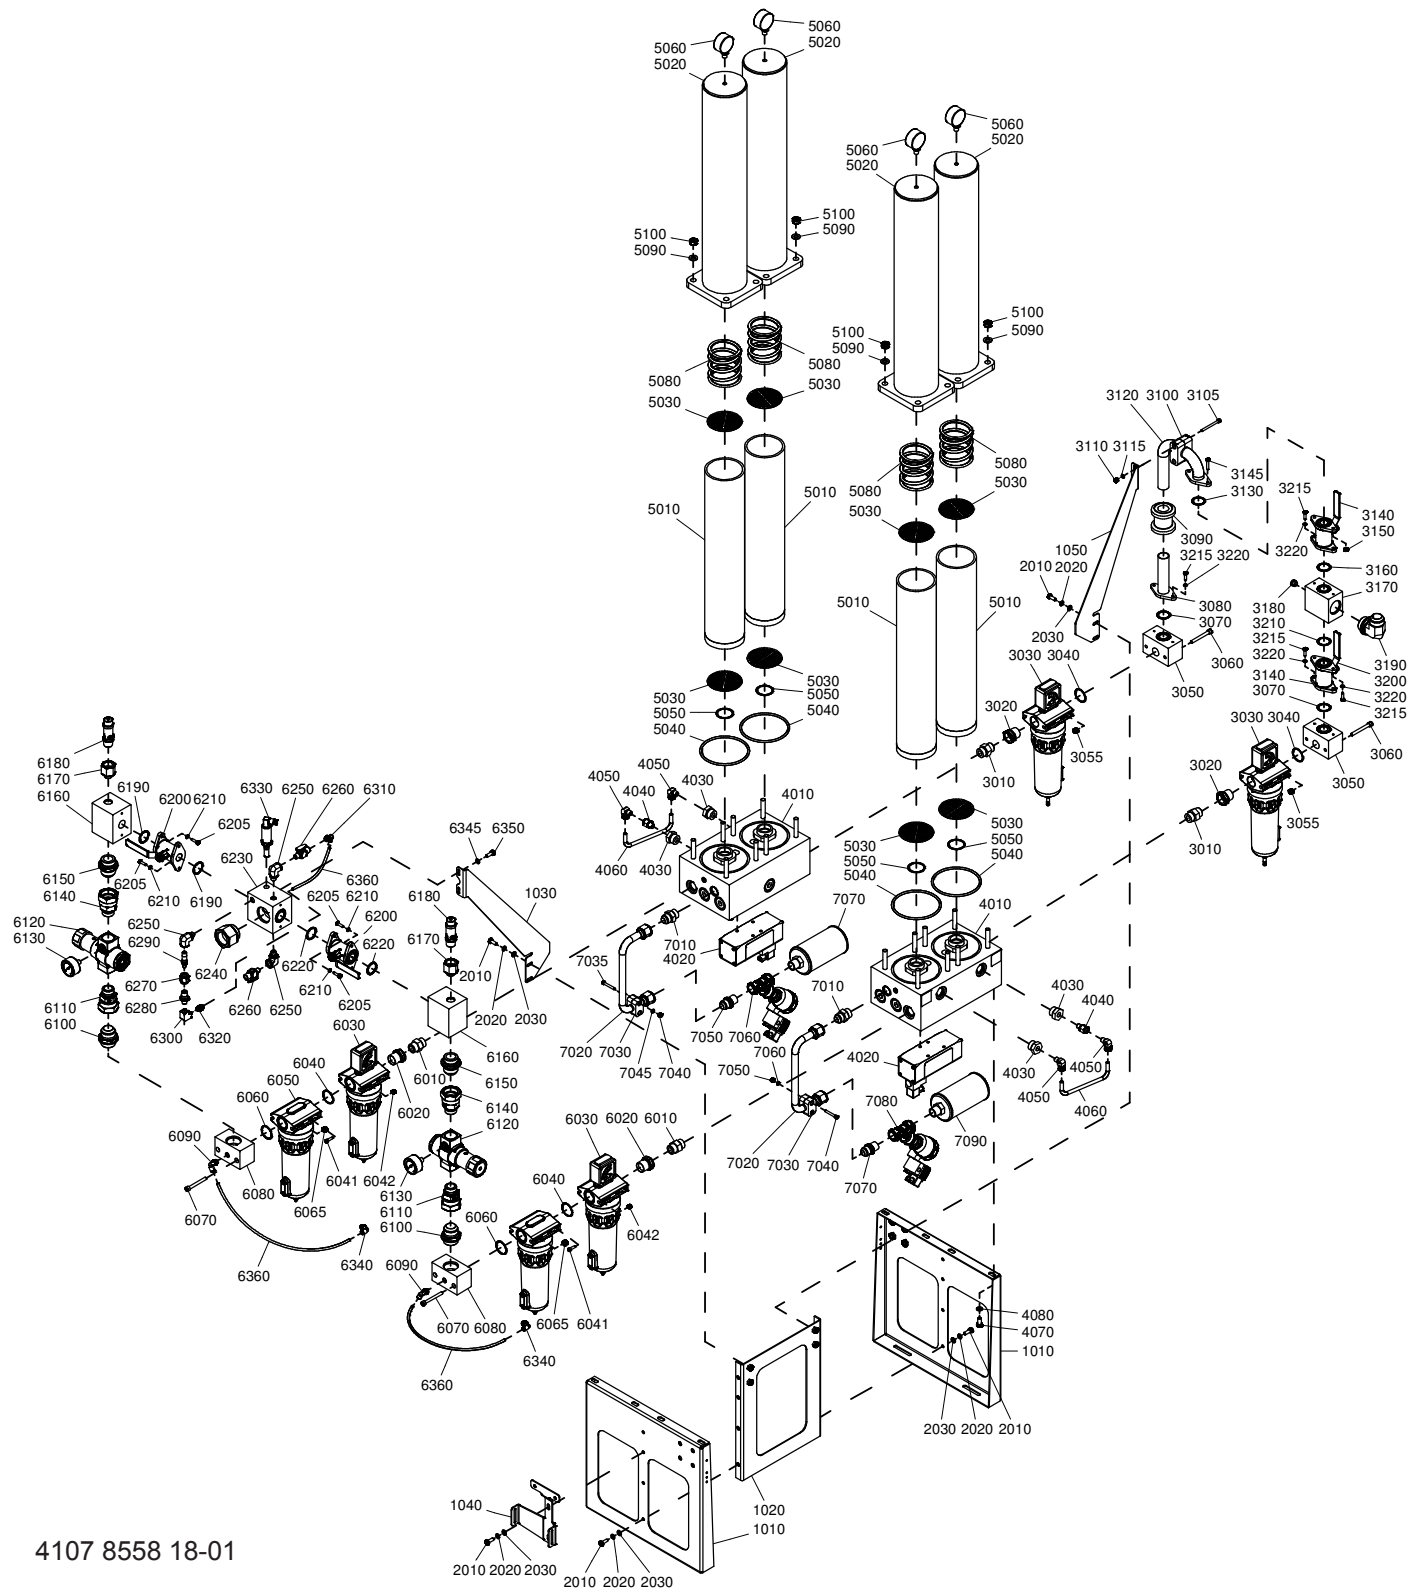


4107 8558 18-01

Dryer assembly DX 75 & DX 105 CFM ISO 3

20

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6513 18	2	Bracket	
1 020	4107 6513 20	1	Bracket	
1 030	4107 6541 94	1	Bracket	
1 040	4107 6513 12	1	Bracket	
1 050	4107 6513 85	1	Bracket	
2 010	0147 1323 03	10	Screw	
2 020	0333 2225 00	10	Washer-spring	
2 030	0301 2335 00	10	Washer-flat	
3 010	4107 6506 26	2	Adaptor	
3 020	4107 6506 41	2	Bush	
3 030		2	Air filter PD	
	8102 2605 70		DX 75CFM	
	8102 2606 12		DX 105CFM	
3 040	0663 2101 97	2	O-ring	
3 050	4107 6513 14	2	Bracket filter intake	
3 055	0291 1110 00	4	Locknut	
3 060	4107 6525 85	4	Screw	
3 070	4107 6510 12	2	O-ring	
3 080	4107 6509 93	1	Tube	
3 090	4107 6513 95	1	Coupling	
3 100	4107 6501 07	1	Clamp	
3 105	0211 1964 98	2	Screw	
3 110	0291 1108 00	2	Locknut	
3 115	0301 2321 00	2	Washer-flat	
3 120	4107 6513 17	1	Tube	
3 130	4107 6510 12	1	O-ring	
3 140	4107 6505 93	1	Ball valve	
3 145	0147 1250 03	2	Screw	
3 150	0291 1108 00	2	Locknut	
3 160	4107 6510 12	1	O-ring	
3 170	4107 6513 13	1	Block bypass inlet	
3 180	4107 6510 91	1	Plug	
3 190	4107 6525 89	1	Elbow	
3 200	4107 6505 93	1	Ball valve	
3 210	4107 6510 12	1	O-ring	
3 215	0147 1247 03	8	Screw	
3 220	0333 2219 00	8	Spring lock washer	
4 010	4107 7835 03	2	Manifold block assy	
4 020	4107 6506 44	2	Valve	
4 030	4107 6506 36	4	Adaptor	
4 040	4107 6512 74	2	Orifice adaptor	
4 050	4107 6510 33	4	Elbow	
4 060	4107 6506 20	2	Tube	
4 070	0147 1360 03	8	Screw	
4 080	0333 2230 00	8	Washer-spring	
5 010		4	Desiccant canister	
	4107 6506 02		DX 75CFM	
	4107 6506 03		DX 105CFM	

 20

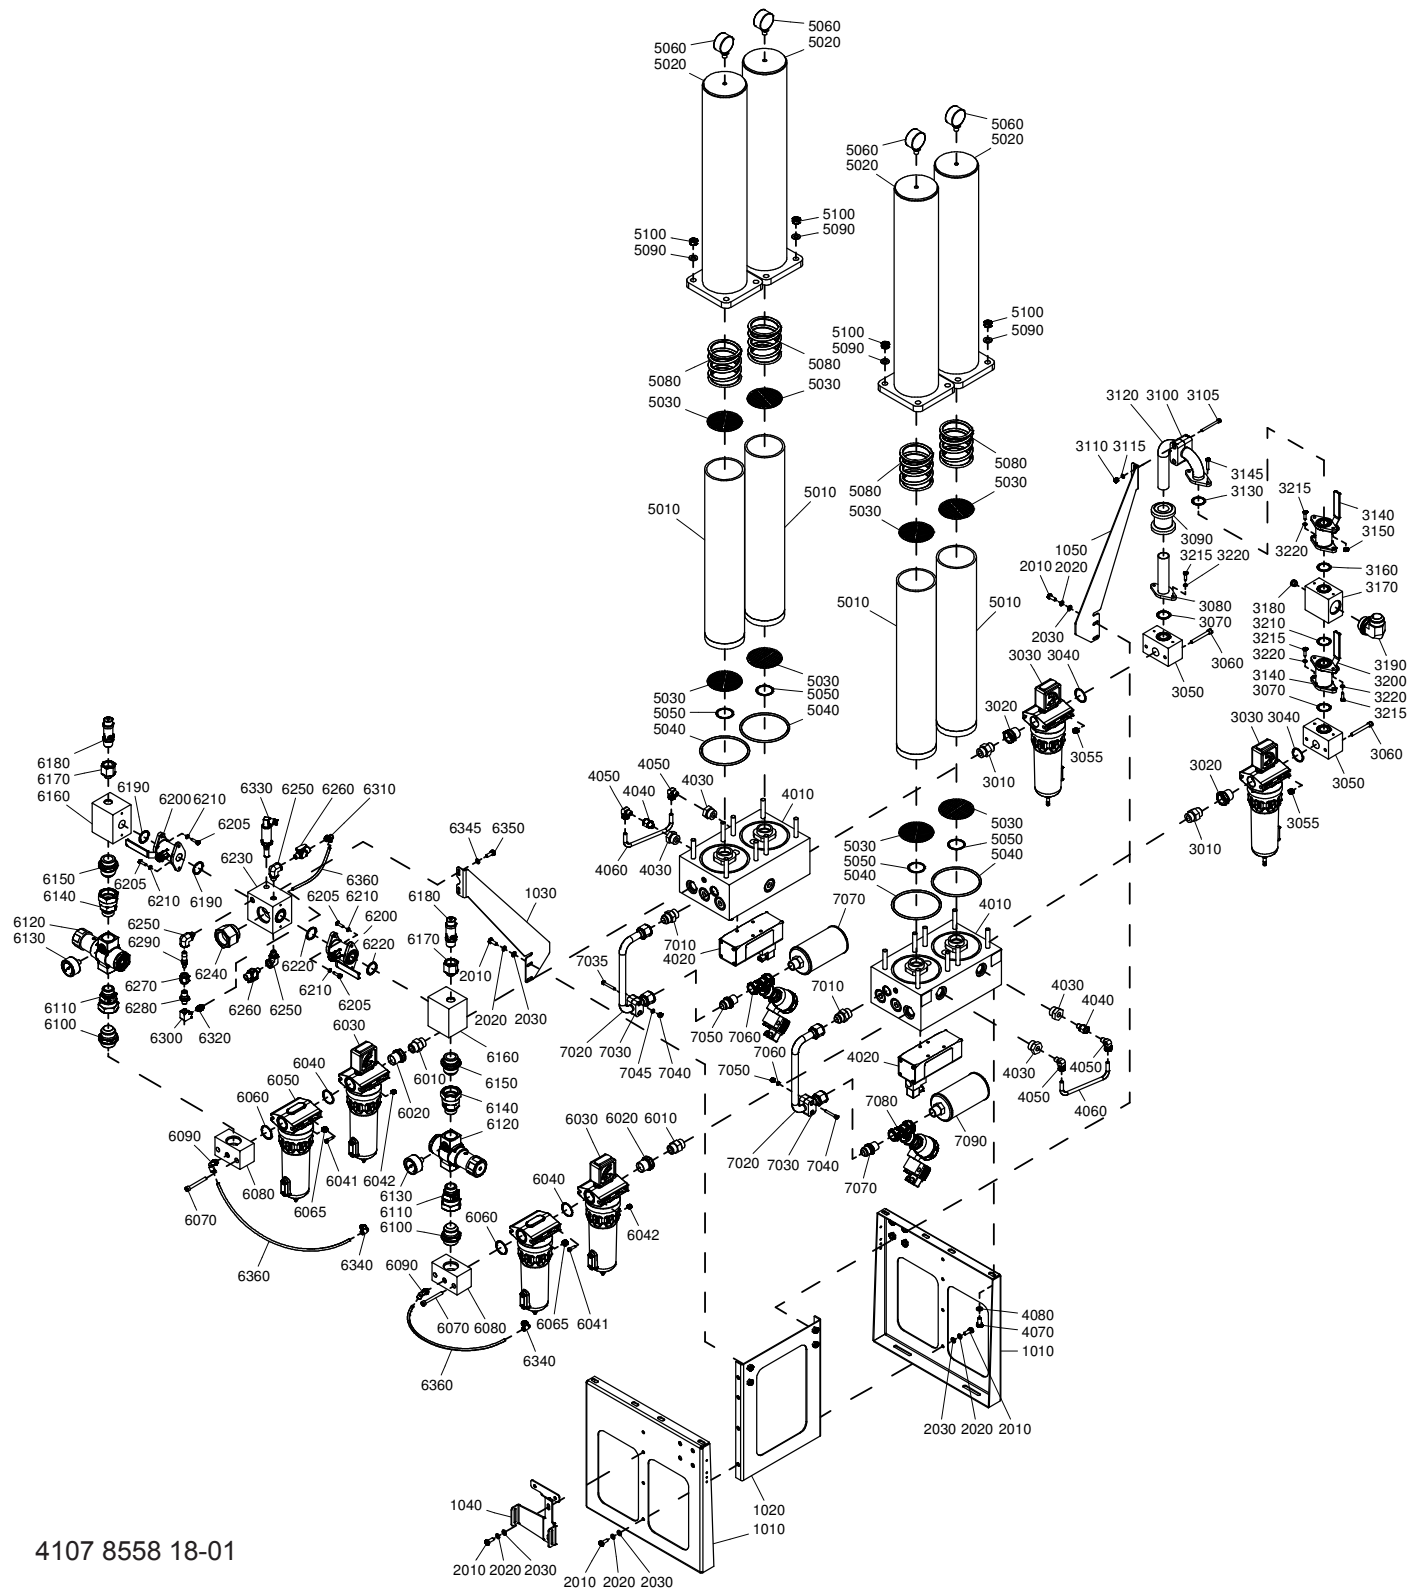


4107 8558 18-01

Dryer assembly DX 75 & DX 105 CFM ISO 3

20

Ref.No.	Part Number	Qty	Name	Remarks
5 020		4	Tower	
	4107 6506 07		DX 75CFM	
	4107 6506 08		DX 105CFM	
5 030	4107 6513 87	8	Screen	
5 040	4107 6513 89	4	O-ring	
5 050	4107 6515 88	4	O-ring	
5 060	4107 6510 35	4	Pressure guage	
5 070	3003 1390 30	AR	Desiccant	
5 080	4107 6515 39	4	Compression spring	
5 090	0301 2358 00	16	Washer-flat	
5 100	0291 1112 00	16	Locknut	
6 010	4107 6506 26	2	Adaptor	
6 020	4107 6506 41	2	Bush	
6 030		2	Filter DDp	
	8102 2605 88		DX 75CFM	
	8102 2606 20		DX 105CFM	
	8092 2430 24	2	Serial connection kit	
6 040	0663 2101 97	2	O-ring	
6 041	0211 1959 22	4	Screw	
6 042	0291 1108 00	4	Lock Nut	
6 050		2	Filter QD	
	8102 2605 96		DX 75CFM	
	8102 2606 38		DX 105CFM	
6 060	0663 2101 97	2	O-ring	
6 065	0291 1110 00	4	Locknut	
6 070	4107 6525 85	4	Screw	
6 080	4107 6513 09	2	Bracket filter discharge	
6 090	4107 6510 08	2	Elbow	
6 100	4107 6514 57	2	Connector	
6 110	4107 6514 60	2	Connector	
6 120	4107 6510 21	2	Pressure regulator	
6 130	4107 6513 43	2	Pressure gauge	
6 140	4107 6514 60	2	Connector	
6 150	4107 6514 57	2	Connector	
6 160	4107 6512 16	2	Block	
6 170	4107 6514 63	2	Adaptor	
6 180	4107 6514 73	2	Valve	
6 190	4107 6510 12	2	O-ring	
6 200	4107 6505 93	2	Valve	
6 205	0147 1247 03	8	Screw	
6 210	0333 2219 00	8	Spring lock washer	
6 220	4107 6510 12	2	O-ring	
6 230	4107 6510 53	1	Block	
6 240	4107 6523 67	1	Adaptor	
6 250	4107 6510 16	3	Elbow	
6 260	4107 6510 27	2	Valve	
6 270	4107 6513 47	1	Nut	
6 280	4107 6513 48	1	Adaptor	

 20

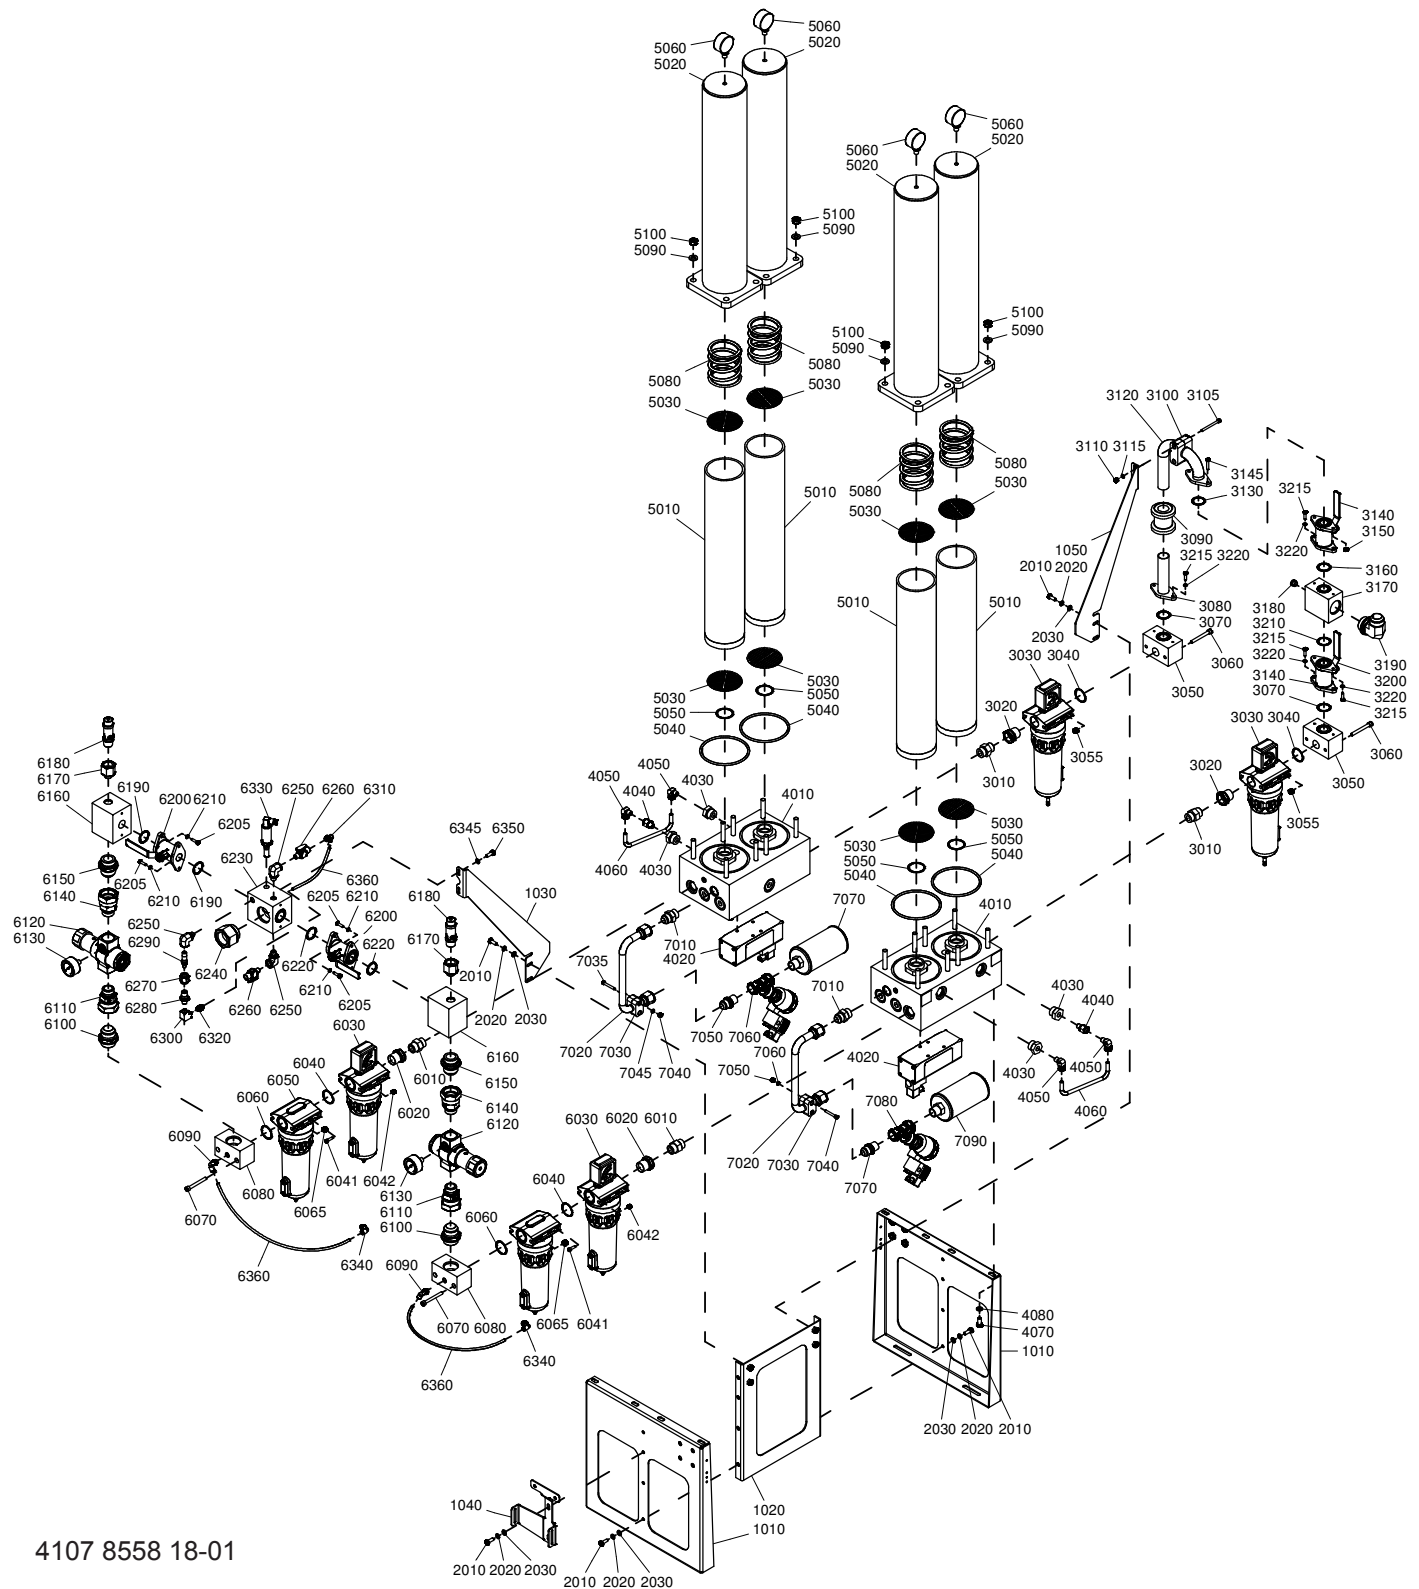


4107 8558 18-01

Dryer assembly DX 75 & DX 105 CFM ISO 3

20

Ref.No.	Part Number	Qty	Name	Remarks
6 290	4107 6513 49	1	Nipple	
6 300	4107 6513 50	1	Elbow	
6 310	4107 6510 08	1	Elbow	
6 320	4107 6510 04	1	Connector	
6 330	4107 6554 19	1	Sensor	
6 340	4107 6510 08	2	Elbow	
6 345	0333 2225 00	2	Washer-spring	
6 350	0147 1323 03	2	Screw	
6 360		AR	Tube	
	4107 6512 77		DX 75CFM	
	4107 6515 53		DX 105CFM	
7 010	4107 6506 31	2	Connector	
7 020	4107 6513 21	2	Tube muffler	
7 030	4107 6501 12	2	Clamp	
7 035	0211 1252 03	2	Screw	
7 040	0291 1108 00	4	Locknut	
7 045	0333 2219 00	2	Spring lock washer	
7 050	4107 6515 37	2	Connector	
7 060	4107 6506 47	2	Valve	
7 070	4107 6506 23	2	Muffler	

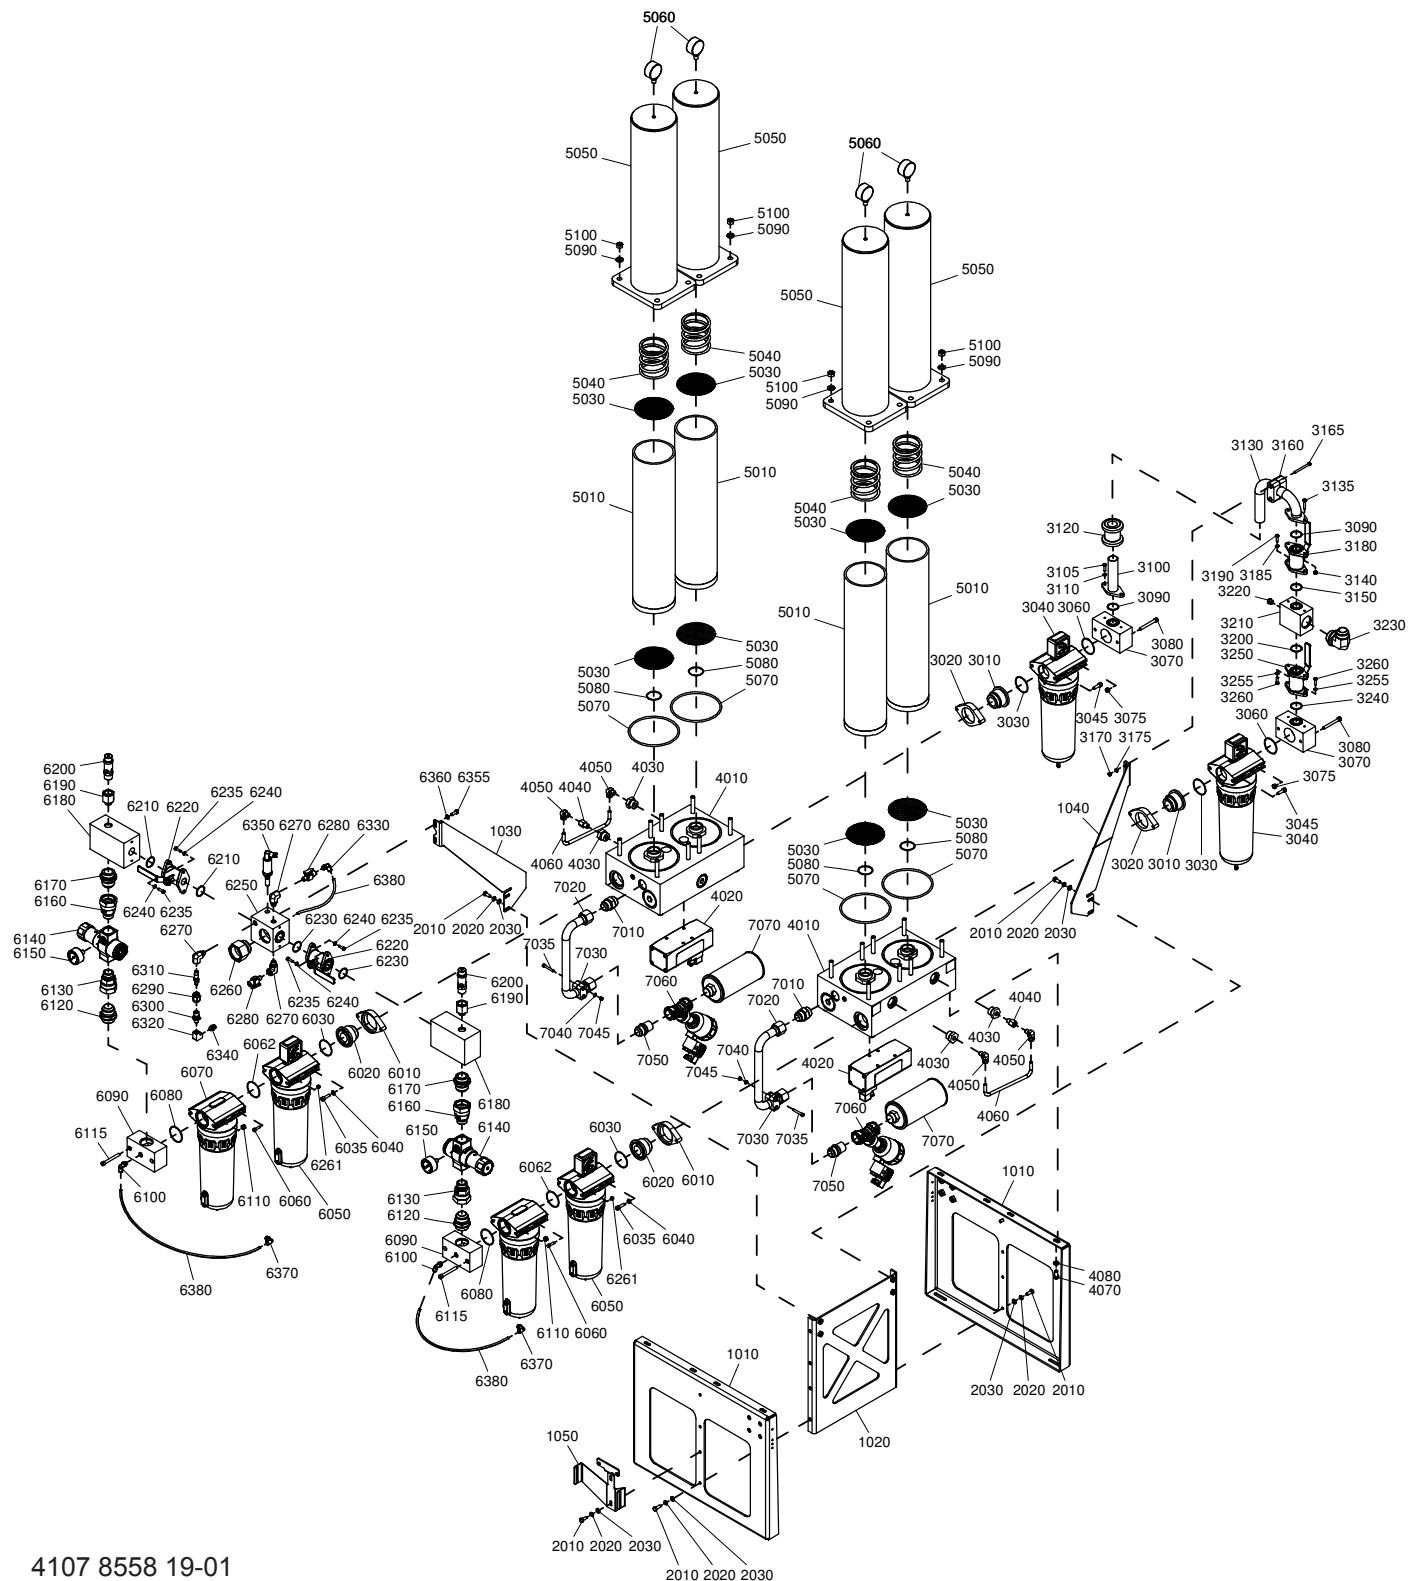 


4107 8558 19-01

Dryer assembly DX 155 & DX 200 CFM ISO 4

21

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6511 44	2	Bracket	
1 020	4107 6511 76	1	Bracket	
1 030	4107 6548 70	1	Bracket	
1 040	4107 6515 87	1	Bracket	
1 050	4107 6508 29	1	Bracket	
2 010	0147 1323 03	10	Screw	
2 020	0333 2225 00	10	Spring washer	
2 030	0301 2335 00	10	Flat washer	
3 010	4107 6526 24	2	Adaptor	
3 020	4107 6526 25	2	Flange	
3 030	0663 2104 75	2	O-ring	
3 040	8102 2606 53	2	Air filter PD	
3 045	0211 1325 03	4	Screw	
3 050	0333 2225 00	4	Washer	
3 060	0663 2104 75	2	O-ring	
3 070	4107 6510 97	2	Bracket filter intake	
3 075	0291 1110 00	4	Locknut	
3 080	4107 6525 85	4	Screw	
3 090	4107 6510 12	2	O-ring	
3 100	4107 6509 93	1	Tube	
3 105	0147 1247 03	2	Screw	
3 110	0333 2219 00	2	Spring lock washer	
3 120	4107 6513 95	1	Coupling	
3 130	4107 6515 92	1	Tube	
3 135	0147 1250 03	2	Screw	
3 140	0291 1108 00	2	Locknut	
3 150	4107 6510 12	1	O-ring	
3 160	4107 6501 07	1	Clamp	
3 165	0211 1964 98	2	Screw	
3 170	0291 1108 00	2	Locknut	
3 175	0301 2321 00	2	Washer-flat	
3 180	4107 6505 93	1	Ball valve	
3 185	0333 2219 00	2	Spring lock washer	
3 190	0147 1247 03	2	Screw	
3 200	4107 6510 12	1	O-ring	
3 210	4107 6513 13	1	Block	
3 220	4107 6510 91	1	Plug	
3 230	4107 6525 89	1	Elbow	
3 240	4107 6510 12	1	O-ring	
3 250	4107 6505 93	1	Ball valve	
3 255	0147 1247 03	4	Screw	
3 260	0333 2219 00	4	Spring lock washer	
4 010	4107 7835 04	2	Manifold block assy	
4 020	4107 6506 45	2	Valve	
4 030	4107 6506 36	4	Adaptor	
4 040	4107 6512 74	2	Orifice adaptor	
4 050	4107 6510 33	4	Elbow	
4 060	4107 6506 21	AR	Tube	

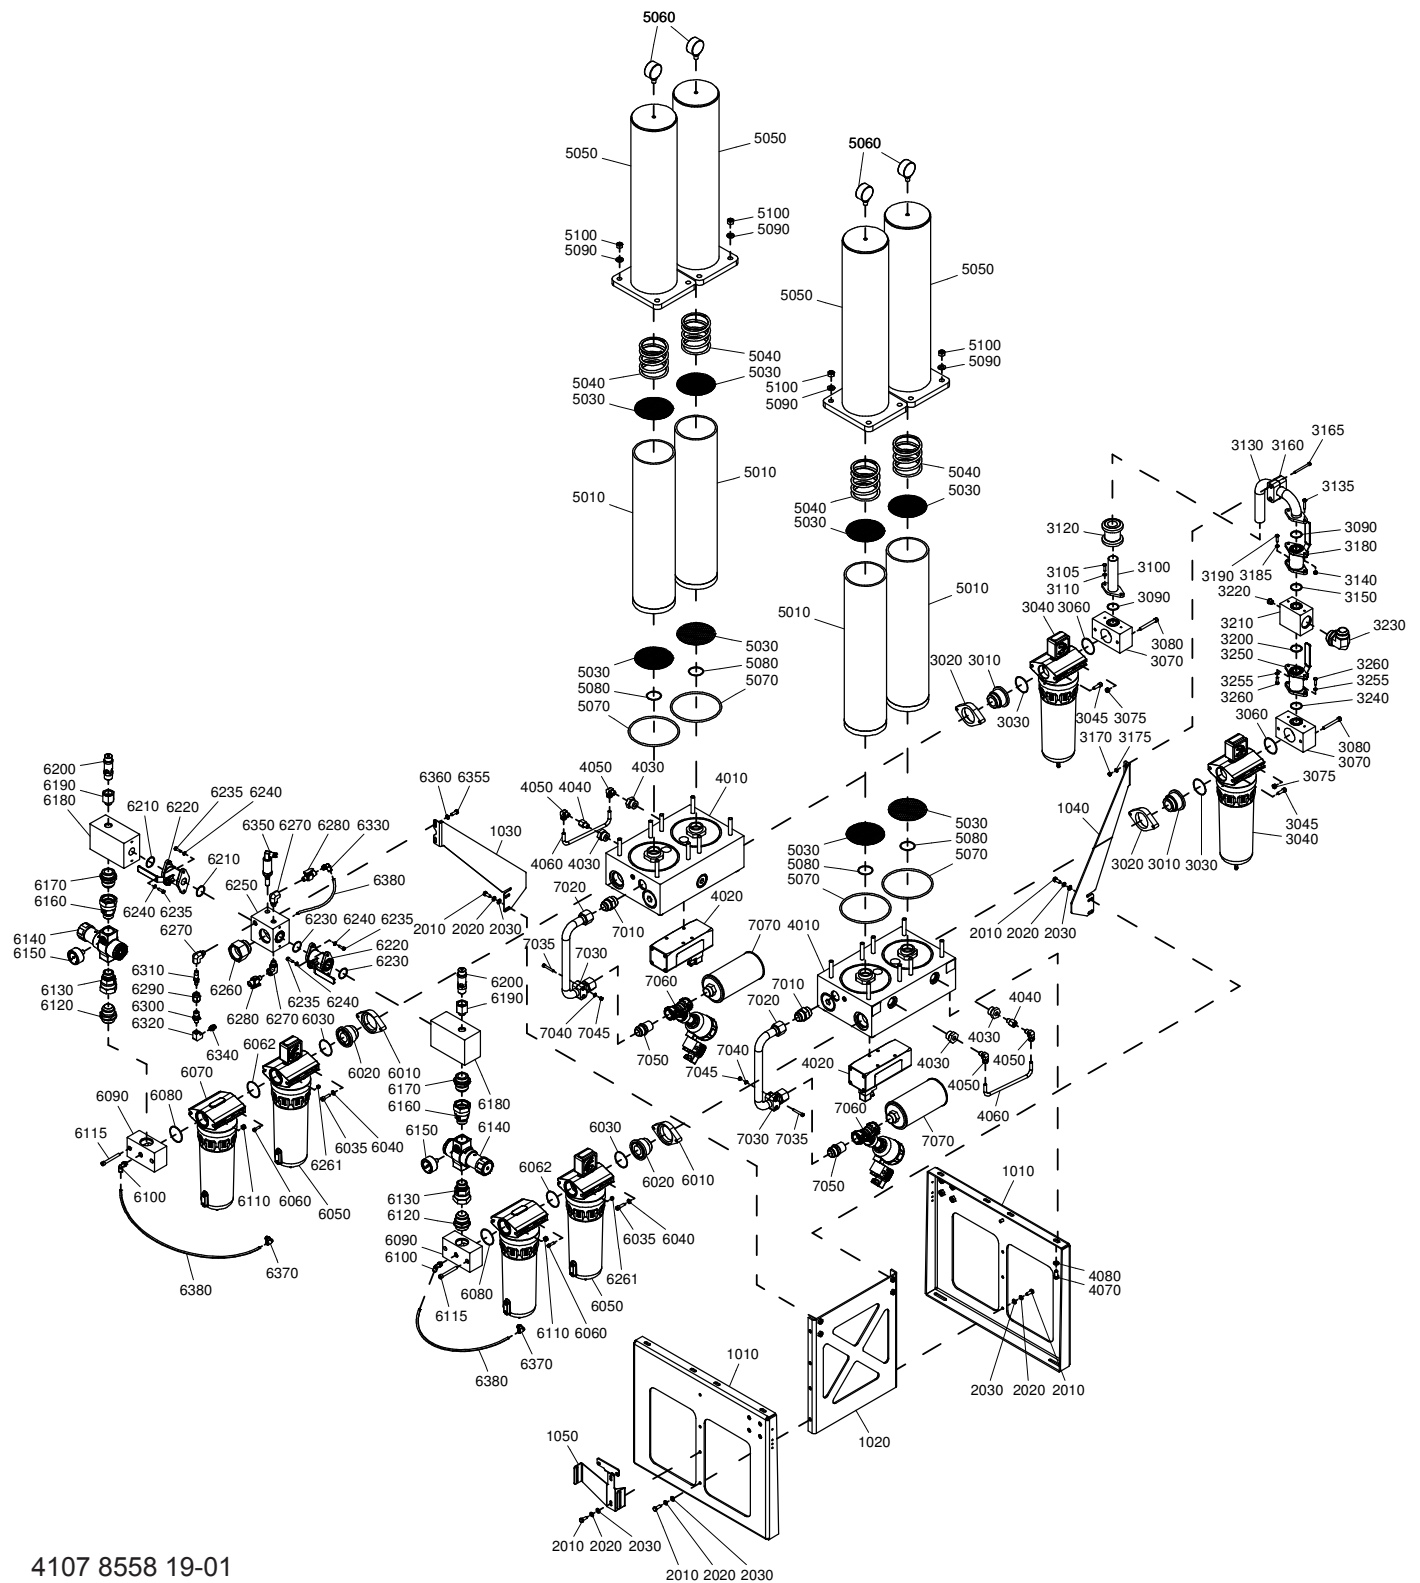 

Dryer assembly DX 155 & DX 200 CFM ISO 4

21

Ref.No.	Part Number	Qty	Name	Remarks
4 070	0147 1360 03	8	Screw	
4 080	0333 2230 00	8	Washer-spring	
5 010		4	Desiccant canister	
	4107 6506 04		SX 155 CFM	
	4107 6506 05		SX 200 CFM	
5 020	3003 1390 30	AR	Desiccant	
5 030	4107 6515 89	8	Screen	
5 040	4107 6515 39	4	Compression spring	
5 050		4	Tower	
	4107 6506 09		SX 155 CFM	
	4107 6506 10		SX 200 CFM	
5 060	4107 6510 35	4	Pressure guage	
5 070	4107 6515 90	4	O-ring	
5 080	4107 6515 88	4	O-ring	
5 090	0301 2358 00	16	Washer-flat	
5 100	0291 1112 00	16	Locknut	
6 010	4107 6526 25	2	Slip flange	
6 020	4107 6526 24	2	Adaptor	
6 030	0663 2104 75	2	O-ring	
6 035	0211 1325 03	4	Screw	
6 040	0333 2225 00	4	Washer-spring	
6 050	8102 2606 61	2	Filter DDp	
	8092 2430 32	2	Serial connector kit	
6 060	0211 1959 22	4	Screw	
6 261	0291 1108 00	4	LOCK NUT	
6 062	0663 2104 75	2	O-ring	
0 070	8102 2606 79	2	Filter QD	
0 080	0663 2104 75	2	O-ring	
0 090	4107 6510 96	2	Bracket filter discharge	
0 100	4107 6510 08	2	Elbow	
6 110	0291 1110 00	4	Locknut	
6 115	4107 6525 85	4	Screw	
6 120	4107 6514 57	2	Connector	
6 130	4107 6514 60	2	Connector	
6 140	4107 6510 21	2	Pressure regulator	
6 150	4107 6513 43	2	Pressure gauge	
6 160	4107 6514 60	2	Connector	
6 170	4107 6514 57	2	Connector	
6 180	4107 6512 17	2	Block	
6 190	4107 6514 63	2	Adaptor	
6 200	4107 6514 73	2	Valve	
6 210	4107 6510 12	2	O-ring	
6 220	4107 6505 93	2	Valve	
6 230	4107 6510 12	2	O-ring	
6 235	0147 1247 03	8	Screw	
6 240	0333 2219 00	8	Spring lock washer	
6 250	4107 6510 53	1	Block	
6 260	4107 6514 71	1	Adaptor	




Dryer assembly DX 155 & DX 200 CFM ISO 4

21

Ref.No.	Part Number	Qty	Name	Remarks
6 270	4107 6510 16	3	Elbow	
6 280	4107 6510 27	2	Valve	
6 290	4107 6513 47	1	Nut diss	
6 300	4107 6513 48	1	Adaptor	
6 310	4107 6513 49	1	Nipple	
6 320	4107 6513 50	1	Elbow	
6 330	4107 6510 08	1	Elbow	
6 340	4107 6510 04	1	Connector	
6 350	4107 6554 19	1	Sensor	
6 355	0333 2225 00	2	Washer-spring	
6 360	0147 1323 03	2	Screw	
6 370	4107 6510 08	2	Elbow	
6 380	4107 6512 77	AR	Tube	
7 010	4107 6506 32	2	Connector	
7 020	4107 6509 12	2	Tube muffler	
7 030	4107 6501 06	2	Clamp	
7 035	0211 1252 03	4	Screw	
7 040	0291 1108 00	4	Locknut	
7 045	0333 2219 00	4	Spring lock washer	
7 050	4107 6515 38	2	Connector	
7 060	4107 6506 48	2	Valve	
7 070	4107 6506 24	2	Muffler	

 22

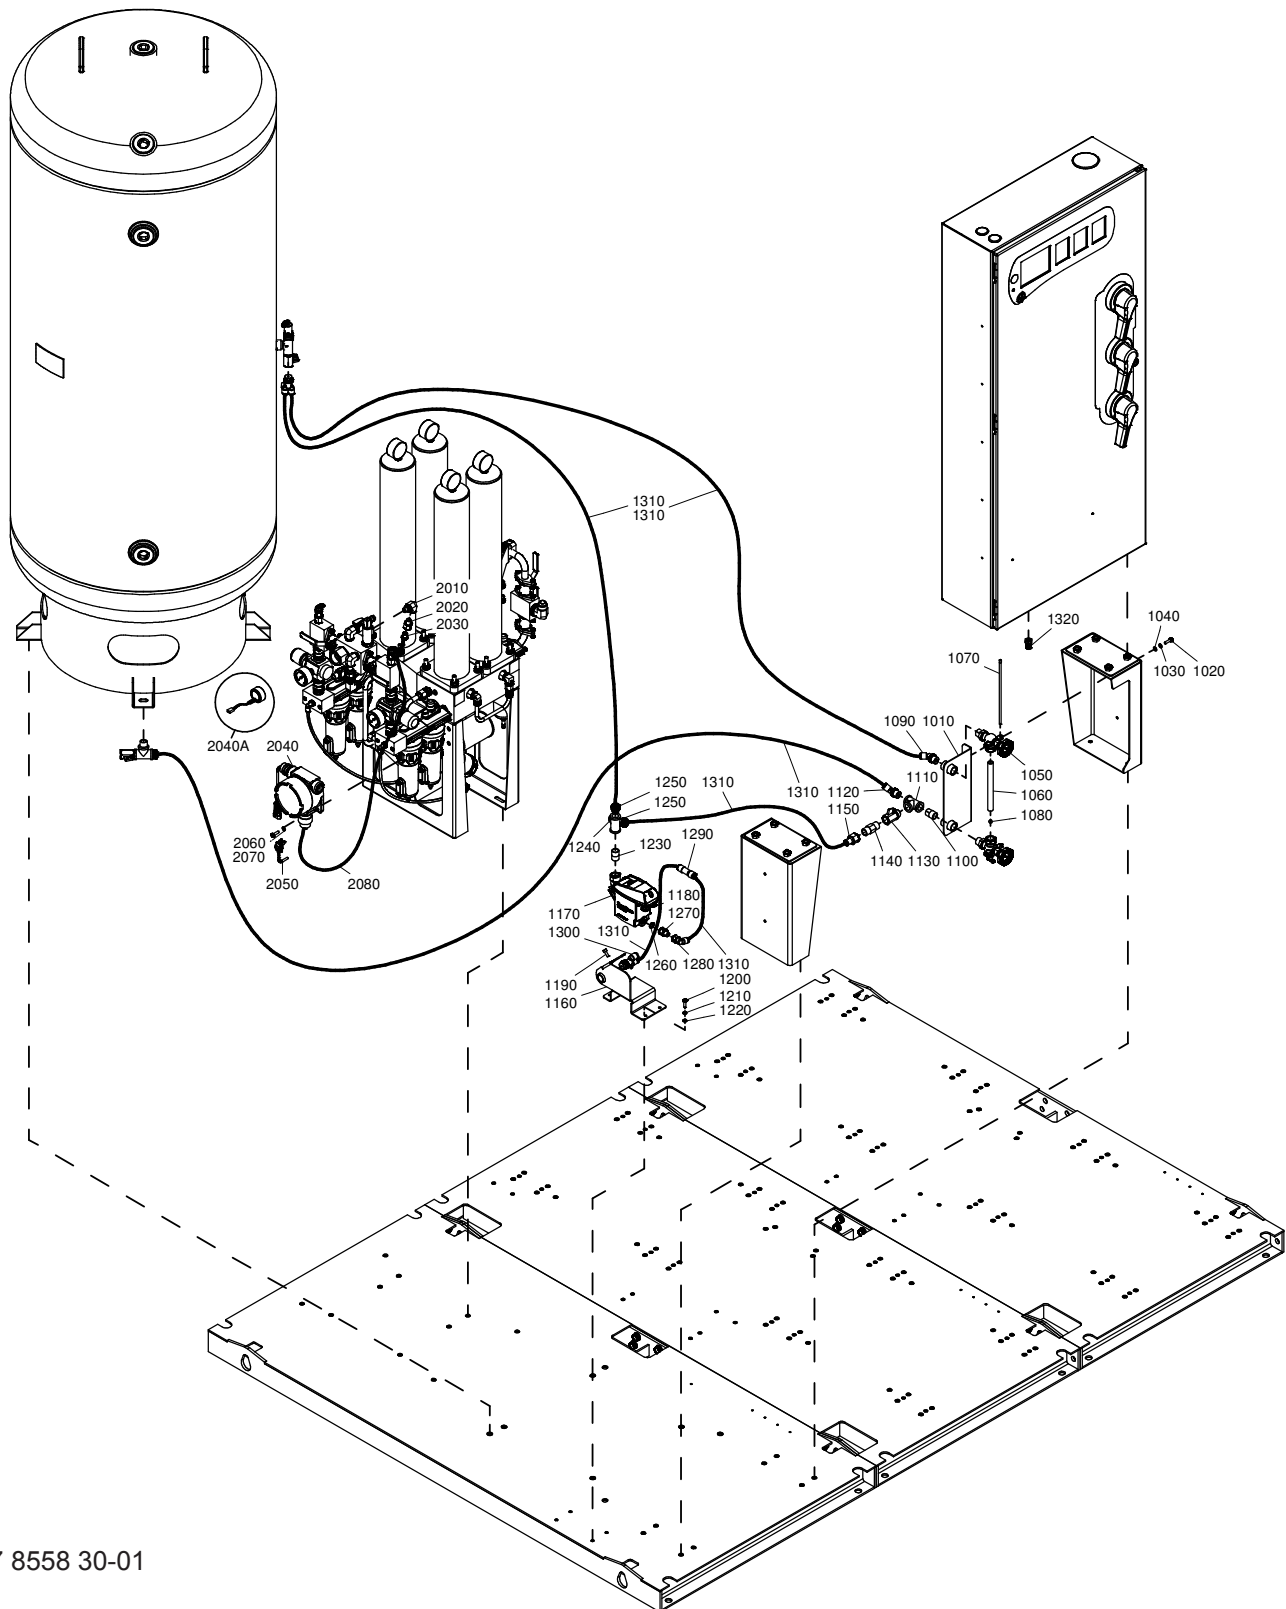


4107 8558 30-01

Tank drain and CO assembly 10-15hp

22

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6506 69	1	Bracket	
1 020	0147 1247 03	2	Screw	
1 030	0333 2219 00	2	Spring washer	
1 040	0301 2321 00	2	Washer	
1 050	4107 6510 29	1	Water gauge	
1 060	4107 6519 34	1	Glass tube	
1 070	4107 6519 35	2	Rod	
1 080	4107 6506 70	1	Float ball	
1 090	4107 6519 36	1	Elbow coupling	
1 100	4107 6512 32	1	Nipple	
1 110	4107 6516 27	1	Tee	
1 120	4107 6519 36	1	Elbow coupling	
1 130	4107 6510 25	1	Ball valve	
1 140	4107 6516 37	1	Filter adaptor	
1 150	4107 6516 38	1	Connector	
1 160	4107 6535 28	1	Bracket	
1 170	4107 6532 49	1	Condensate drain	
1 180	4107 6537 74	1	Cable	
1 190	0211 1959 21	2	Screw	
1 200	0147 1247 03	4	Screw	
1 210	0333 2219 00	4	Spring washer	
1 220	0301 2321 00	4	Washer	
1 230	4107 6512 32	1	Nipple	
1 240	4107 6516 27	1	Tee	
1 250	4107 6510 06	2	Connector	
1 260	4107 6513 41	1	O-ring	
1 270	4107 6510 01	1	Adaptor	
1 280	4107 6516 39	1	Elbow coupling	
1 290	4107 6517 11	1	Check valve	
1 300	4107 6510 07	1	Connector	
1 310	4107 6512 78	6	Tube	
1 320	4107 6509 02	1	Cable gland	
2 010	4107 6510 16	1	Elbow	
2 020	4107 6513 19	1	Orifice adaptor	
2 030	4107 6514 58	1	Straight barbed adapter	
2 040	4107 6510 38	1	CO transmitter with sensor	
2 040A	4107 6530 69	1	CO sensor	
2 050	0147 1247 03	2	Screw	
2 060	0333 2219 00	2	Spring washer	
2 070	4107 6513 23	1	Tube	
2 080	4107 6524 79	AR	Cable CO sensor	
2 090	4107 6509 02	1	Cable gland	

 23

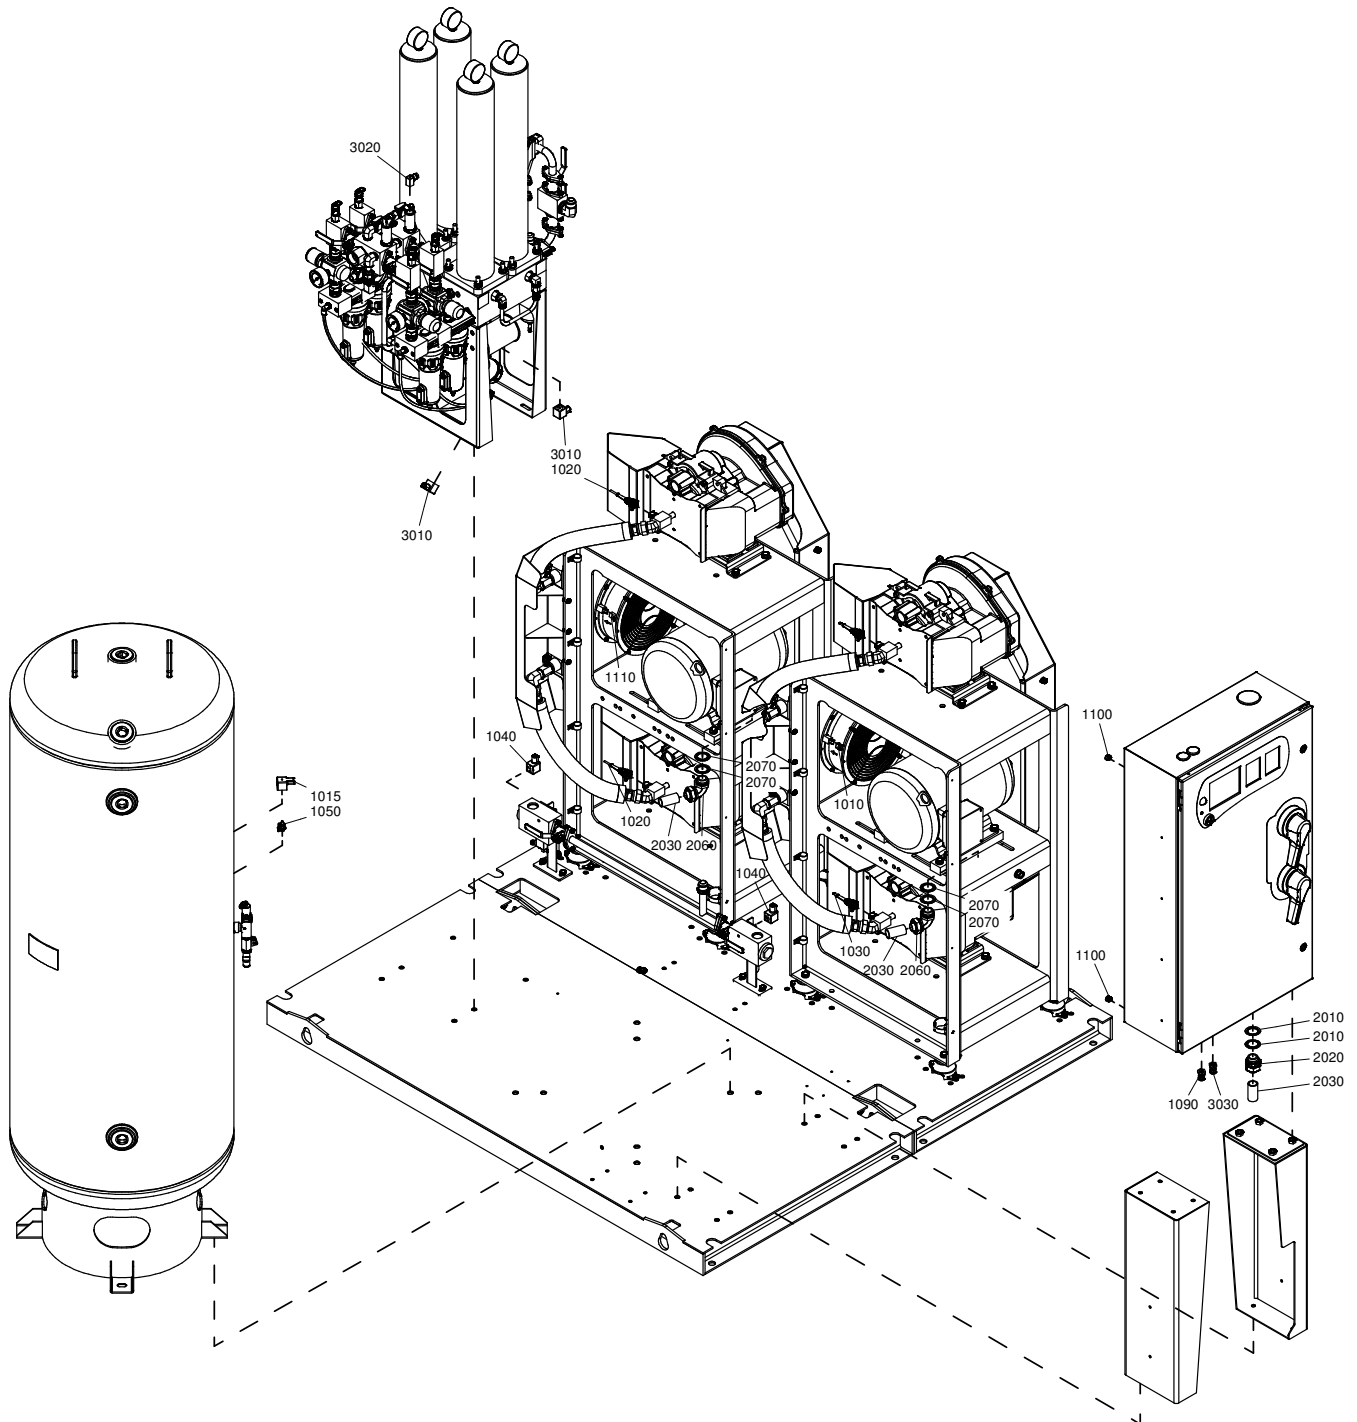


4107 8558 34-01

Cable group and motor wire DX 10-15hp

23

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6507 08	1	Power cord fan	
1 015	4107 6515 40	1	Cable	
1 020	4107 6511 36	2	Cable RTD	
1 030	4107 6511 37	2	Cable RTD	
1 040	4107 6513 86	2	Cable solenoid/Backup pressure switch	
1 050	4107 6511 38	1	Cable pressure transducer	
1 070	4107 6524 19	AR	Wire harness	
1 090	4107 6509 02	10	Cable gland	
1 100	4107 6519 14	6	Plug	
1 110	4107 6507 09	1	Fan power cord 20' 45deg	
1 120	4107 6512 77	AR	Tube	
2 010		4	Washer	
	4107 6509 83		DX 10hp 415/3/50 DOL	
	4107 6509 83		DX 15hp 415/3/50 DOL	
2 020		2	Connector	
	4107 6514 19		DX 10hp 415/3/50 DOL	
	4107 6514 19		DX 15hp 415/3/50 DOL	
2 030		AR	Conduit	
	4107 6514 11		DX 10hp 415/3/50 DOL	
	4107 6514 11		DX 15hp 415/3/50 DOL	
2 040		AR	Copper wire black	
	4107 6509 24		DX 10hp 415/3/50 DOL	
	4107 6509 24		DX 15hp 415/3/50 DOL	
2 050		AR	Copper wire green	
	4107 6509 25		DX 10hp 415/3/50 DOL	
	4107 6509 25		DX 15hp 415/3/50 DOL	
2 060		2	Elbow	
	4107 6514 24		DX 10hp 415/3/50 DOL	
	4107 6514 24		DX 15hp 415/3/50 DOL	
2 070		4	Washer	
	4107 6509 83		DX 10hp 415/3/50 DOL	
	4107 6509 83		DX 15hp 415/3/50 DOL	
3 010	4107 6513 86	4	Cable dryer switching valve	
3 020	4107 6510 89	1	Cable dewpoint sensor	
3 030	4107 6509 02	5	Cable gland	

 24

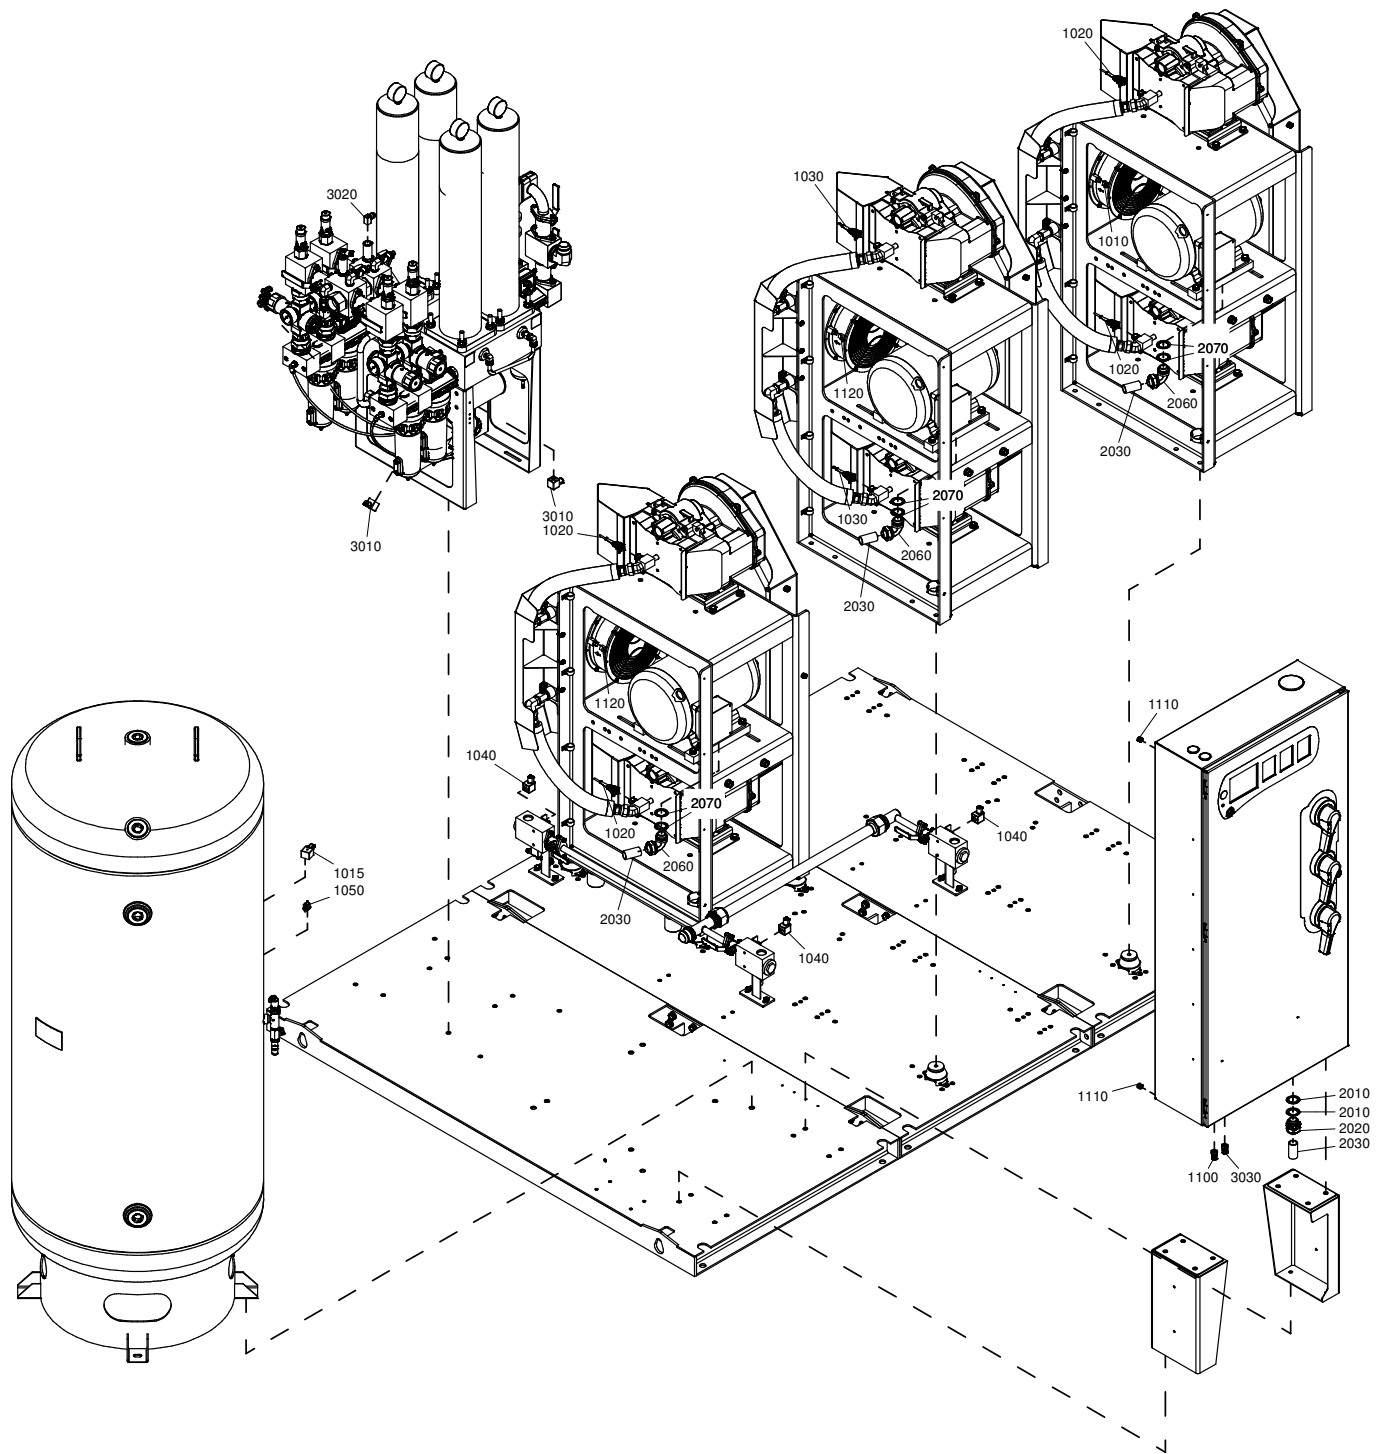

4107 8558 35-01

Cable group and motor wire TX 10-15hp

24

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6507 08	1	Power cord fan	
1 015	4107 6515 40	1	Cable	
1 020	4107 6511 36	4	Cable RTD	
1 030	4107 6511 37	2	Cable RTD	
1 040	4107 6513 86	3	Cable solenoid/Backup pressure switch	
1 050	4107 6511 38	1	Cable pressure transducer	
1 070	4107 6524 19	AR	Wire harness	
1 100	4107 6509 02	14	Cable gland	
1 110	4107 6519 14	4	Plug	
1 120	4107 6507 09	2	Fan power cord 20' 45deg	
1 140	4107 6512 77	AR	Tube	
2 010		6	Washer	
	4107 6509 83		TX 10hp 415/3/50 DOL	
	4107 6509 83		TX 15hp 415/3/50 DOL	
2 020		3	Connector	
	4107 6514 19		TX 10hp 415/3/50 DOL	
	4107 6514 19		TX 15hp 415/3/50 DOL	
2 030		AR	Conduit	
	4107 6514 11		TX 10hp 415/3/50 DOL	
	4107 6514 11		TX 15hp 415/3/50 DOL	
2 040		AR	Copper wire black	
	4107 6509 24		TX 10hp 415/3/50 DOL	
	4107 6509 24		TX 15hp 415/3/50 DOL	
2 050		AR	Copper wire green	
	4107 6509 25		TX 10hp 415/3/50 DOL	
	4107 6509 25		TX 15hp 415/3/50 DOL	
2 060		3	Elbow	
	4107 6514 24		TX 10hp 415/3/50 DOL	
	4107 6514 24		TX 15hp 415/3/50 DOL	
2 070		6	Washer	
	4107 6509 83		TX 10hp 415/3/50 DOL	
	4107 6509 83		TX 15hp 415/3/50 DOL	
3 010	4107 6513 86	4	Cable dryer switching valve	
3 020	4107 6510 89	1	Cable dewpoint sensor	
3 030	4107 6509 02	5	Cable gland	




Cable group and motor wire QX 10-15hp

25

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6507 08	1	Power cord fan	
1 015	4107 6515 40	1	Cable	
1 020	4107 6507 09	3	Fan power cord 20' 1 45deg	
1 030	4107 6511 36	6	Cable RTD	
1 040	4107 6511 37	2	Cable RTD	
1 050	4107 6513 86	4	Cable solenoid/Backup pressure switch	
1 060	4107 6511 38	1	Cable pressure transducer	
1 080	4107 6524 19	AR	Wire harness	
1 120	4107 6509 02	18	Cable gland	
1 130	4107 6519 14	4	Plug	
1 150	4107 6512 77	AR	Tube	
2 010		8	Washer	
	4107 6509 83		QX 10hp 415/3/50 DOL	
	4107 6509 83		QX 15hp 415/3/50 DOL	
2 020		4	Connector	
	4107 6514 19		QX 10hp 415/3/50 DOL	
	4107 6514 19		QX 15hp 415/3/50 DOL	
2 030		AR	Conduit	
	4107 6514 11		QX 10hp 415/3/50 DOL	
	4107 6514 11		QX 15hp 415/3/50 DOL	
2 040		AR	Copper wire black	
	4107 6509 24		QX 10hp 415/3/50 DOL	
	4107 6509 24		QX 15hp 415/3/50 DOL	
2 050		AR	Copper wire green	
	4107 6509 25		QX 10hp 415/3/50 DOL	
	4107 6509 25		QX 15hp 415/3/50 DOL	
2 060		4	Elbow	
	4107 6514 24		QX 10hp 415/3/50 DOL	
	4107 6514 24		QX 15hp 415/3/50 DOL	
2 070		8	Washer	
	4107 6509 83		QX 10hp 415/3/50 DOL	
3 010	4107 6513 86	4	Cable dryer switching valve	
3 020	4107 6510 89	1	Cable dewpoint sensor	
3 030	4107 6509 02	5	Cable gland	

 26

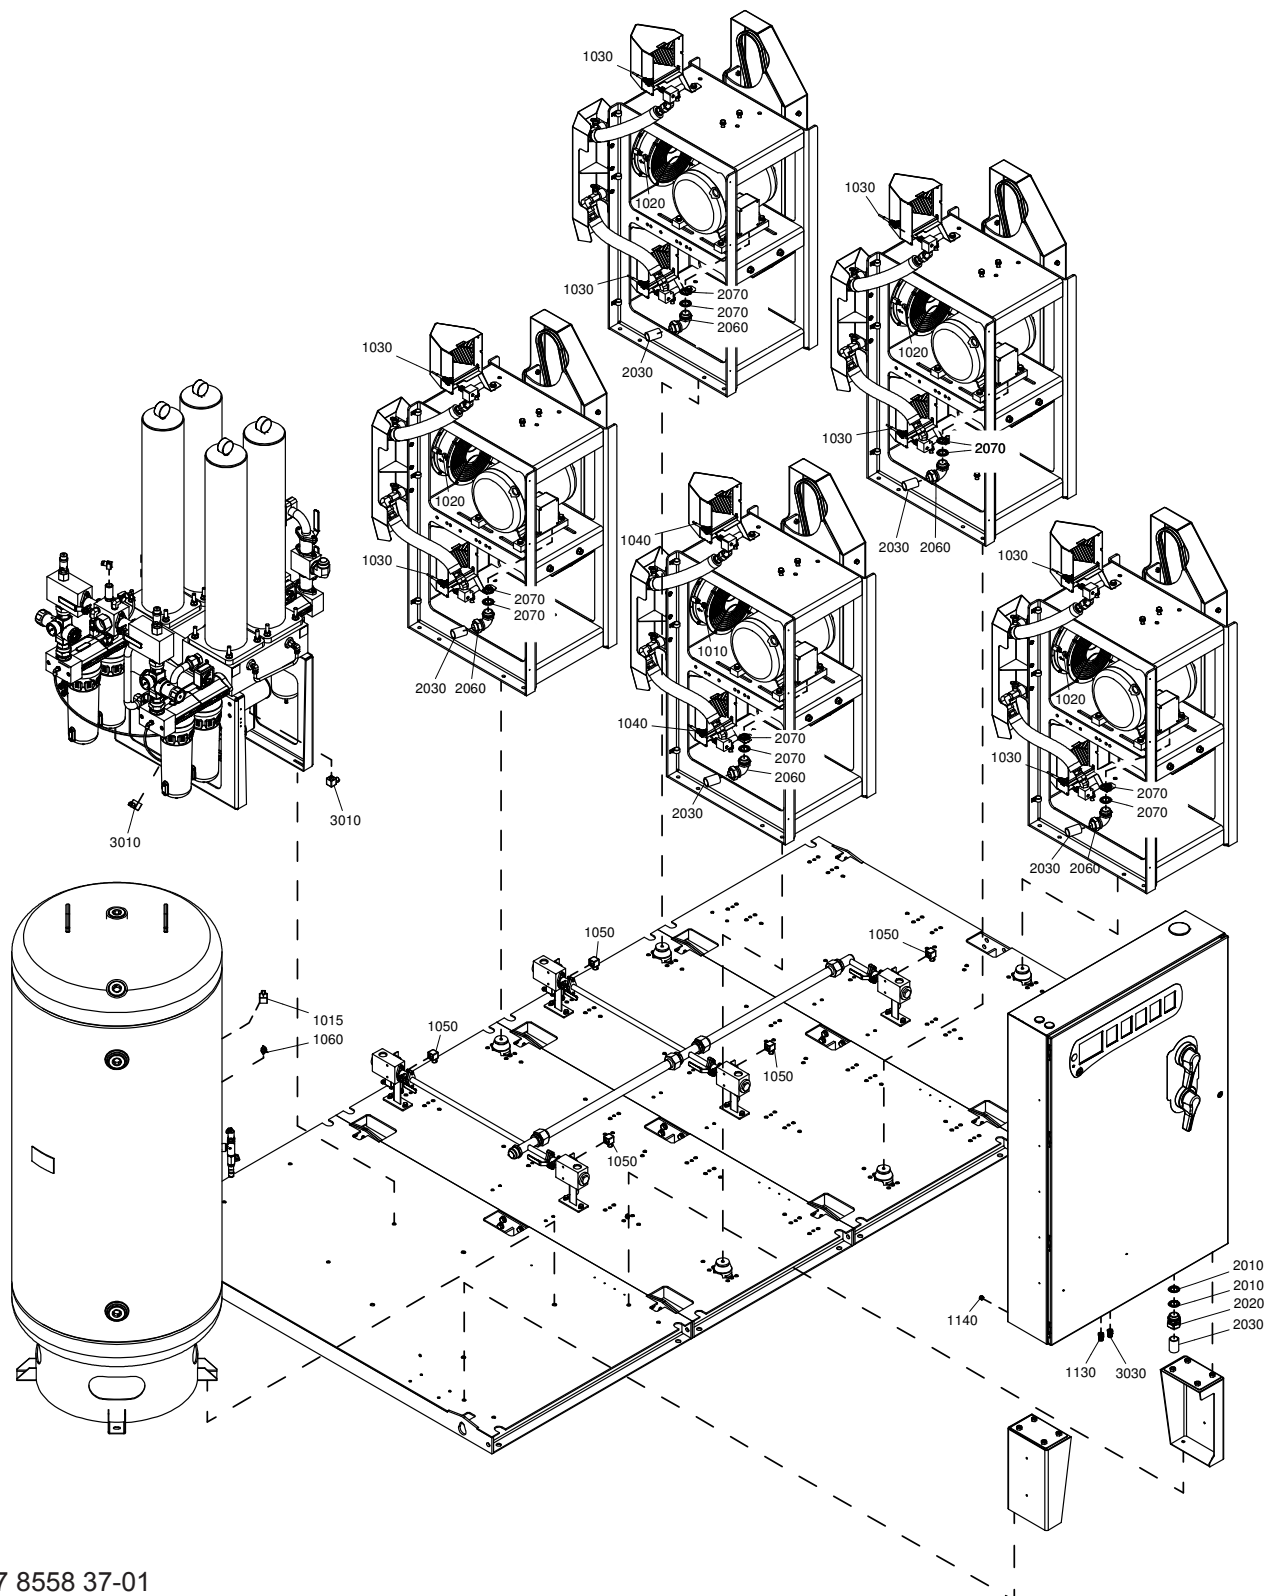


4107 8558 37-01

Cable group and motor wire PX 15hp

26

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6507 08	1	Power cord fan	
1 015	4107 6515 40	1	Cable	
1 020	4107 6507 09	4	Fan power cord 20' 1 45deg	
1 030	4107 6511 36	8	Cable RTD	
1 040	4107 6511 37	2	Cable RTD	
1 050	4107 6513 86	5	Cable solenoid/Backup pressure switch	
1 060	4107 6511 38	1	Cable pressure transducer	
1 080	4107 6524 19	AR	Wire harness	
1 130	4107 6509 02	22	Cable gland	
1 140	4107 6519 14	4	Plug	
1 160	4107 6512 77	AR	Tube	
2 010		10	Washer	
	4107 6509 83		PX 15hp 415/3/50 DOL	
2 020		5	Connector	
	4107 6514 19		PX 15hp 415/3/50 DOL	
2 030		AR	Conduit	
	4107 6514 11		PX 15hp 415/3/50 DOL	
2 040		AR	Copper wire black	
	4107 6509 24		PX 15hp 415/3/50 DOL	
2 050		AR	Copper wire green	
	4107 6509 25		PX 15hp 415/3/50 DOL	
2 060		5	Elbow	
	4107 6514 24		PX 15hp 415/3/50 DOL	
2 070		10	Washer	
	4107 6509 83		PX 15hp 415/3/50 DOL	
3 010	4107 6513 86	4	Cable dryer switching valve	
3 020	4107 6510 89	1	Cable dewpoint sensor	
3 030	4107 6509 02	5	Cable gland	

 27

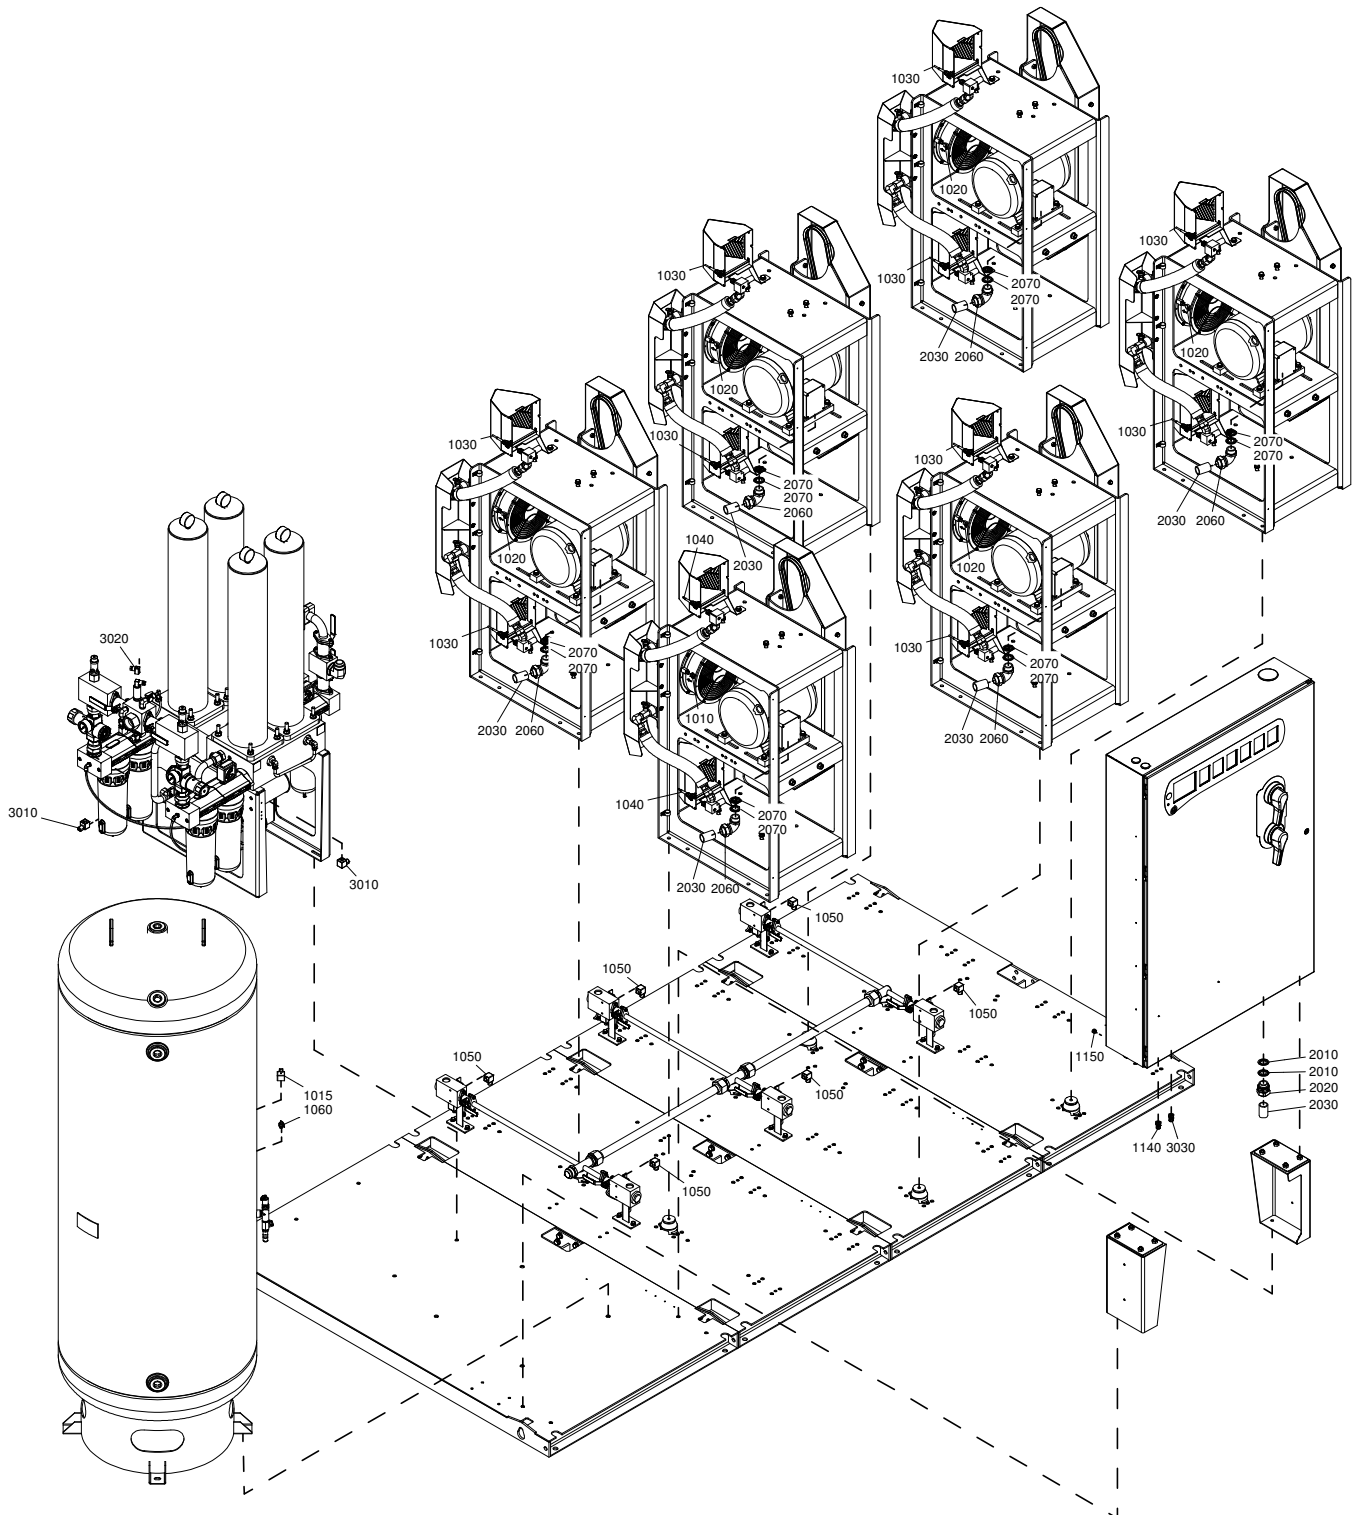


4107 8558 38-01

Cable group and motor wire HX 15hp

27

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6507 08	1	Power cord fan	
1 015	4107 6515 40	1	Cable	
1 020	4107 6507 09	5	Fan power cord 20' 1 45deg	
1 030	4107 6511 36	10	Cable RTD	
1 040	4107 6511 37	2	Cable RTD	
1 050	4107 6513 86	6	Cable solenoid/Backup pressure switch	
1 060	4107 6511 38	1	Cable pressure transducer	
1 080	4107 6524 19	AR	Wire harness	
1 140	4107 6509 02	26	Cable gland	
1 150	4107 6519 14	4	Plug	
1 170	4107 6512 77	AR	Tube	
2 010		12	Washer	
	4107 6509 83		HX 15hp 415/3/50 DOL	
2 020		6	Connector	
	4107 6514 19		HX 15hp 415/3/50 DOL	
2 030		AR	Conduit	
	4107 6514 11		HX 15hp 415/3/50 DOL	
2 040		AR	Copper wire black	
	4107 6509 24		HX 15hp 415/3/50 DOL	
2 050		AR	Copper wire green	
	4107 6509 25		HX 15hp 415/3/50 DOL	
2 060		6	Elbow	
	4107 6514 24		HX 15hp 415/3/50 DOL	
2 070		12	Washer	
	4107 6509 83		HX 15hp 415/3/50 DOL	
3 010	4107 6513 86	4	Cable dryer switching valve	
3 020	4107 6510 89	1	Cable dewpoint sensor	
3 030	4107 6509 02	5	Cable gland	

 28

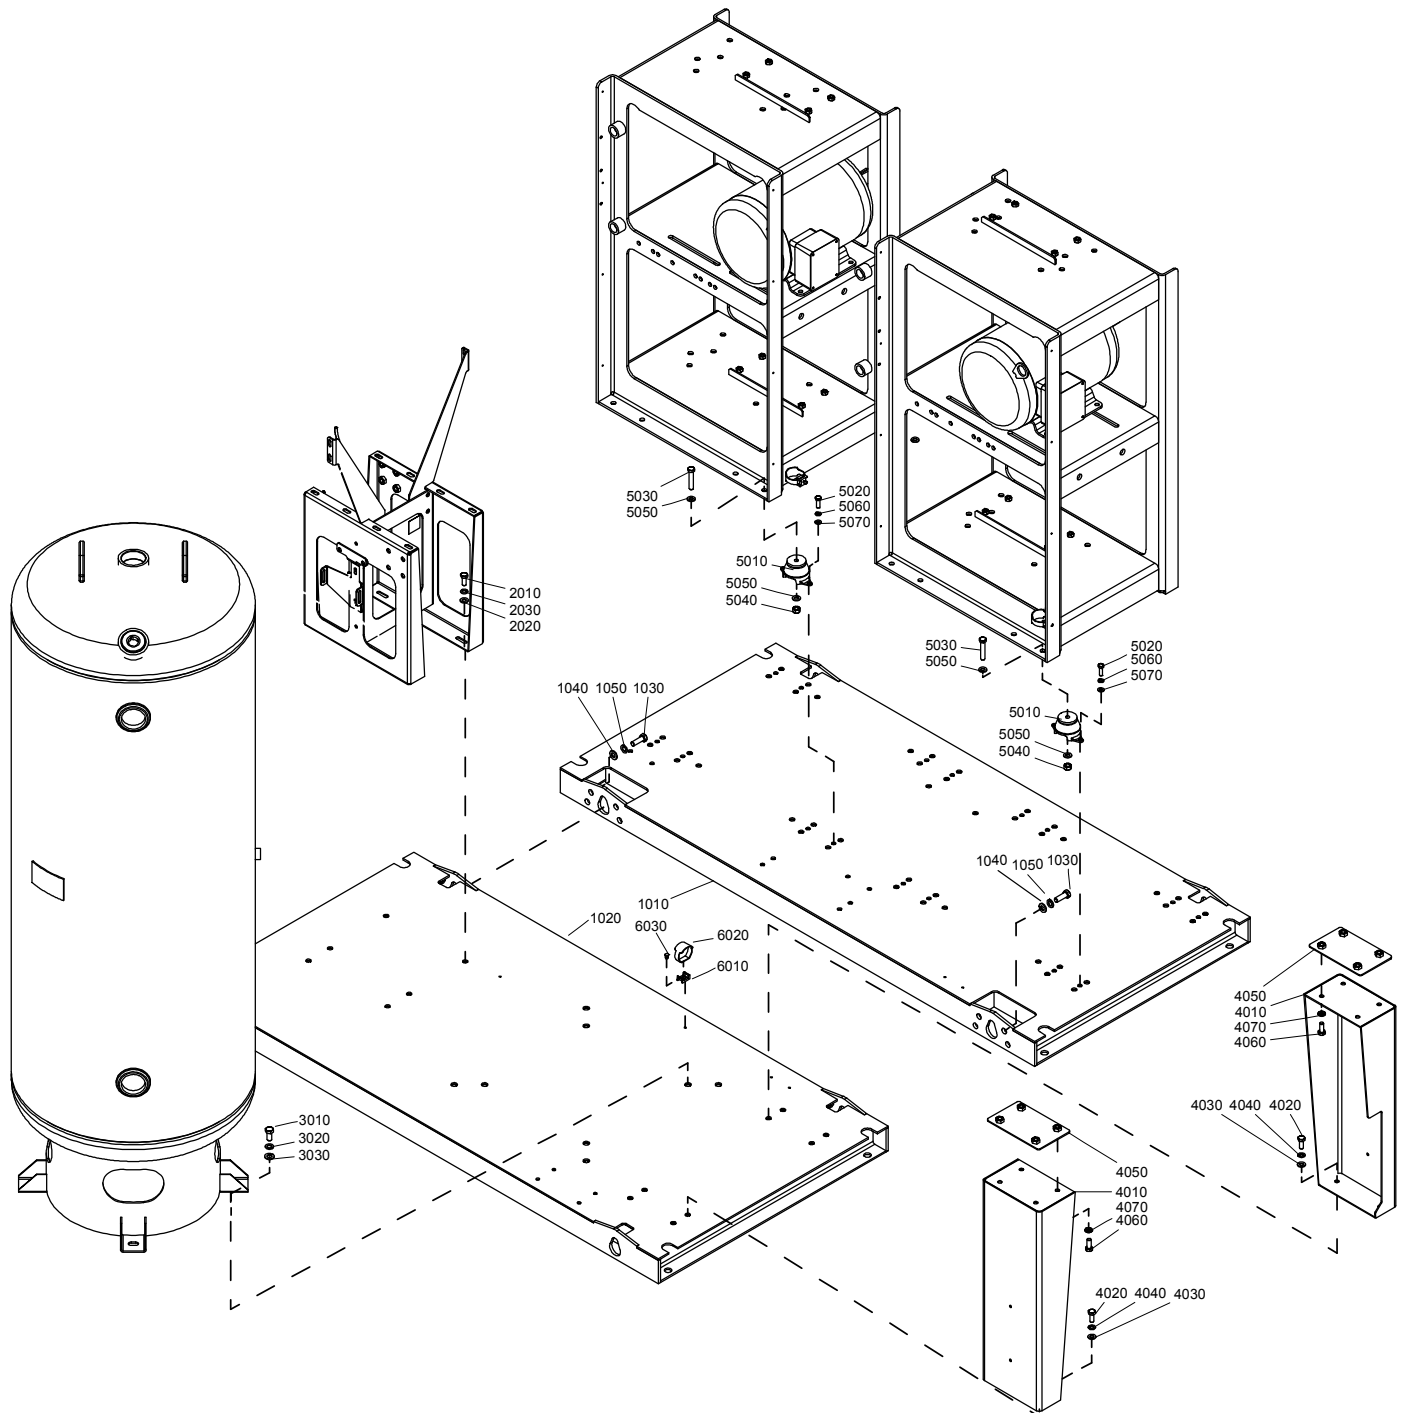


4107 8525 30-02

Base assembly and mounting hardware DX 10-15hp

28

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6506 92	1	Base frame	
1 020	4107 6506 67	1	Base frame	
1 030	0147 1402 03	8	Screw	
1 040	0301 2358 00	8	Washer	
1 050	0333 2236 00	8	Spring washer	
2 010	0147 1362 03	4	Screw	
2 020	0301 2344 00	4	Washer	
2 030	0333 2230 00	4	Spring washer	
3 010	0147 1400 03	4	Screw	
3 020	0333 2236 00	4	Spring washer	
3 030	0301 2358 00	4	Washer	
4 010	4107 6506 68	2	Bracket	
4 020	0147 1362 03	4	Screw	
4 030	0301 2344 00	4	Washer	
4 040	0333 2230 00	4	Spring washer	
4 050	4107 6518 02	2	Bracket	
4 060	0147 1362 03	8	Screw	
4 070	4107 6518 03	8	Bonded washer	
5 010	4107 6504 74	8	Vibration damper	
5 020	0147 1325 03	16	Screw	
5 030	0147 1368 03	8	Screw	
5 040	0291 1111 00	8	Lock nut	
5 050	0301 2344 00	16	Washer	
5 060	0333 2225 00	16	Spring washer	
5 070	0301 2335 00	16	Washer	
6 010	4107 6517 22	3	Saddle	
6 020	4107 6517 23	3	Strap	
6 030	4107 6525 21	3	Rivet	

 29

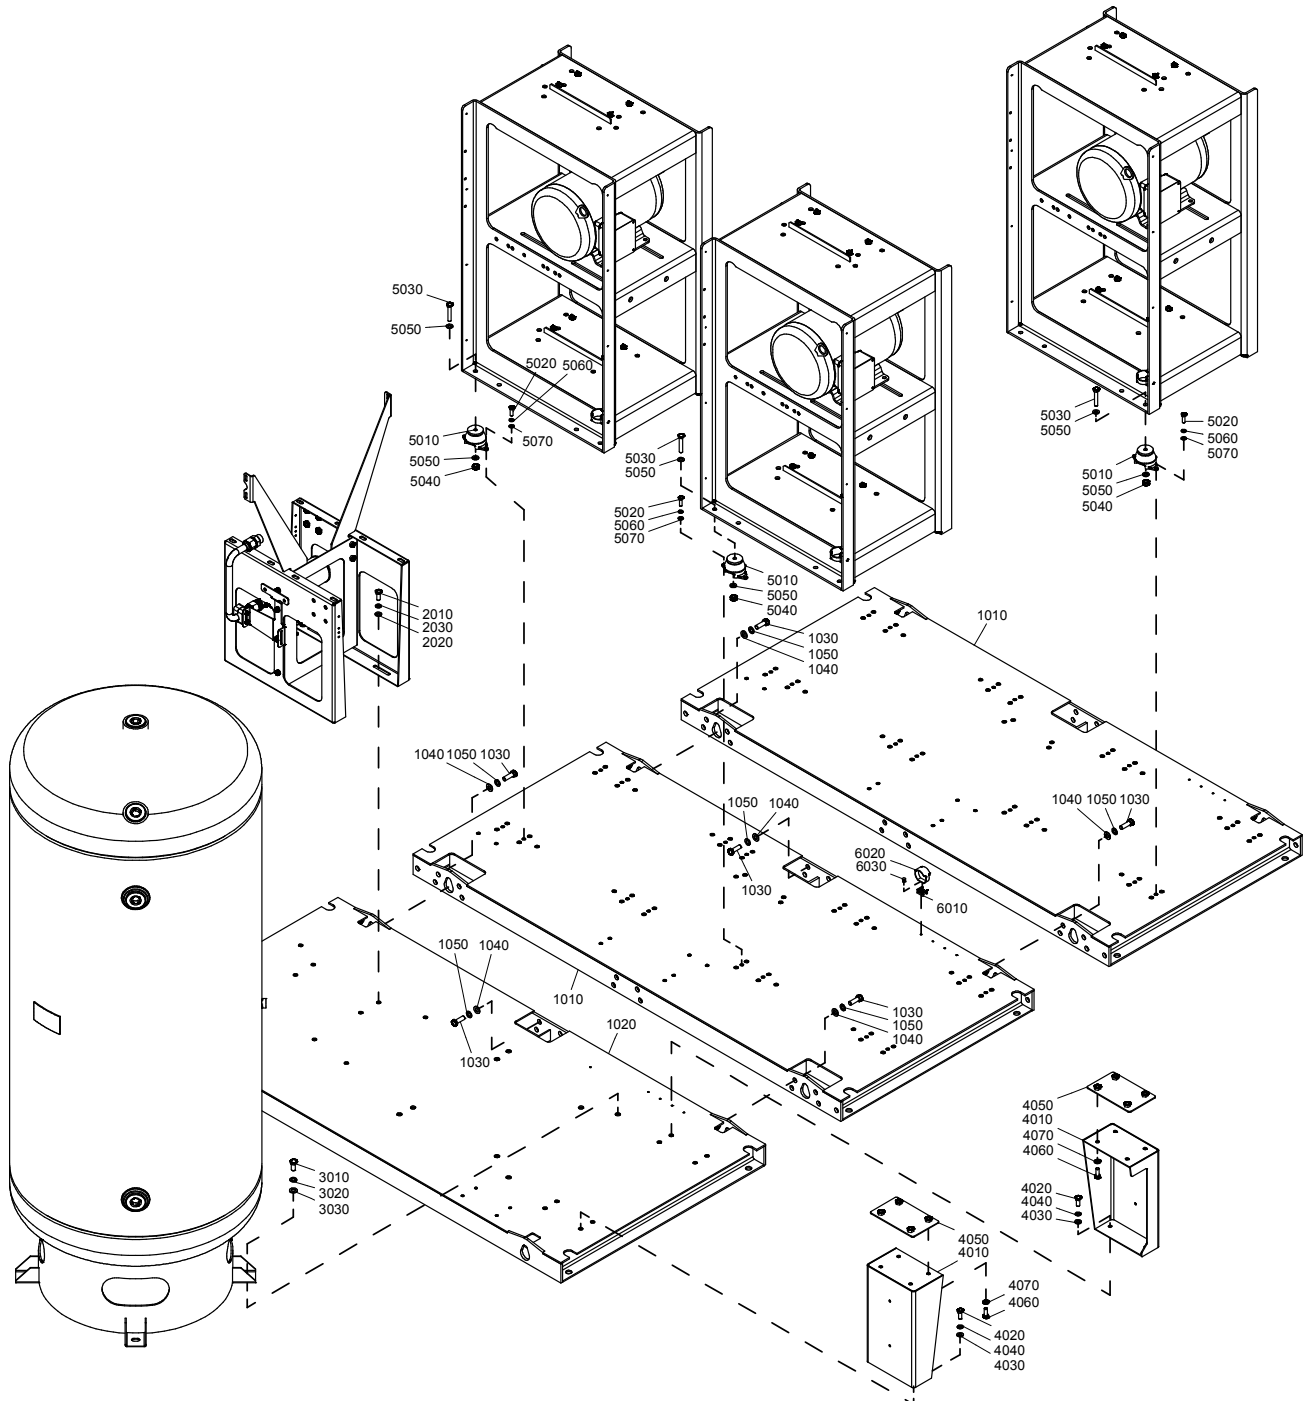


4107 8525 31-02

Base assembly and mounting hardware TX 10-15hp

29

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6505 18	2	Base frame	
1 020	4107 6504 25	1	Base frame	
1 030	0147 1402 03	24	Screw	
1 040	0301 2358 00	24	Washer	
1 050	0333 2236 00	24	Spring washer	
2 010	0147 1362 03	4	Screw	
2 020	0301 2344 00	4	Washer	
2 030	0333 2230 00	4	Spring washer	
3 010	0147 1400 03	4	Screw	
3 020	0333 2236 00	4	Spring washer	
3 030	0301 2358 00	4	Washer	
4 010	4107 6513 46	2	Bracket	
4 020	0147 1362 03	4	Screw	
4 030	0301 2344 00	4	Washer	
4 040	0333 2230 00	4	Spring washer	
4 050	4107 6518 02	2	Bracket	
4 060	0147 1362 03	8	Screw	
4 070	4107 6518 03	8	Bonded washer	
5 010	4107 6504 74	12	Vibration damper	
5 020	0147 1325 03	24	Screw	
5 030	0147 1368 03	12	Screw	
5 040	0291 1111 00	12	Lock nut	
5 050	0301 2344 00	24	Washer	
5 060	0333 2225 00	24	Spring washer	
5 070	0301 2335 00	24	Washer	
6 010	4107 6517 22	6	Saddle	
6 020	4107 6517 23	6	Strap	
6 030	4107 6525 21	6	Rivet	

 30

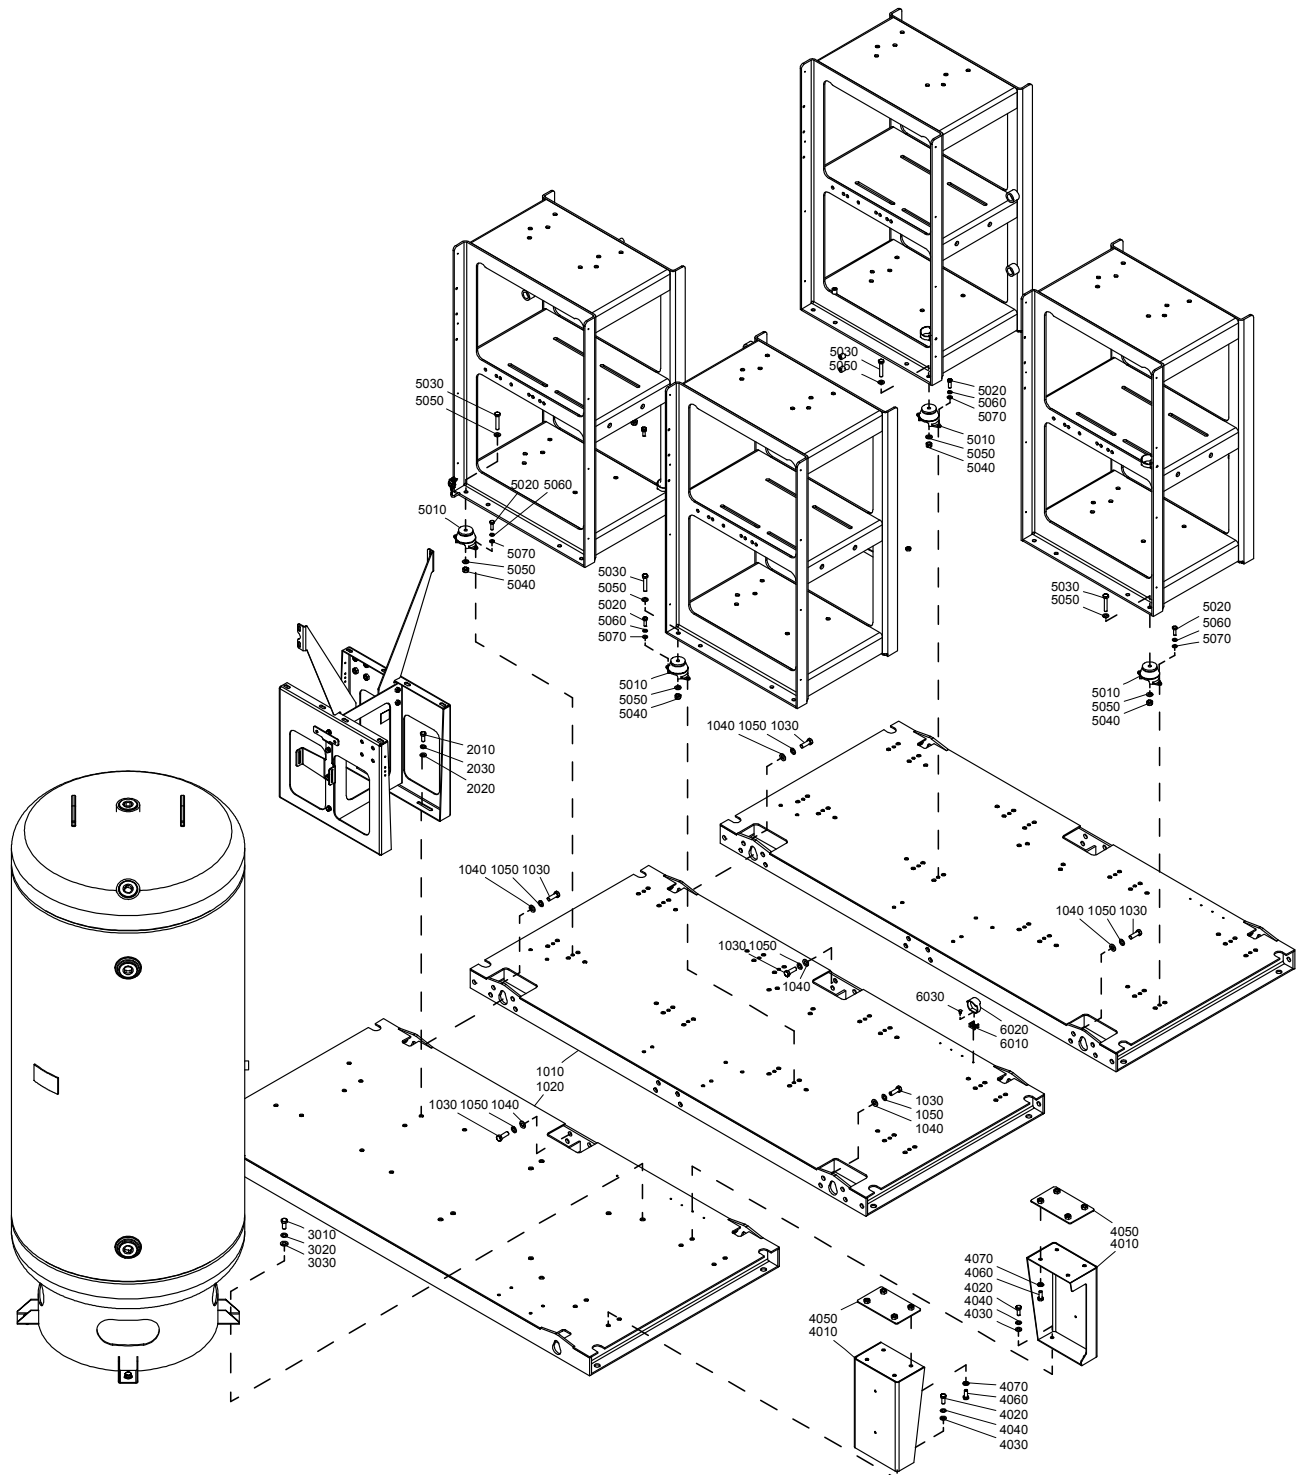

4107 8525 32-02

Base assembly and mounting hardware QX 10-15hp

30

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6505 18	2	Base frame	
1 020	4107 6504 25	1	Base frame	
1 030	0147 1402 03	24	Screw	
1 040	0301 2358 00	24	Washer	
1 050	0333 2236 00	24	Spring washer	
2 010	0147 1362 03	4	Screw	
2 020	0301 2344 00	4	Washer	
2 030	0333 2230 00	4	Spring washer	
3 010	0147 1400 03	4	Screw	
3 020	0333 2236 00	4	Spring washer	
3 030	0301 2358 00	4	Washer	
4 010	4107 6513 46	2	Bracket	
4 020	0147 1362 03	4	Screw	
4 030	0301 2344 00	4	Washer	
4 040	0333 2230 00	4	Spring washer	
4 050	4107 6518 02	2	Bracket	
4 060	0147 1362 03	8	Screw	
4 070	4107 6518 03	8	Bonded washer	
5 010	4107 6504 74	16	Vibration damper	
5 020	0147 1325 03	32	Screw	
5 030	0147 1368 03	16	Screw	
5 040	0291 1111 00	16	Lock nut	
5 050	0301 2344 00	32	Washer	
5 060	0333 2225 00	32	Spring washer	
5 070	0301 2335 00	32	Washer	
6 010	4107 6517 22	6	Saddle	
6 020	4107 6517 23	6	Strap	
6 030	4107 6525 21	6	Rivet	




Base assembly and mounting hardware PX 15hp

31

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6505 18	3	Base frame	
1 020	4107 6514 64	1	Base frame	
1 030	0147 1402 03	36	Screw	
1 040	0301 2358 00	36	Washer	
1 050	0333 2236 00	36	Spring washer	
2 010	0147 1362 03	4	Screw	
2 020	0301 2344 00	4	Washer	
2 030	0333 2230 00	4	Spring washer	
3 010	0147 1400 03	4	Screw	
3 020	0333 2236 00	4	Spring washer	
3 030	0301 2358 00	4	Washer	
4 010	4107 6513 46	2	Bracket	
4 020	0147 1362 03	4	Screw	
4 030	0301 2344 00	4	Washer	
4 040	0333 2230 00	4	Spring washer	
4 050	4107 6518 02	2	Bracket	
4 060	0147 1362 03	8	Screw	
4 070	4107 6518 03	8	Bonded washer	
5 010	4107 6504 74	20	Vibration damper	
5 020	0147 1325 03	40	Screw	
5 030	0147 1368 03	20	Screw	
5 040	0291 1111 00	20	Lock nut	
5 050	0301 2344 00	40	Washer	
5 060	0333 2225 00	40	Spring washer	
5 070	0301 2335 00	40	Washer	
6 010	4107 6517 22	11	Saddle	
6 020	4107 6517 23	11	Strap	
6 030	4107 6525 21	11	Rivet	

 32

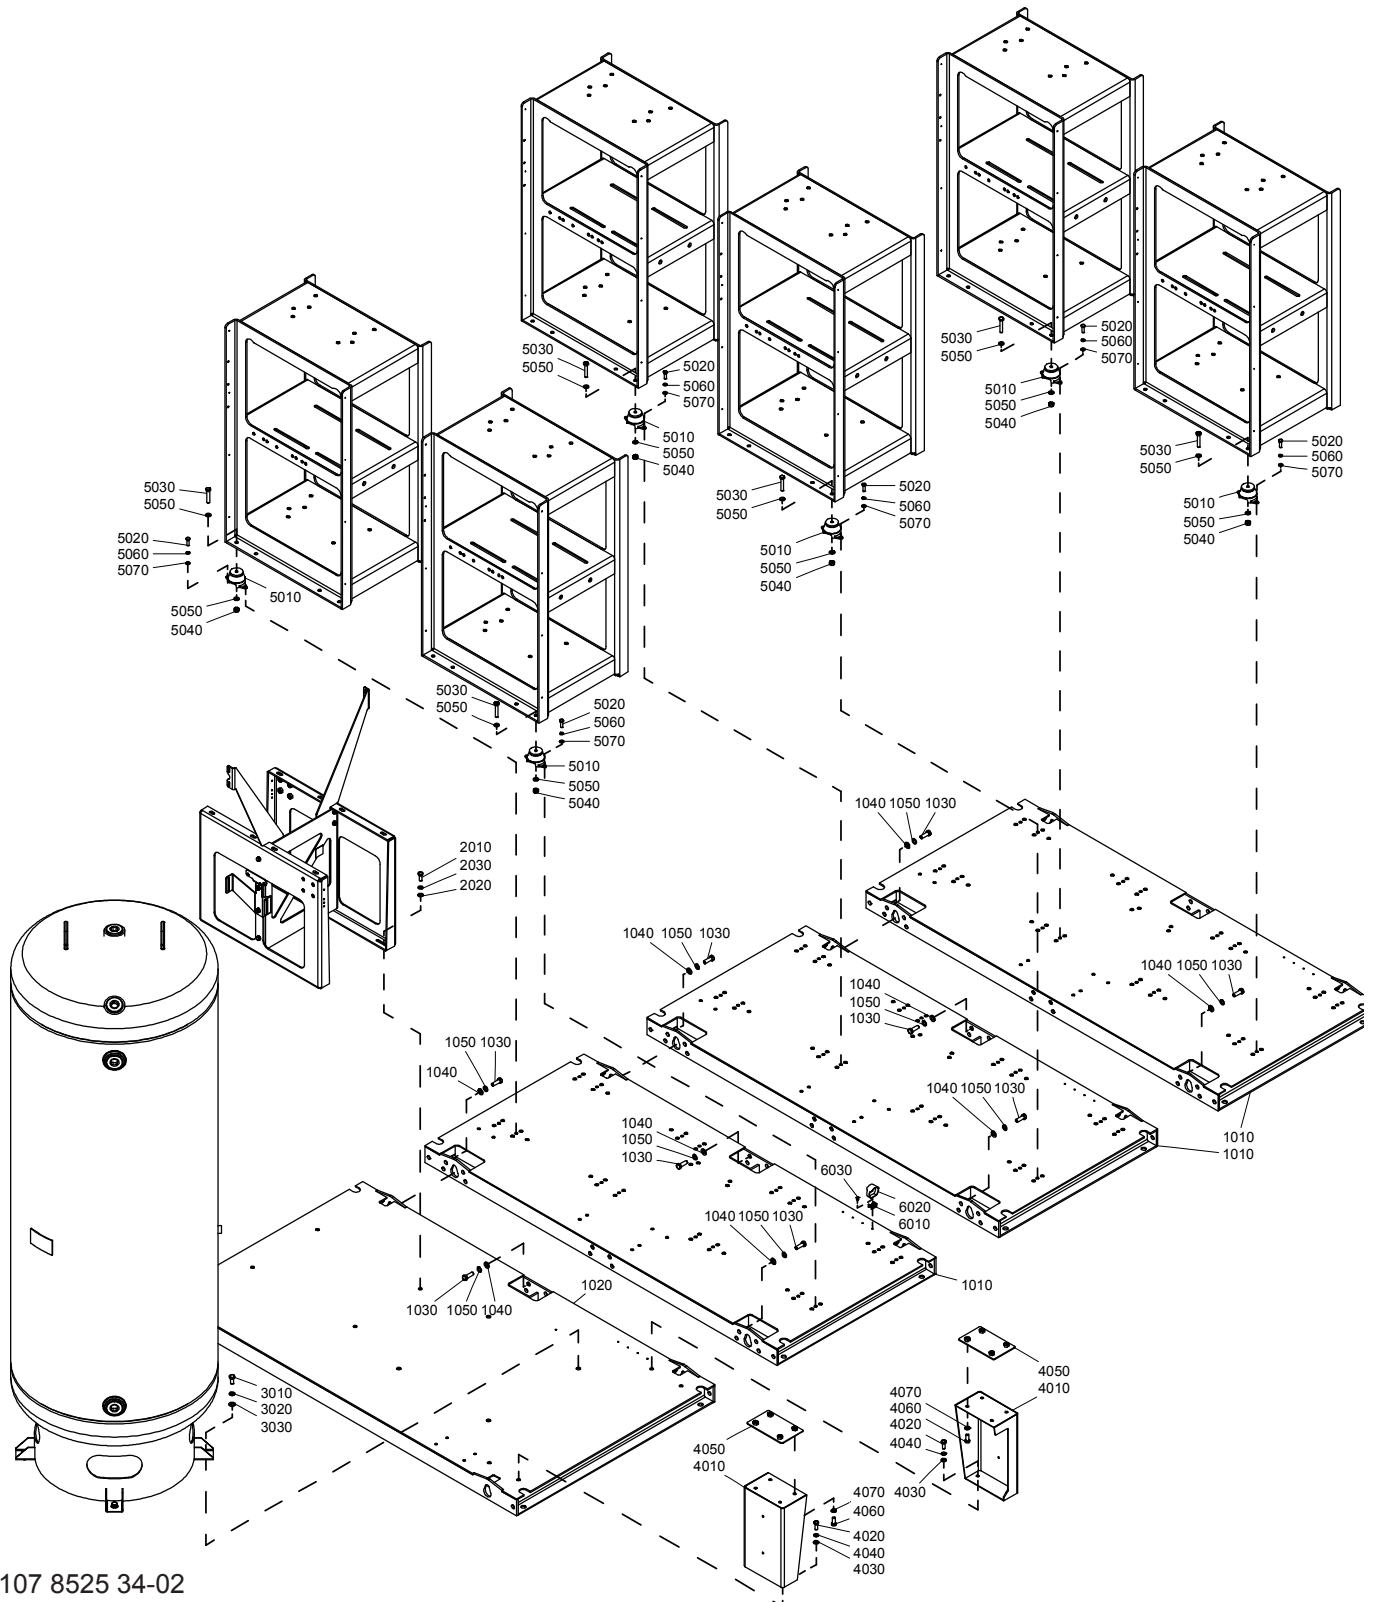


4107 8525 34-02

Base assembly and mounting hardware HX 15hp

32

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6505 18	3	Base frame	
1 020	4107 6514 64	1	Base frame	
1 030	0147 1402 03	36	Screw	
1 040	0301 2358 00	36	Washer	
1 050	0333 2236 00	36	Spring washer	
2 010	0147 1362 03	4	Screw	
2 020	0301 2344 00	4	Washer	
2 030	0333 2230 00	4	Spring washer	
3 010	0147 1400 03	4	Screw	
3 020	0333 2236 00	4	Spring washer	
3 030	0301 2358 00	4	Washer	
4 010	4107 6513 46	2	Bracket	
4 020	0147 1362 03	4	Screw	
4 030	0301 2344 00	4	Washer	
4 040	0333 2230 00	4	Spring washer	
4 050	4107 6518 02	2	Bracket	
4 060	0147 1362 03	8	Screw	
4 070	4107 6518 03	8	Bonded washer	
5 010	4107 6504 74	24	Vibration damper	
5 020	0147 1325 03	48	Screw	
5 030	0147 1368 03	24	Screw	
5 040	0291 1111 00	24	Lock nut	
5 050	0301 2344 00	48	Washer	
5 060	0333 2225 00	48	Spring washer	
5 070	0301 2335 00	48	Washer	
6 010	4107 6517 22	12	Saddle	
6 020	4107 6517 23	12	Strap	
6 030	4107 6525 21	12	Rivet	

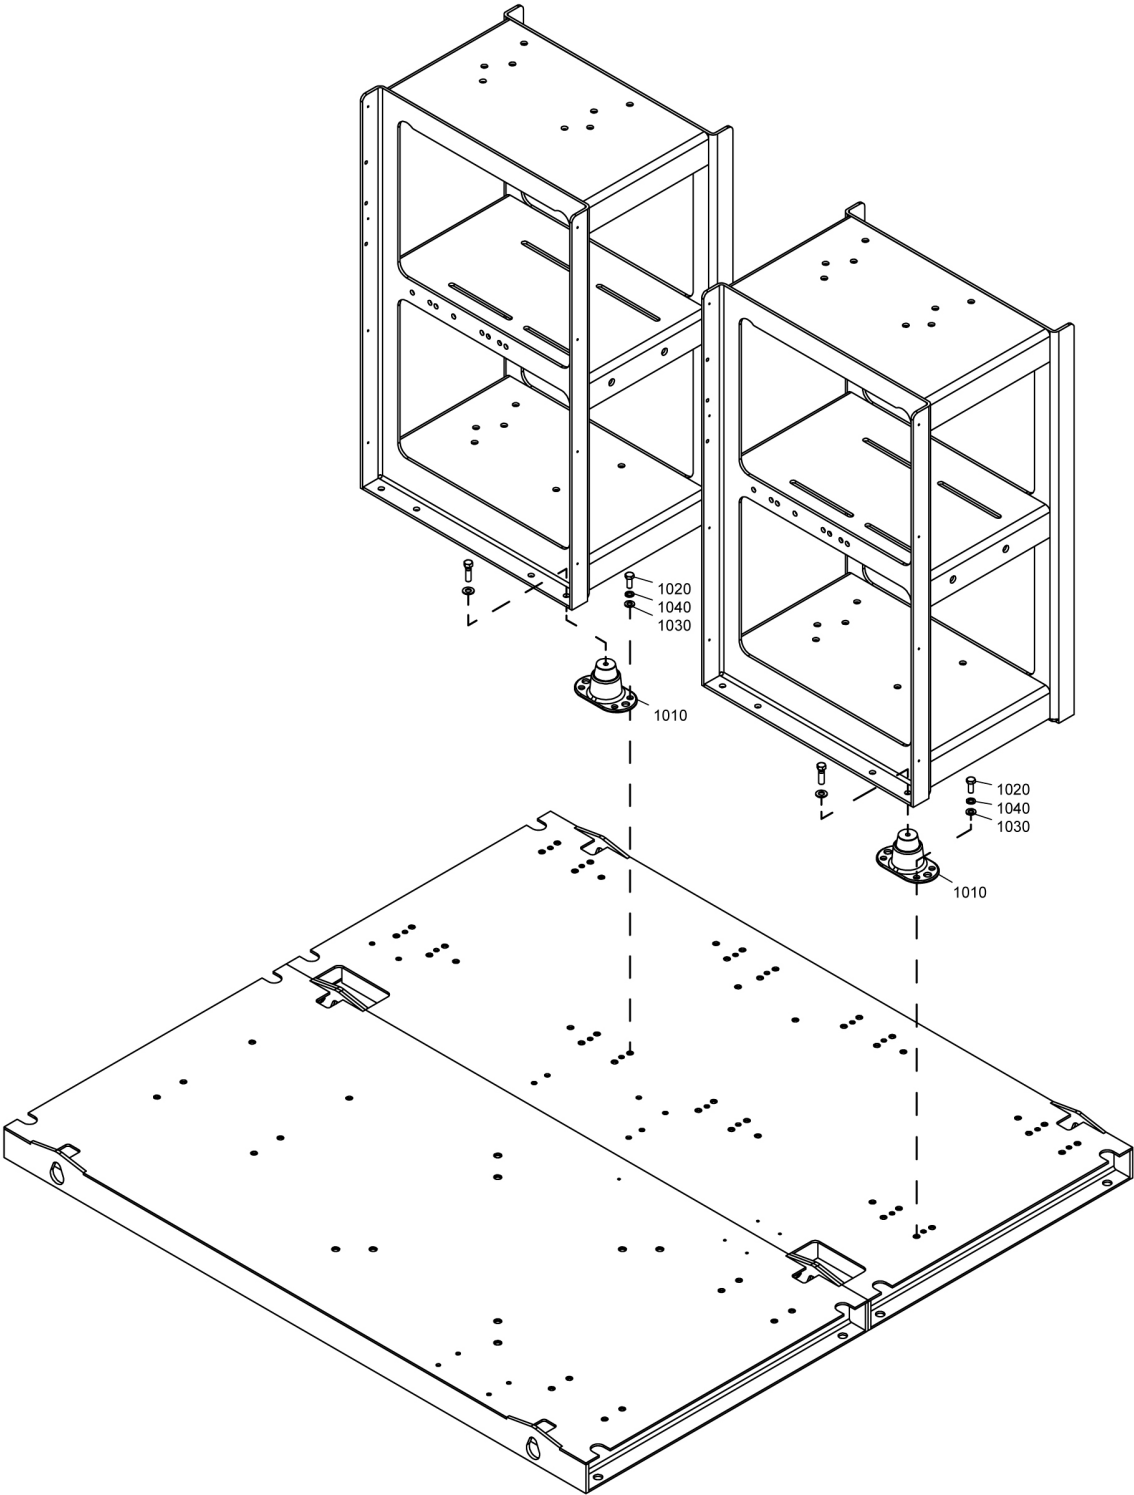 


4107 8525 41-01

Seismic isolator DX 10-15hp

33

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6516 17	8	Vibration damper	
1 020	0147 1362 03	32	Screw	
1 030	0301 2344 00	32	Washer	
1 040	0333 2230 00	32	Spring washer	

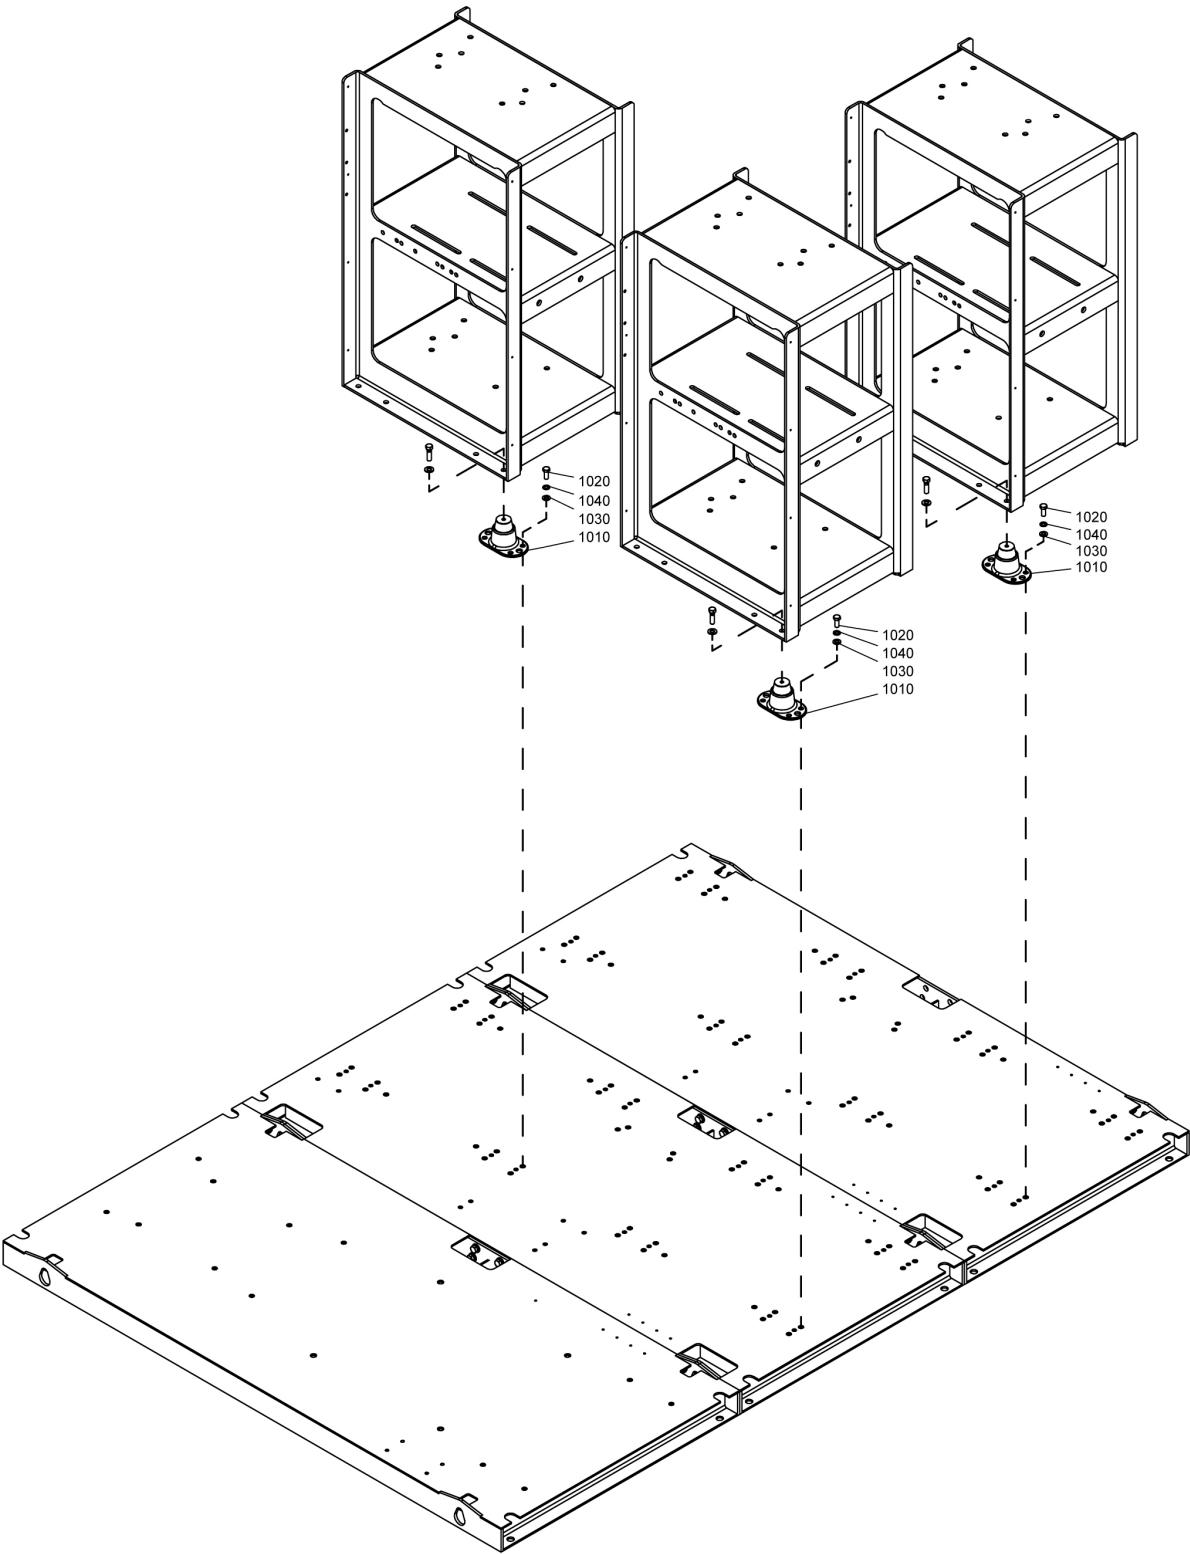 


4107 8525 42-01

Seismic isolator TX 10-15hp

34

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6516 17	12	Vibration damper	
1 020	0147 1362 03	48	Screw	
1 030	0301 2344 00	48	Washer	
1 040	0333 2230 00	48	Spring washer	

 35

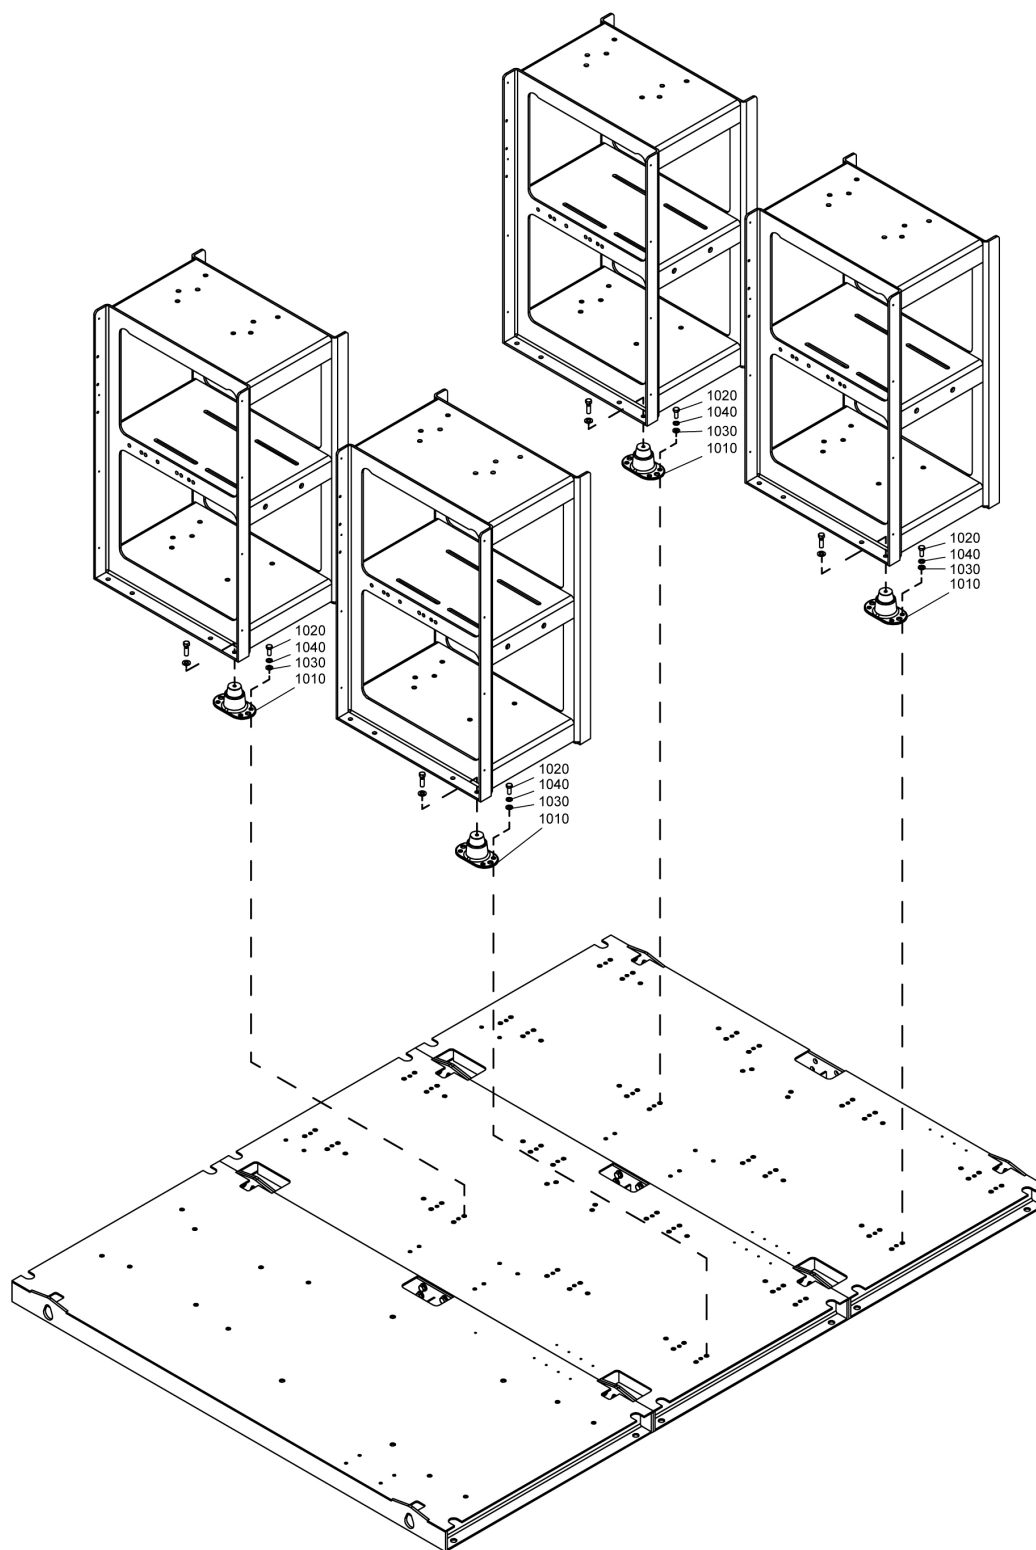


4107 8525 43-01

Seismic isolator QX 10-15hp

35

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6516 17	16	Vibration damper	
1 020	0147 1362 03	64	Screw	
1 030	0301 2344 00	64	Washer	
1 040	0333 2230 00	64	Spring washer	

 36

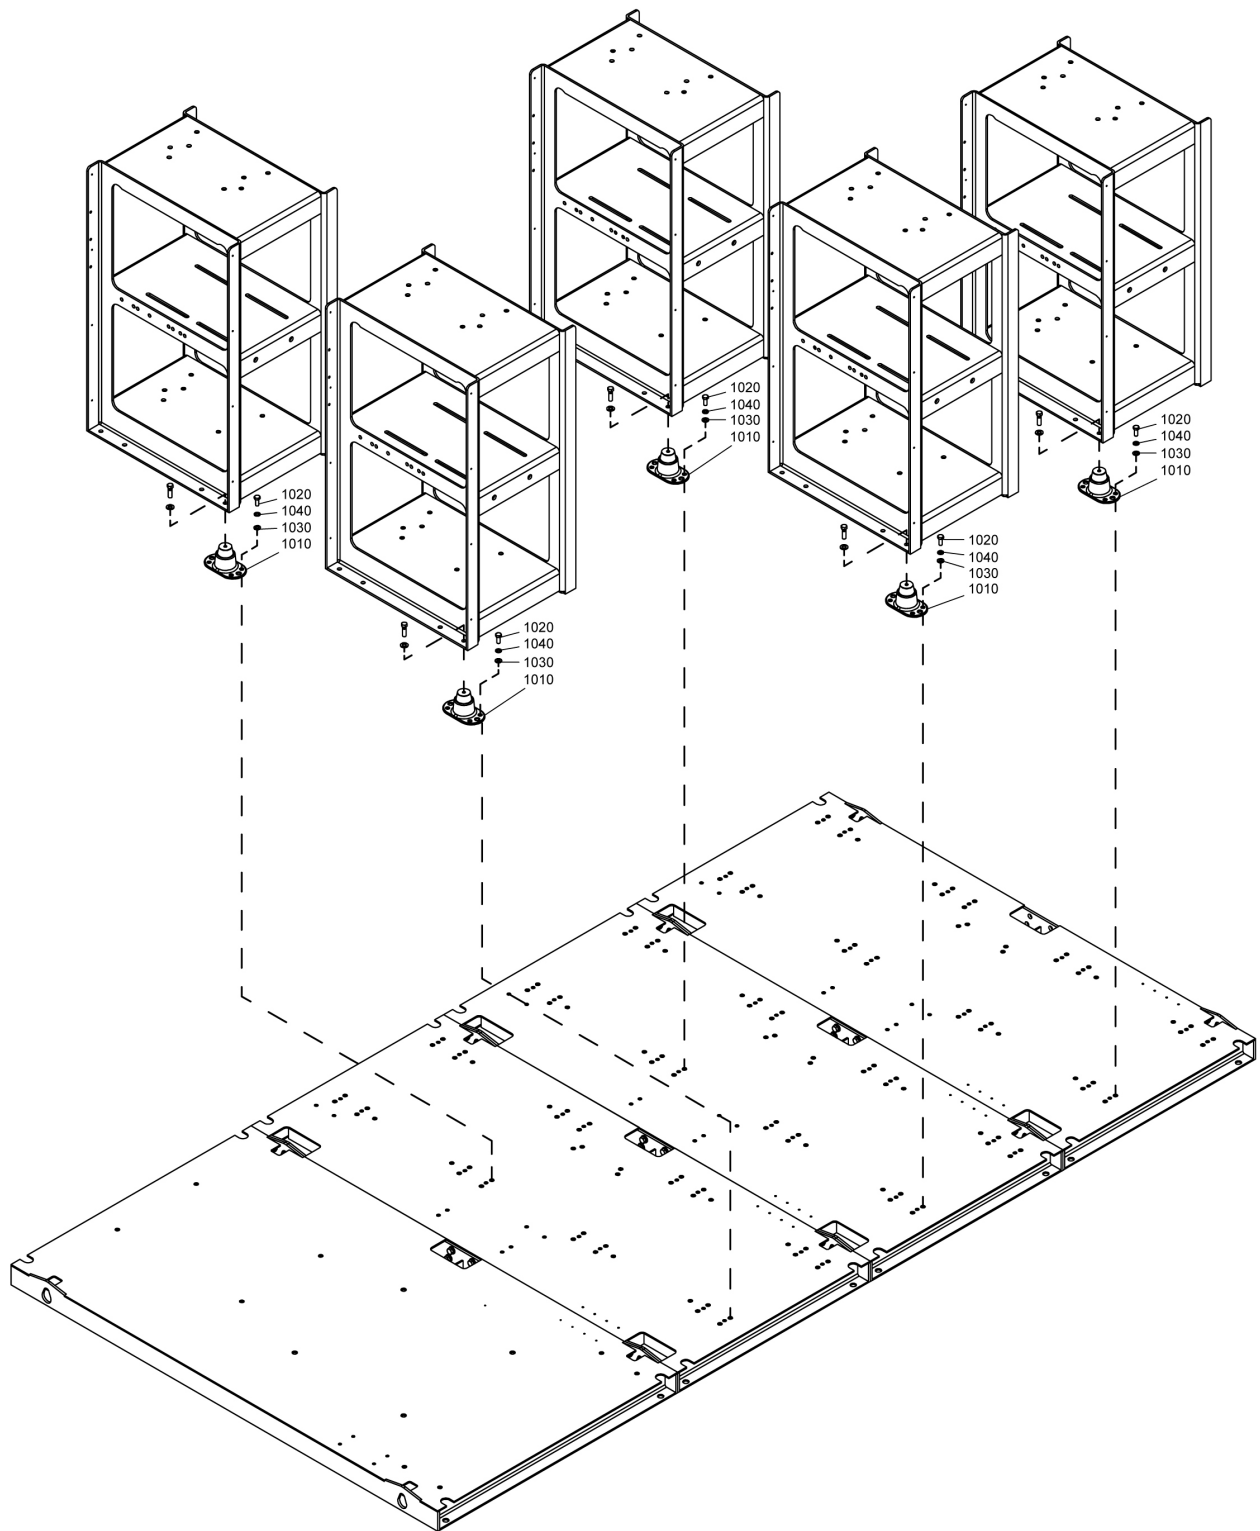


4107 8525 44-01

Seismic isolator PX 15hp

36

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6516 17	20	Vibration damper	
1 020	0147 1362 03	80	Screw	
1 030	0301 2344 00	80	Washer	
1 040	0333 2230 00	80	Spring washer	

 37

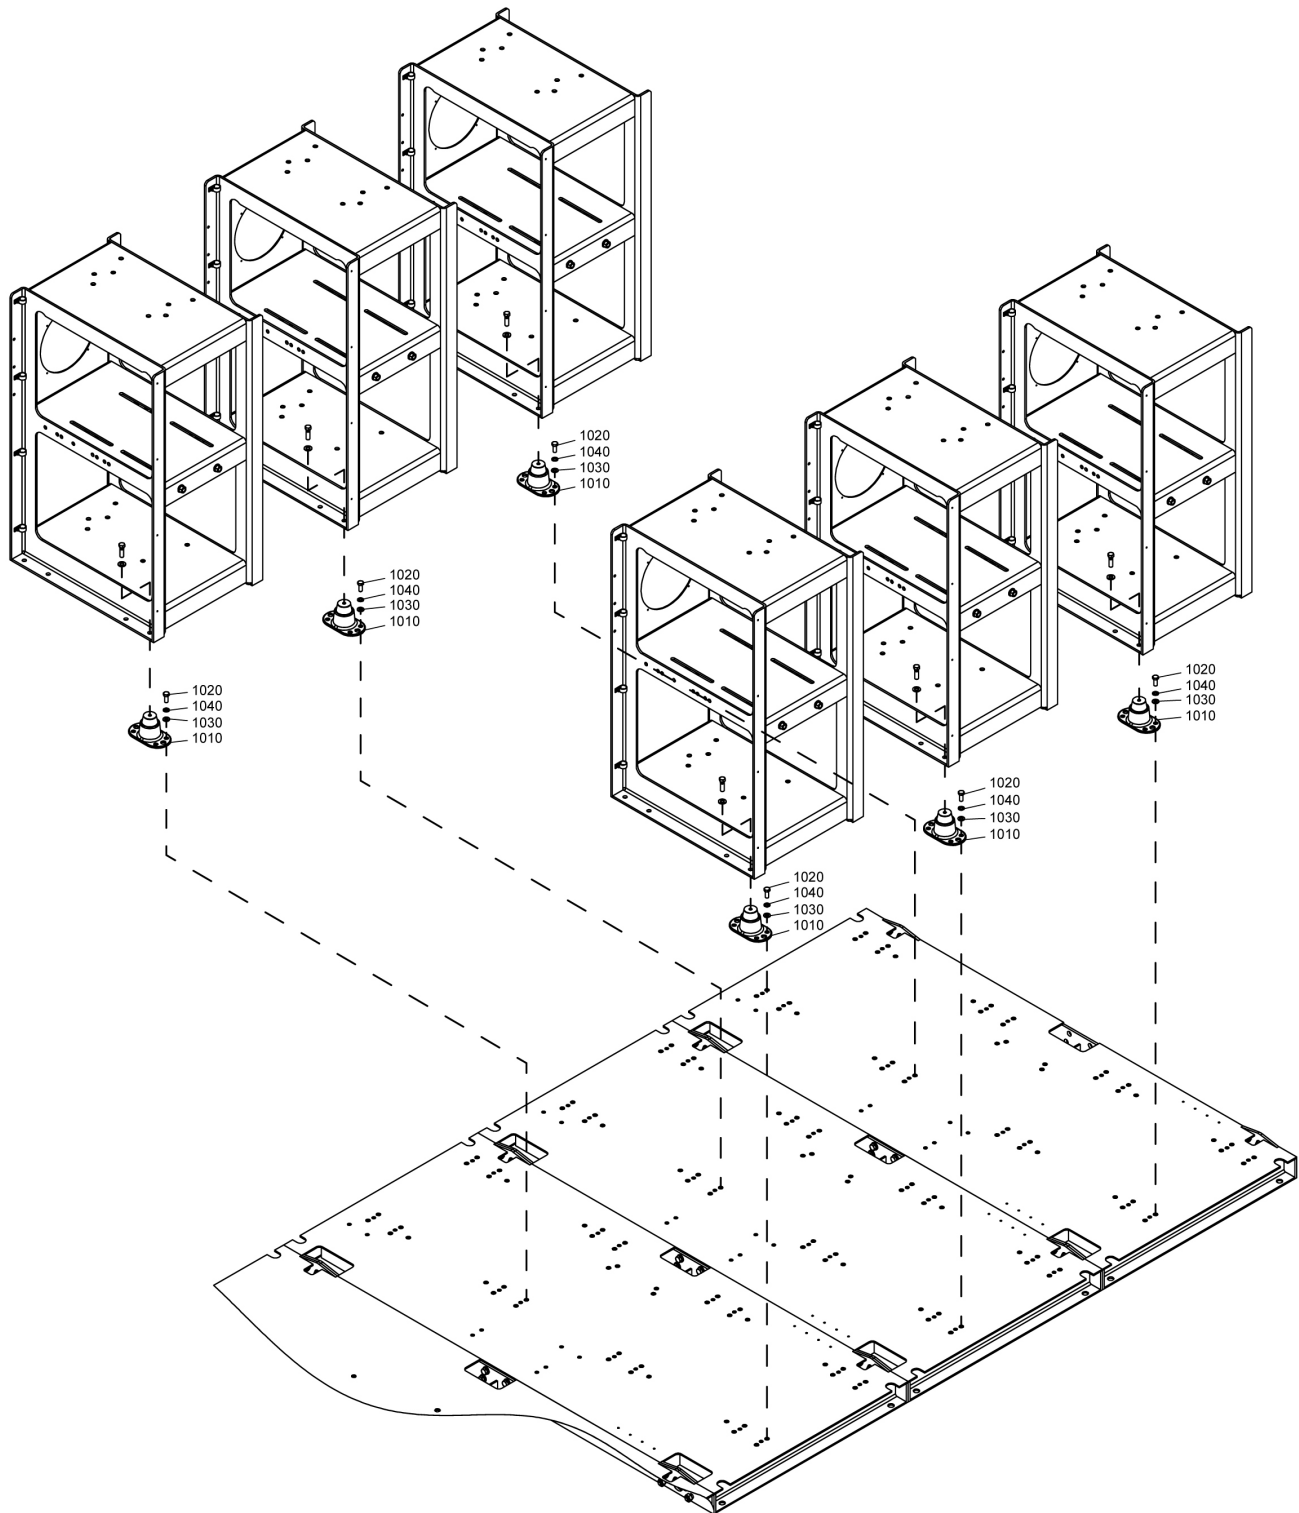


4107 8525 45-01

Seismic isolator HX 15hp

37

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6516 17	24	Vibration damper	
1 020	0147 1362 03	96	Screw	
1 030	0301 2344 00	96	Washer	
1 040	0333 2230 00	96	Spring washer	

 38

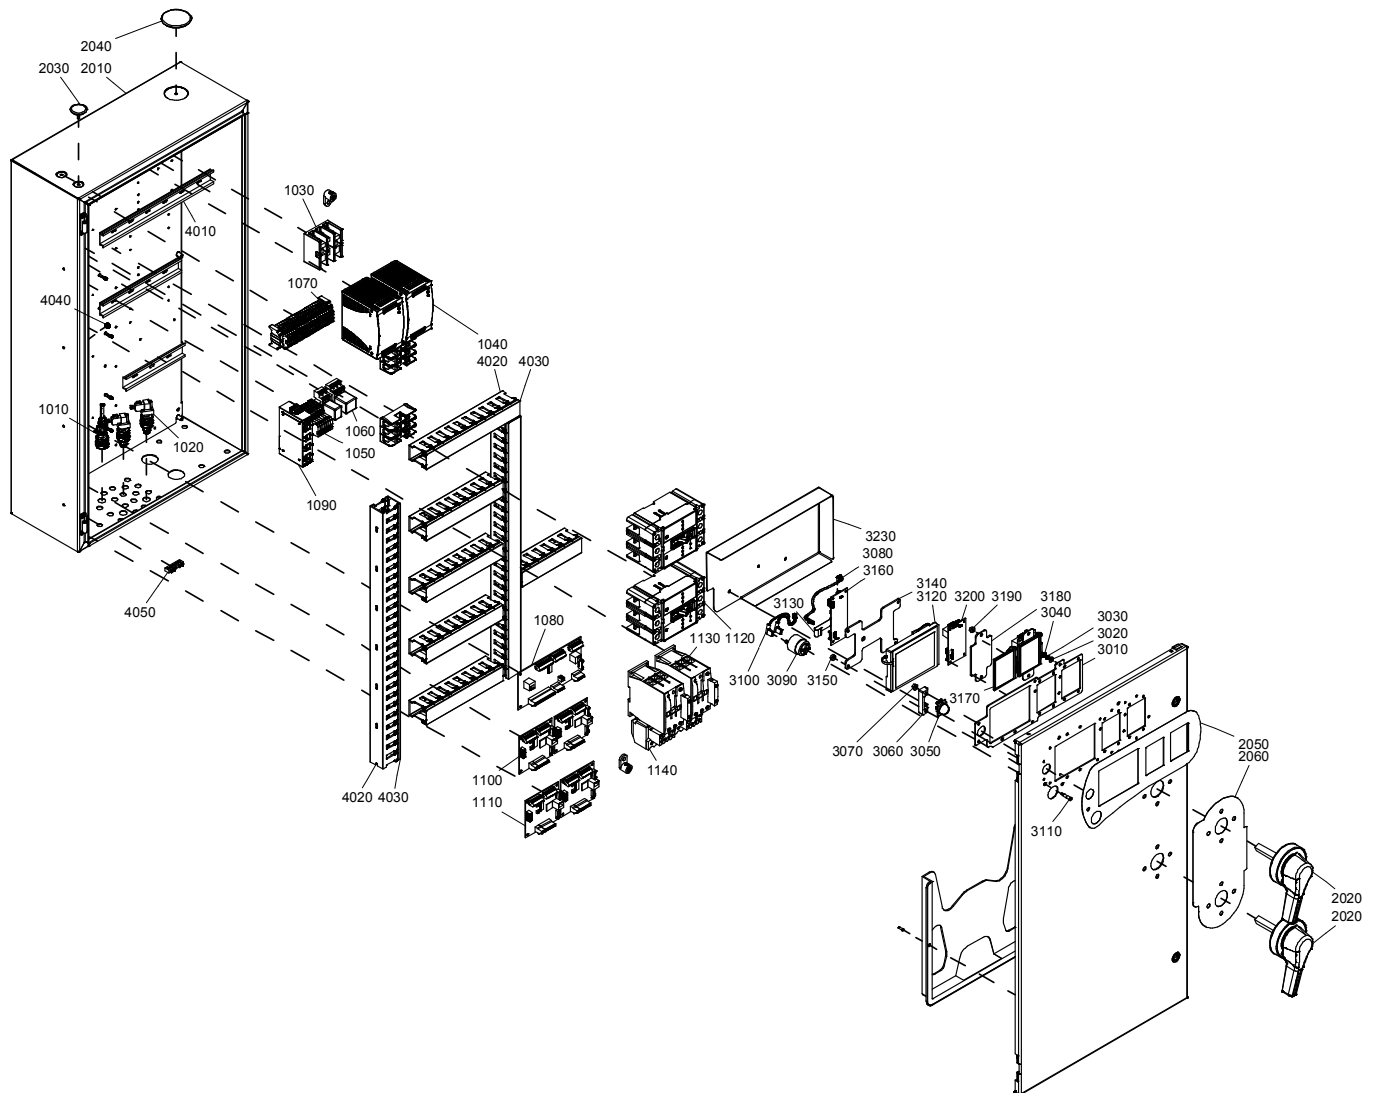


4107 8524 70-01

Control panel DX 10-15hp

38

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6511 32	1	Temperature probe	
1 020	4107 6507 33	2	Inlet vacuum switch	
1 030	4107 6507 37	1	Power distribution	
1 040		2	Power supply	
	4107 6506 91		10hp 415/3/50 DOL	
	4107 6506 91		15hp 415/3/50 DOL	
1 050	4107 7873 54	1	Fuse block	
	4107 6508 22 •	1	0.5A Fuse	
	4107 6508 24 •	4	1.0A Fuse	
	4107 6508 28 •	2	4.0A Fuse	
1 060	4107 7844 90	1	Relay DX	
	4107 6515 95 •	1	Relay 2-pole	
	4107 6507 98 •	1	Relay base 2-pole	
	4107 6515 96 •	1	Relay 3-pole	
	4107 6507 99 •	1	Relay base 3-pole	
1 070	4107 7845 75	1	Terminal block DX	
	4107 6507 44 •	22	Terminal	
	4107 6507 45 •	1	End plate	
	4107 6507 46 •	2	End stop	
1 080	4107 6511 91	1	Master PCB	
1 090	4107 6516 64	1	Ethernet hub	
1 100	4107 6511 84	2	Pump PCB DX	
1 110	4107 6511 84	2	Dryer PCB	
1 120		2	Circuit breaker	
	4107 6507 63		10hp 415/3/50 DOL	
	4107 6507 66		15hp 415/3/50 DOL	
1 130		2	Starter	
	4107 6508 44		10hp 415/3/50 DOL	
	4107 6508 45		15hp 415/3/50 DOL	
1 140		2	Overload	
	4107 6505 07		10hp 415/3/50 DOL	
	4107 6508 75		15hp 415/3/50 DOL	
2 010	4107 6530 74	1	Cubicle	
2 020	4107 6507 80	2	Handle	
2 030	4107 6509 94	2	Plug	
2 040	4107 6509 98	1	Plug	
2 050	4107 6516 72	1	Decal	
2 060	4107 6523 77	1	Decal	
3 010	4107 6516 30	1	Gasket	
3 020	0301 2318 00	1	Washer	
3 030	0333 3100 04	1	Lock washer	
3 040	5537 3448 00	1	Hexagon nut	
3 050	4107 6516 60	1	PCB motion sensor	
3 060	4107 6506 57	1	Clamp	
3 070	4107 6516 98	2	Nut	
3 080	4107 6519 26	1	Cable motion sensor	
3 090	4107 6508 38	1	Horn	
3 100	4107 6519 23	1	Cable horn	

 38

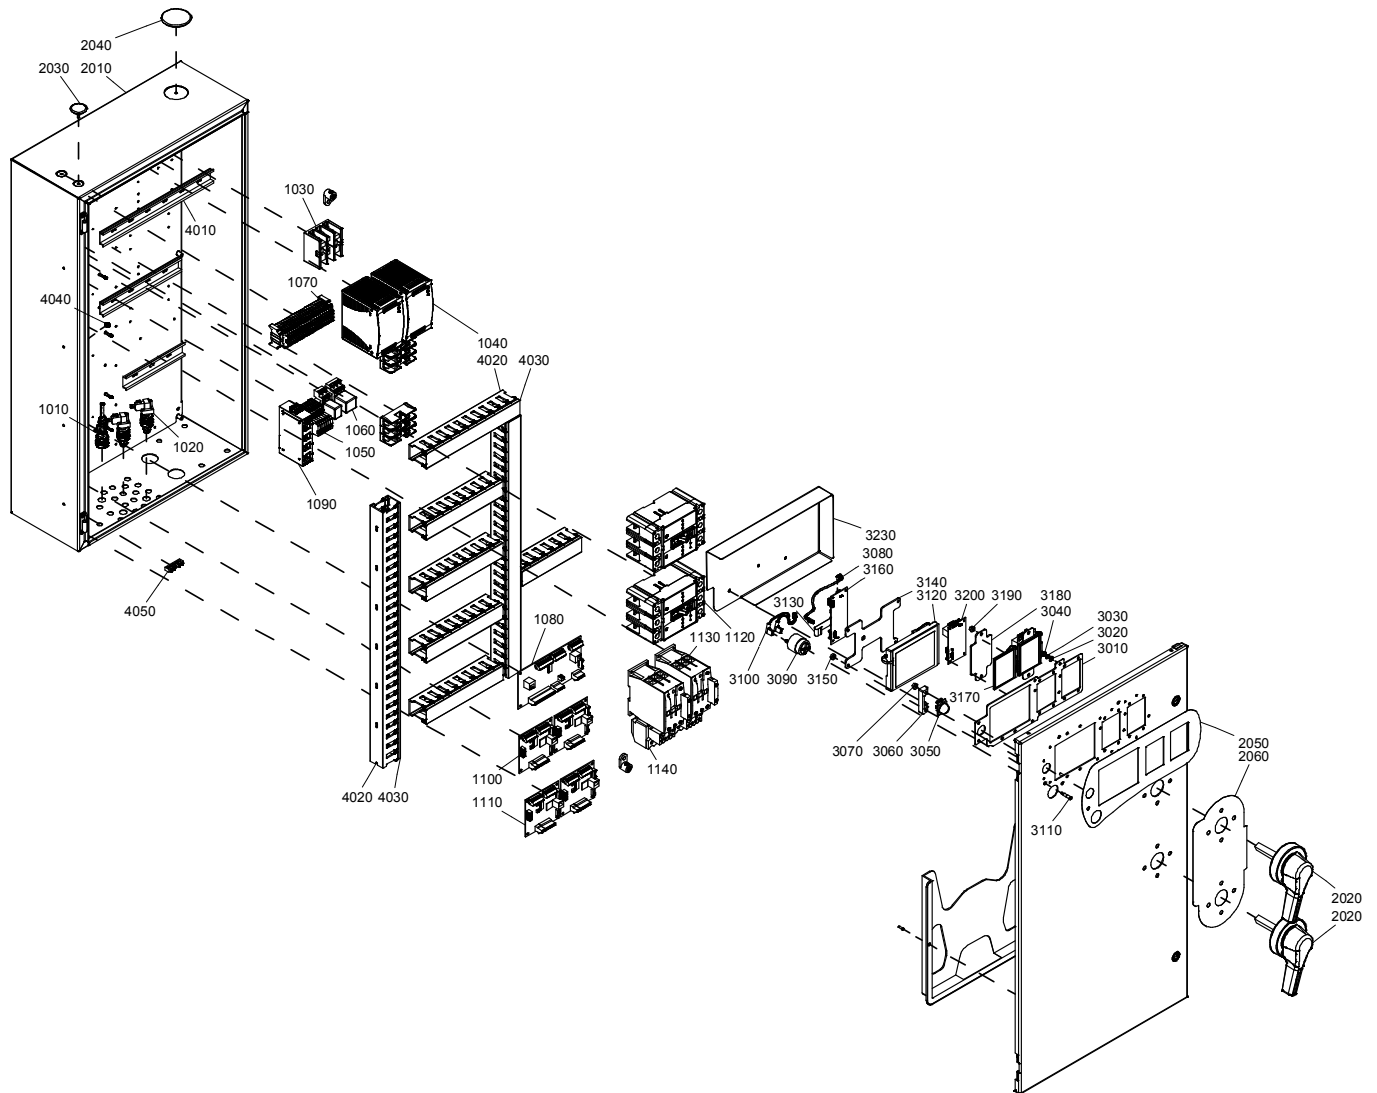


4107 8524 70-01

Control panel DX 10-15hp

38

Ref.No.	Part Number	Qty	Name	Remarks
3 110	4107 6507 35	1	LED power green	
	4107 7847 88	1	Display LCD assembly	
3 120	4107 6515 43 •	1	5.7" LCD display	
3 130	4107 6515 48 •	1	Cable 5.7" LCD display	
3 140	4107 6517 33 •	1	Bracket	
3 150	4107 6516 98 •	4	Nut	
3 160	4107 6511 80 •	1	PCB 5.7" LCD display	
	4107 7847 84	2	Display LCD assembly	
3 170	4107 6515 42 •	1	3.5" LCD display	
3 180	4107 6506 53 •	1	Bracket	
3 190	4107 6516 98 •	2	Nut	
3 200	4107 6511 81 •	1	PCB 3.5" LCD display	
3 210	4107 6517 59	2	Power cable 3.5" LCD display	
3 220	4107 6517 64	1	Power cable 5.7" LCD Display	
3 230	4107 6516 49	1	Cover	
4 010	4107 6508 93	2.5	Rail	
4 020	4107 6508 94	10	Wire duct	
4 030	4107 6509 01	10	Cover	
4 040	5537 3448 00	3	Nut	
4 050	4107 6508 35	2	Lug	

 39

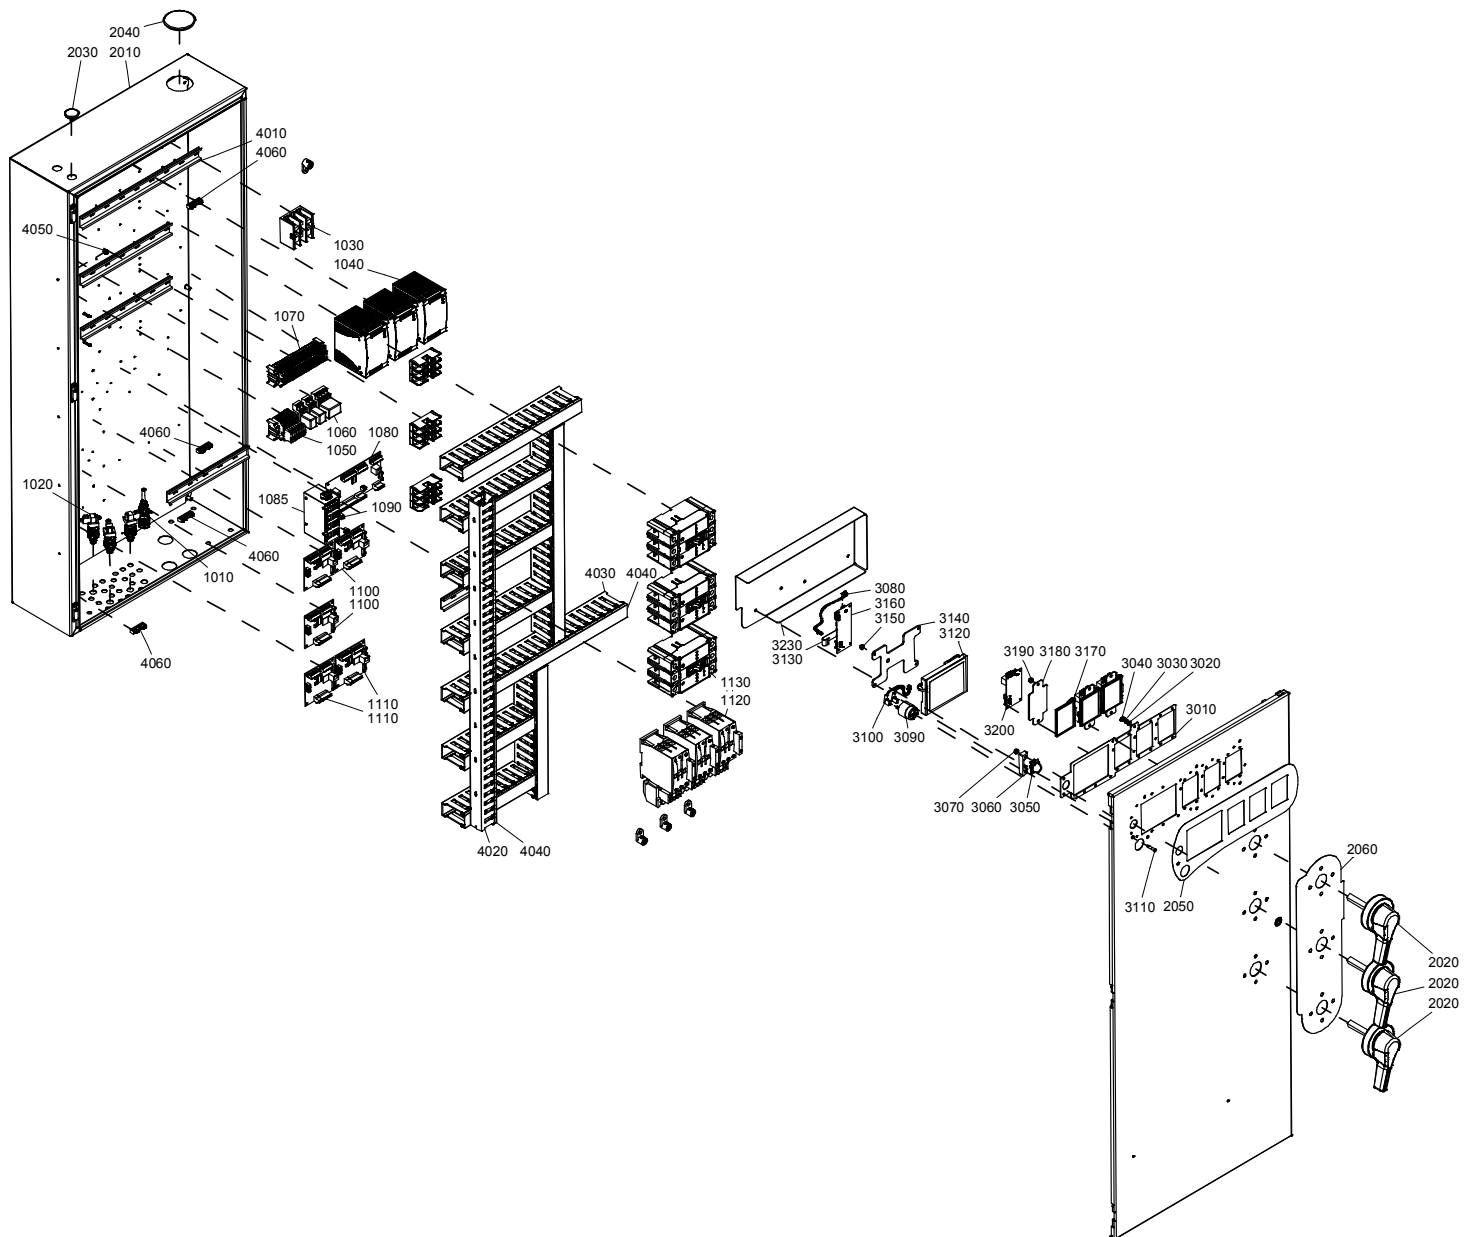


4107 8524 71-01

Control panel TX 10-15hp

39

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6511 32	1	Temperature probe	
1 020	4107 6507 33	3	Inlet vacuum switch	
1 030	4107 6507 37	1	Power distribution	
1 040		3	Power supply	
	4107 6506 91		10hp 415/3/50 DOL	
	4107 6506 91		15hp 415/3/50 DOL	
1 050	4107 7873 56	1	Fuse block	
	4107 6508 22 •	1	0.5A Fuse	
	4107 6508 24 •	4	1.0A Fuse	
	4107 6508 28 •	3	4.0A Fuse	
1 060	4107 7844 94	1	Relay TX	
	4107 6515 95 •	2	Relay 2-pole	
	4107 6507 98 •	2	Relay base 2-pole	
	4107 6515 97 •	1	Relay 4-pole	
	4107 6508 00 •	1	Relay base 4-pole	
1 070	4107 7845 80	1	Terminal block TX	
	4107 6507 44 •	24	Terminal	
	4107 6507 45 •	1	End plate	
	4107 6507 46 •	2	End stop	
1 080	4107 6511 91	1	Master PCB	
1 085	4107 6516 62	1	Ethernet hub	
1 090	4107 6507 11	2	Ethernet security plug	
1 100	4107 6511 84	3	Pump PCB TX	
1 110	4107 6511 84	2	Dryer PCB	
1 120		3	Circuit breaker	
	4107 6507 63		10hp 415/3/50 DOL	
	4107 6507 66		15hp 415/3/50 DOL	
1 130		3	Starter	
	4107 6508 44		10hp 415/3/50 DOL	
	4107 6508 45		15hp 415/3/50 DOL	
1 140		3	Overload	
	4107 6505 07		10hp 415/3/50 DOL	
	4107 6508 75		15hp 415/3/50 DOL	
2 010	4107 6530 78	1	Cubicle	
2 020	4107 6507 80	3	Handle	
2 030	4107 6509 94	2	Plug	
2 040	4107 6509 99	1	Plug	
2 050	4107 6516 73	1	Decal	
2 060	4107 6523 79	1	Decal	
3 010	4107 6516 31	1	Gasket	
3 020	0301 2318 00	1	Washer	
3 030	0333 3100 04	1	Lock washer	
3 040	5537 3448 00	1	Hexagon nut	
3 050	4107 6516 60	1	PCB motion sensor	
3 060	4107 6506 57	1	Clamp	
3 070	4107 6516 98	2	Nut	
3 080	4107 6519 26	1	Cable motion sensor	
3 090	4107 6508 38	1	Horn	

 39

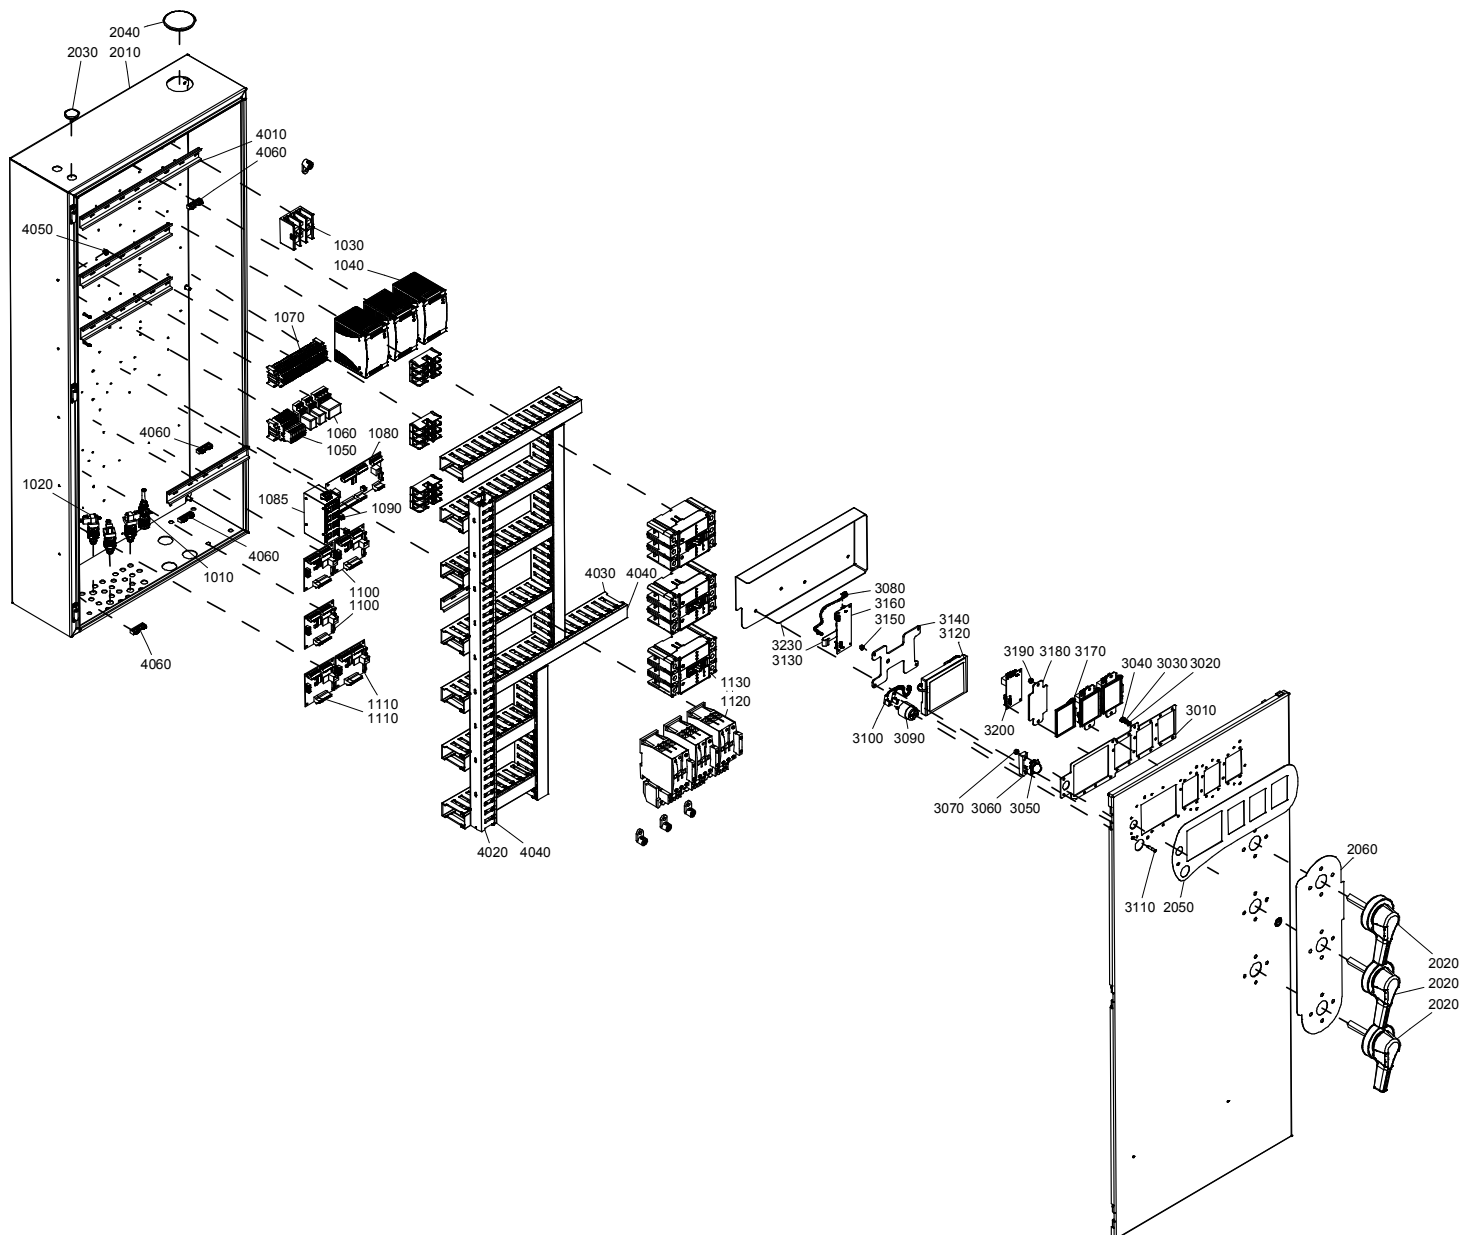


4107 8524 71-01

Control panel TX 10-15hp

39

Ref.No.	Part Number	Qty	Name	Remarks
3 100	4107 6519 23	1	Cable horn	
3 110	4107 6507 35	1	LED power green	
	4107 7847 88	1	Display LCD assembly	
3 120	4107 6515 43 •	1	5.7" LCD display	
3 130	4107 6515 48 •	1	Cable 5.7" LCD display	
3 140	4107 6517 33 •	1	Bracket	
3 150	4107 6516 98 •	4	Nut	
3 160	4107 6511 80 •	1	PCB 5.7" LCD display	
	4107 7847 84	3	Display LCD assembly	
3 170	4107 6515 42 •	1	3.5" LCD display	
3 180	4107 6506 53 •	1	Bracket	
3 190	4107 6516 98 •	2	Nut	
3 200	4107 6511 81 •	1	PCB 3.5" LCD display	
3 210	4107 6517 61	3	Power cable 3.5" LCD display	
3 220	4107 6517 65	1	Power Cable 5.7" LCD Display	
3 230	4107 6516 50	1	Cover	
4 010	4107 6508 93	4.5	Rail	
4 020	4107 6508 94	3.5	Wire duct	
4 030	4107 6508 98	10.5	Wire duct	
4 040	4107 6509 01	14	Cover	
4 050	5537 3448 00	5	Nut	
4 060	4107 6508 35	4	Lug	

 40

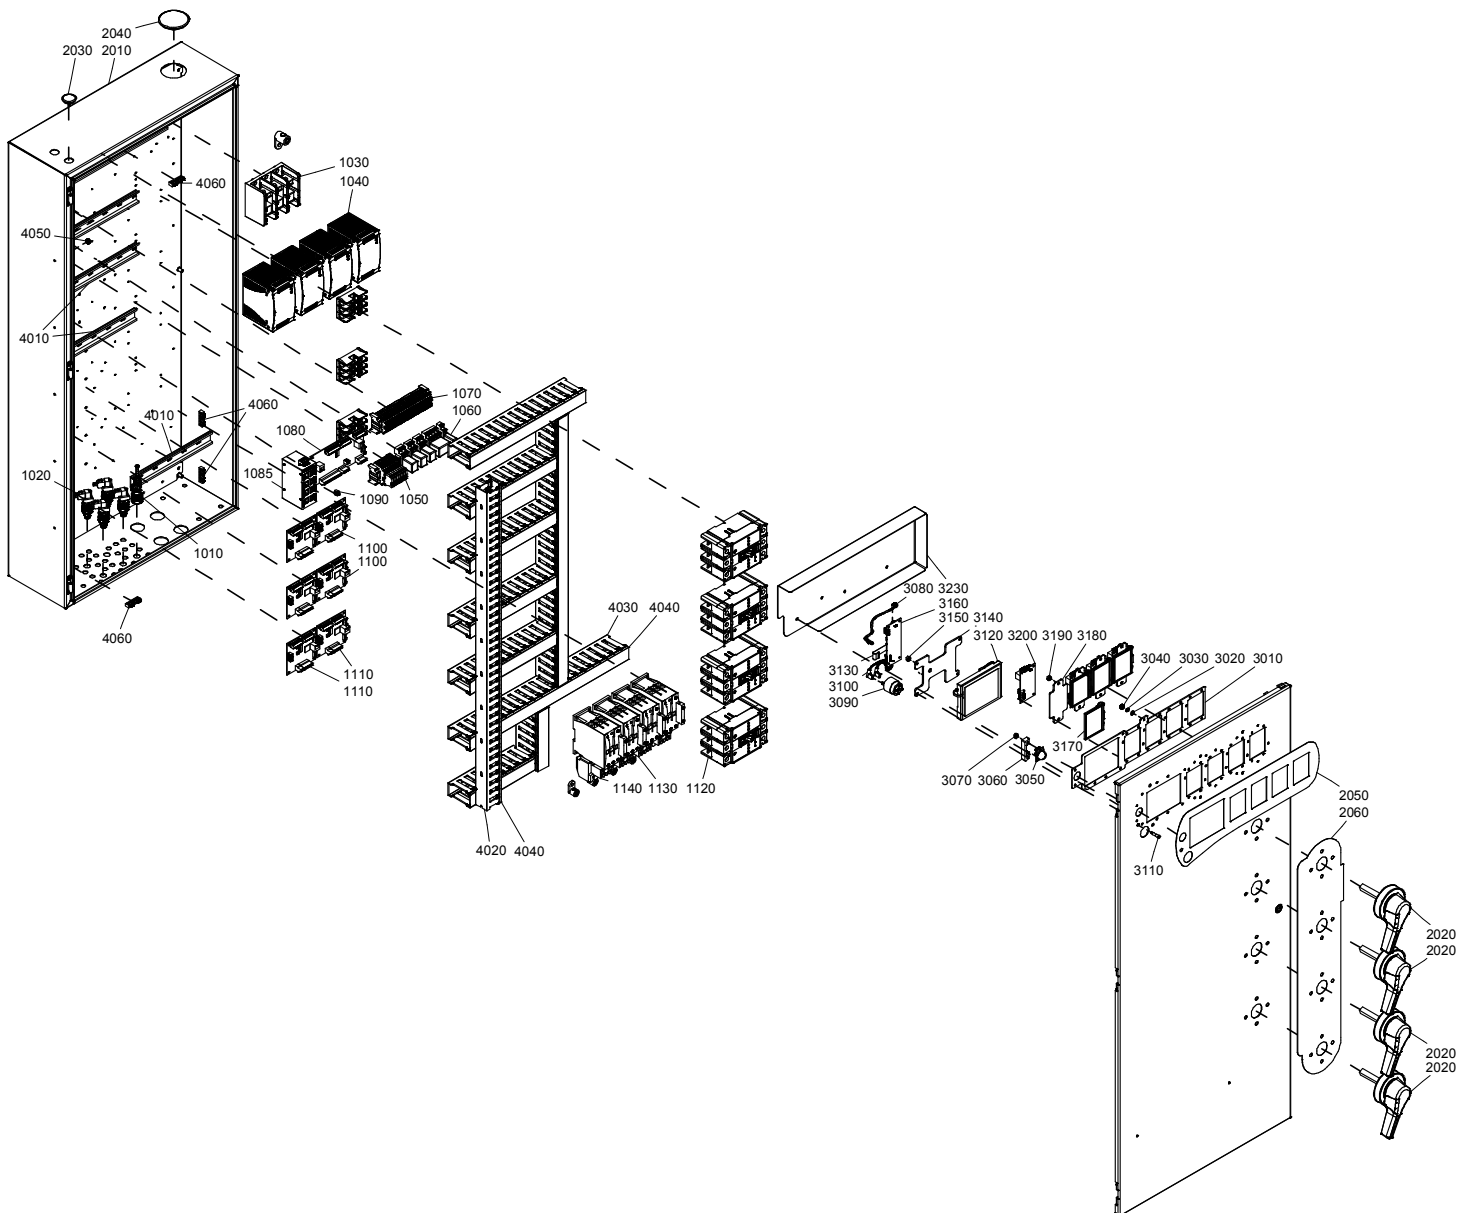


4107 8524 72-01

Control panel QX 10-15hp

40

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6511 32	1	Temperature probe	
1 020	4107 6507 33	4	Inlet vacuum switch	
1 030	4107 6507 37	1	Power distribution	
1 040		4	Power supply	
	4107 6506 91		10hp 415/3/50 DOL	
	4107 6506 91		15hp 415/3/50 DOL	
1 050	4107 7873 58	1	Fuse block	
	4107 6508 22 •	1	0.5A Fuse	
	4107 6508 24 •	4	1.0A Fuse	
	4107 6508 28 •	4	4.0A Fuse	
1 060	4107 7844 98	1	Relay QX	
	4107 6515 95 •	3	Relay 2-pole	
	4107 6507 98 •	3	Relay base 2-pole	
	4107 6515 97 •	1	Relay 4-pole	
	4107 6508 00 •	1	Relay base 4-pole	
	4107 6515 94 •	1	Relay 1-pole	
	4107 6507 97 •	1	Relay base 1-pole	
1 070	4107 7845 85	1	Terminal block QX	
	4107 6507 44 •	26	Terminal	
	4107 6507 45 •	1	End plate	
	4107 6507 46 •	2	End stop	
1 080	4107 6511 91	1	Master PCB	
1 085	4107 6516 62	1	Ethernet hub	
1 090	4107 6507 11	1	Ethernet security plug	
1 100	4107 6511 84	4	Pump PCB QX	
1 110	4107 6511 84	2	Dryer PCB	
1 120		4	Circuit breaker	
	4107 6507 63		10hp 415/3/50 DOL	
	4107 6507 66		15hp 415/3/50 DOL	
1 130		4	Starter	
	4107 6508 44		10hp 415/3/50 DOL	
	4107 6508 45		15hp 415/3/50 DOL	
1 140		4	Overload	
	4107 6505 07		10hp 415/3/50 DOL	
	4107 6508 75		15hp 415/3/50 DOL	
2 010	4107 6530 80	1	Cubicle	
2 020	4107 6507 80	4	Handle	
2 030	4107 6509 94	2	Plug	
2 040	4107 6509 99	1	Plug	
2 050	4107 6516 74	1	Decal	
2 060	4107 6523 81	1	Decal	
3 010	4107 6516 32	1	Gasket	
3 020	0301 2318 00	1	Washer	
3 030	0333 3100 04	1	Lock washer	
3 040	5537 3448 00	1	Hexagon nut	
3 050	4107 6516 60	1	PCB motion sensor	
3 060	4107 6506 57	1	Clamp	
3 070	4107 6516 98	2	Nut	

 40

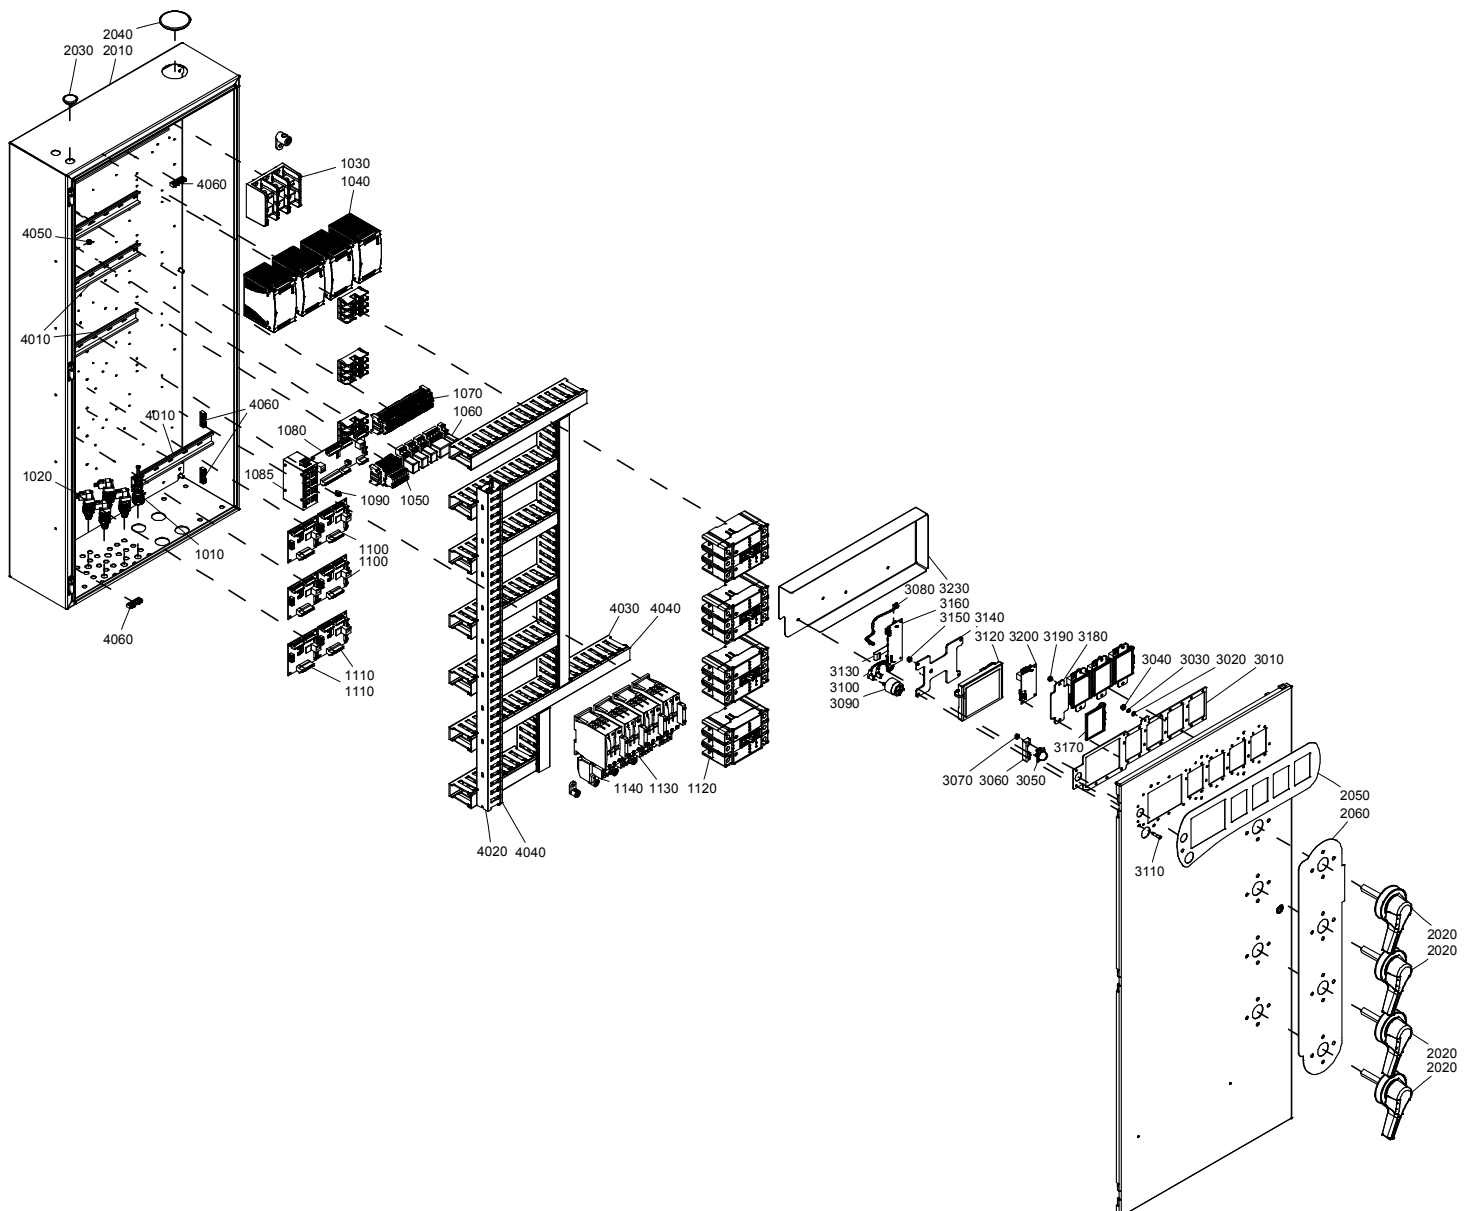


4107 8524 72-01

Control panel QX 10-15hp

40

Ref.No.	Part Number	Qty	Name	Remarks
3 080	4107 6519 26	1	Cable motion sensor	
3 090	4107 6508 38	1	Horn	
3 100	4107 6519 23	1	Cable horn	
3 110	4107 6507 35	1	LED power green	
	4107 7847 88	1	Display LCD assembly	
3 120	4107 6515 43 •	1	5.7" LCD display	
3 130	4107 6515 48 •	1	Cable 5.7" LCD display	
3 140	4107 6517 33 •	1	Bracket	
3 150	4107 6516 98 •	4	Nut	
3 160	4107 6511 80 •	1	PCB 5.7" LCD display	
	4107 7847 84	4	Display LCD assembly	
3 170	4107 6515 42 •	1	3.5" LCD display	
3 180	4107 6506 53 •	1	Bracket	
3 190	4107 6516 98 •	2	Nut	
3 200	4107 6511 81 •	1	PCB 3.5" LCD display	
3 210	4107 6517 61	4	Power cable 3.5" LCD display	
3 220	4107 6517 65	1	Power cable 5.7" LCD display	
3 230	4107 6516 51	1	Cover	
4 010	4107 6508 93	5	Rail	
4 020	4107 6508 94	4	Wire duct	
4 030	4107 6508 98	12	Wire duct	
4 040	4107 6509 01	16	Cover	
4 050	5537 3448 00	5	Nut	
4 060	4107 6508 35	4	Lug	

 41

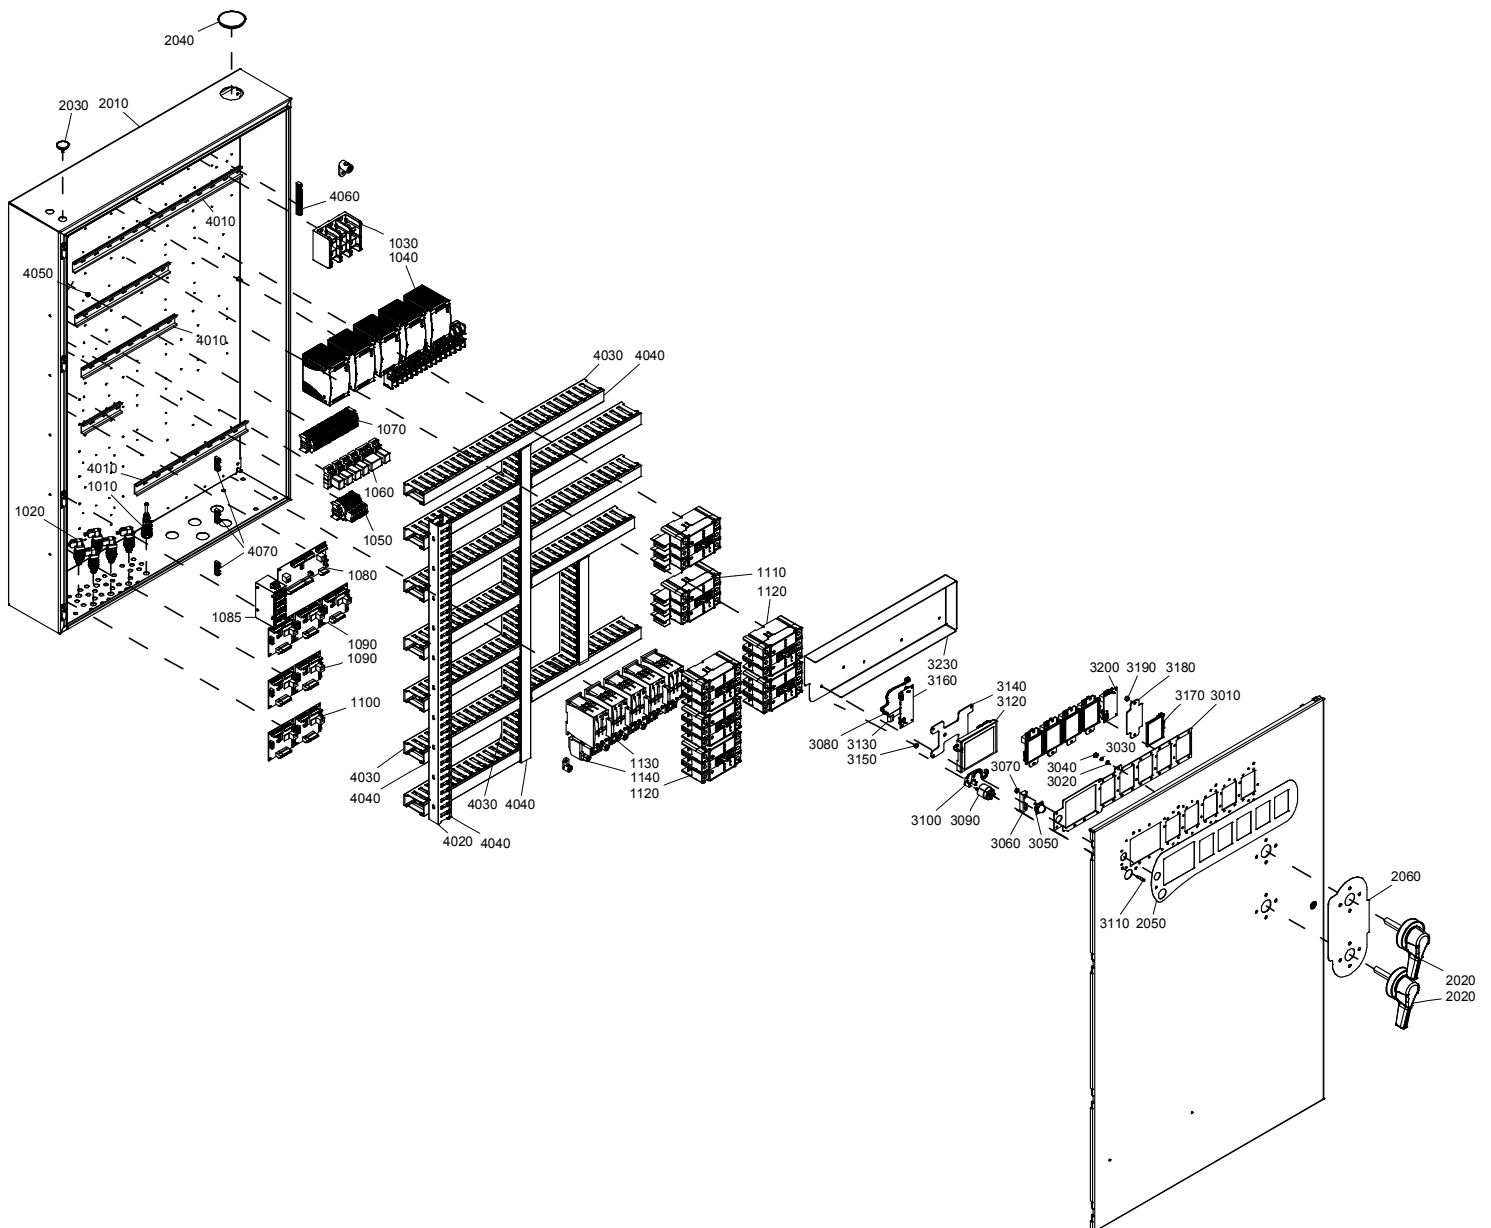


4107 8525 12-01

Control panel PX 15hp

41

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6511 32	1	Temperature probe	
1 020	4107 6507 33	5	Inlet vacuum switch	
1 030		1	Power distribution	
	4107 6507 37		PX 15hp 415/3/50 DOL	
1 040		5	Power supply	
	4107 6506 91		PX 15hp 415/3/50 DOL	
1 050	4107 7873 60	1	Fuse block	
	4107 6508 22 •	1	0.5A Fuse	
	4107 6508 24 •	4	1.0A Fuse	
	4107 6508 28 •	5	4.0A Fuse	
1 060	4107 7845 02	1	Relay PX	
	4107 6515 95 •	5	Relay 2-pole	
	4107 6507 98 •	5	Relay base 2-pole	
	4107 6515 97 •	1	Relay 4-pole	
	4107 6508 00 •	1	Relay base 4-pole	
1 070	4107 7845 44	1	Terminal block PX	
	4107 6507 44 •	28	Terminal	
	4107 6507 45 •	1	End plate	
	4107 6507 46 •	2	End stop	
1 080	4107 6511 91	1	Master PCB	
1 085	4107 6516 62	1	Ethernet hub	
1 090	4107 6511 84	5	Pump PCB PX	
1 100	4107 6511 84	2	Dryer PCB	
1 110		2	Disconnect	
	4107 6510 93		PX 15hp 415/3/50 DOL	
1 120		5	Circuit breaker	
	4107 6507 66		PX 15hp 415/3/50 DOL	
1 130		5	Starter	
	4107 6508 45		PX 15hp 415/3/50 DOL	
1 140		5	Overload	
	4107 6508 75		PX 15hp 415/3/50 DOL	
2 010	4107 6530 83	1	Cubicle	
2 020	4107 6507 80	2	Handle	
2 030	4107 6509 94	2	Plug	
2 040	4107 6509 99	1	Plug	
2 050	4107 6516 75	1	Decal	
2 060	4107 6523 83	1	Decal	
3 010	4107 6516 33	1	Gasket	
3 020	0301 2318 00	1	Washer	
3 030	0333 3100 04	1	Lock washer	
3 040	5537 3448 00	1	Hexagon nut	
3 050	4107 6516 60	1	PCB motion sensor	
3 060	4107 6506 57	1	Clamp	
3 070	4107 6516 98	2	Nut	
3 080	4107 6519 26	1	Cable motion sensor	
3 090	4107 6508 38	1	Horn	
3 100	4107 6519 23	1	Cable horn	
3 110	4107 6507 35	1	LED power green	
3 120	4107 6515 43	1	5.7" LCD display	

 41

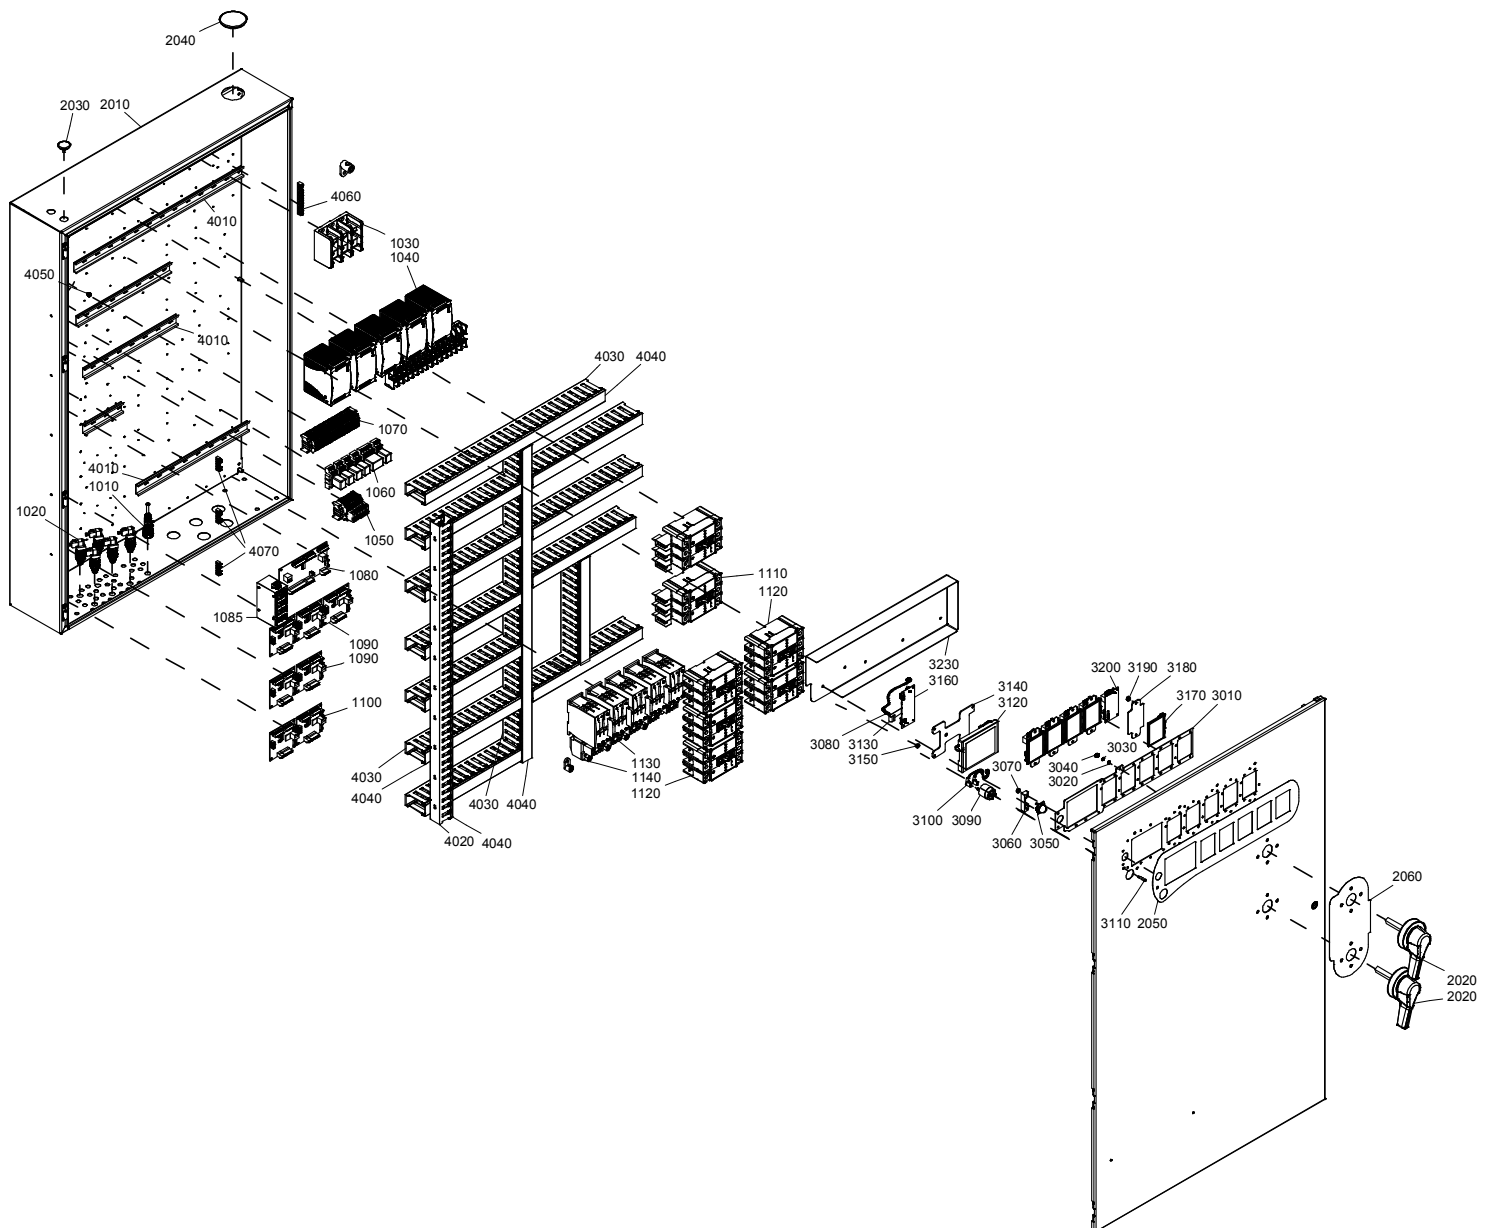


4107 8525 12-01

Control panel PX 15hp

41

Ref.No.	Part Number	Qty	Name	Remarks
3 130	4107 6515 48	1	Cable 5.7" LCD display	
3 140	4107 6517 33	1	Bracket	
3 150	4107 6516 98	4	Nut	
3 160	4107 6511 80	1	PCB 5.7" LCD display	
3 170	4107 6515 42	5	3.5" LCD display	
3 180	4107 6506 53	5	Bracket	
3 190	4107 6516 98	10	Nut	
3 200	4107 6511 81	5	PCB 3.5" LCD display	
3 210	4107 6517 62	5	Power cable 3.5" LCD display	
3 220	4107 6517 66	1	Power cable 5.7" LCD display	
3 230	4107 6516 52	1	Cover	
4 010	4107 6508 93	7	Rail	
4 020	4107 6508 94	3.5	Wire duct	
4 030	4107 6508 98	20.5	Wire duct	
4 040	4107 6509 01	24	Cover	
4 050	5537 3448 00	5	Nut	
4 060	4107 6508 36	1	Lug	
4 070	4107 6508 35	3	Lug	

 42

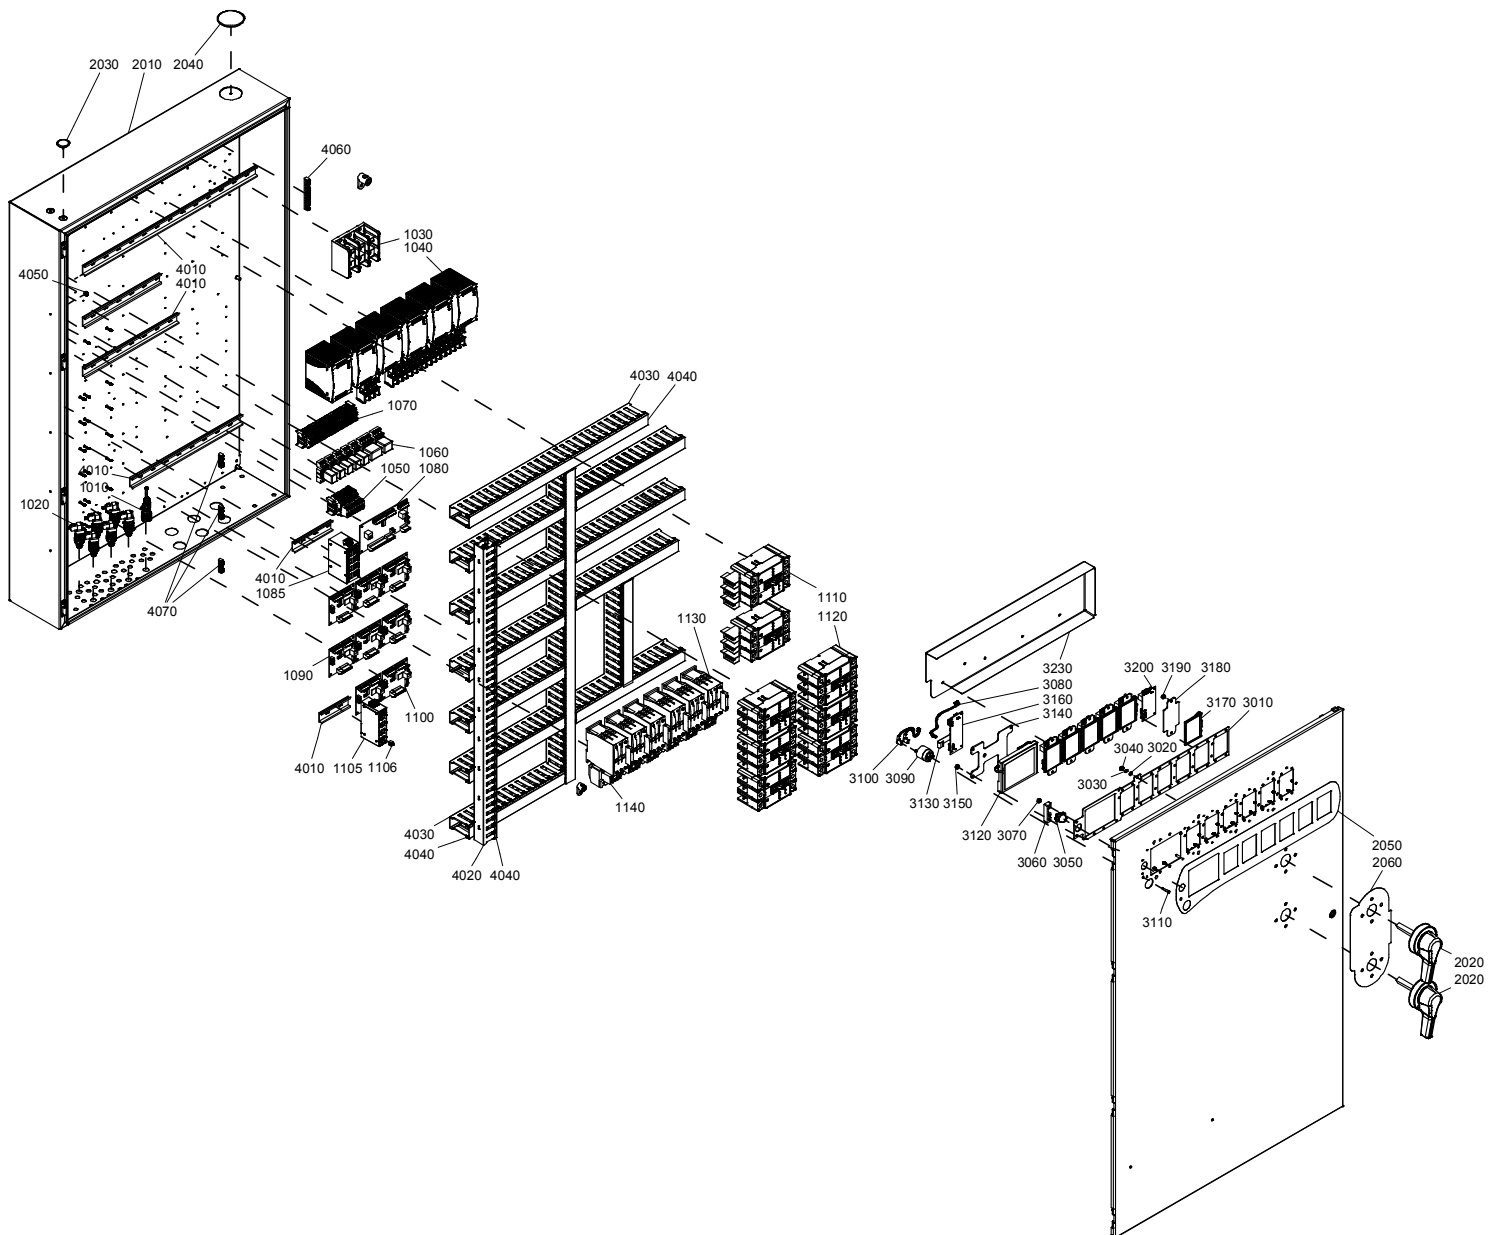


4107 8525 13-01

Control panel HX 15hp

42

Ref.No.	Part Number	Qty	Name	Remarks
1 010	4107 6511 32	1	Temperature probe	
1 020	4107 6507 33	6	Inlet vacuum switch	
1 030		1	Power distribution	
	4107 6507 37		HX 15hp 415/3/50 DOL	
1 040		6	Power supply	
	4107 6506 91		HX 15hp 415/3/50 DOL	
1 050	4107 7873 62	1	Fuse block	
	4107 6508 22 •	2	0.5A Fuse	
	4107 6508 24 •	4	1.0A Fuse	
	4107 6508 28 •	6	4.0A Fuse	
1 060	4107 7845 06	1	Relay HX	
	4107 6515 95 •	5	Relay 2-pole	
	4107 6507 98 •	5	Relay base 2-pole	
	4107 6515 97 •	1	Relay 4-pole	
	4107 6508 00 •	1	Relay base 4-pole	
	4107 6515 96 •	1	Relay 3-pole	
	4107 6507 99 •	1	Relay base 3-pole	
1 070	4107 7845 95	1	Terminal block HX	
	4107 6507 44 •	30	Terminal	
	4107 6507 45 •	1	End plate	
	4107 6507 46 •	2	End stop	
1 080	4107 6511 91	1	Master PCB	
1 085	4107 6511 62	1	Ethernet switch	
1 090	4107 6511 84	6	Pump PCB HX	
1 100	4107 6511 84	2	Dryer PCB	
1 105	4107 6516 64	1	Ethernet switch	
1 106	4107 6507 11	1	Ethernet security plug	
1 110		2	Disconnect	
	4107 6510 93		HX 15hp 415/3/50 DOL	
1 120		6	Circuit breaker	
	4107 6507 66		HX 15hp 415/3/50 DOL	
1 130		6	Starter	
	4107 6508 45		HX 15hp 415/3/50 DOL	
1 140		6	Overload	
	4107 6508 75		HX 15hp 415/3/50 DOL	
2 010	4107 6530 86	1	Cubicle	
2 020	4107 6507 80	2	Handle	
2 030	4107 6509 94	2	Plug	
2 040	4107 6509 99	1	Plug	
2 050	4107 6516 76	1	Decal	
2 060	4107 6523 85	1	Decal	
3 010	4107 6516 34	1	Gasket	
3 020	0301 2318 00	1	Washer	
3 030	0333 3100 04	1	Lock washer	
3 040	5537 3448 00	1	Hexagon nut	
3 050	4107 6516 60	1	PCB motion sensor	
3 060	4107 6506 57	1	Clamp	
3 070	4107 6516 98	2	Nut	

 42

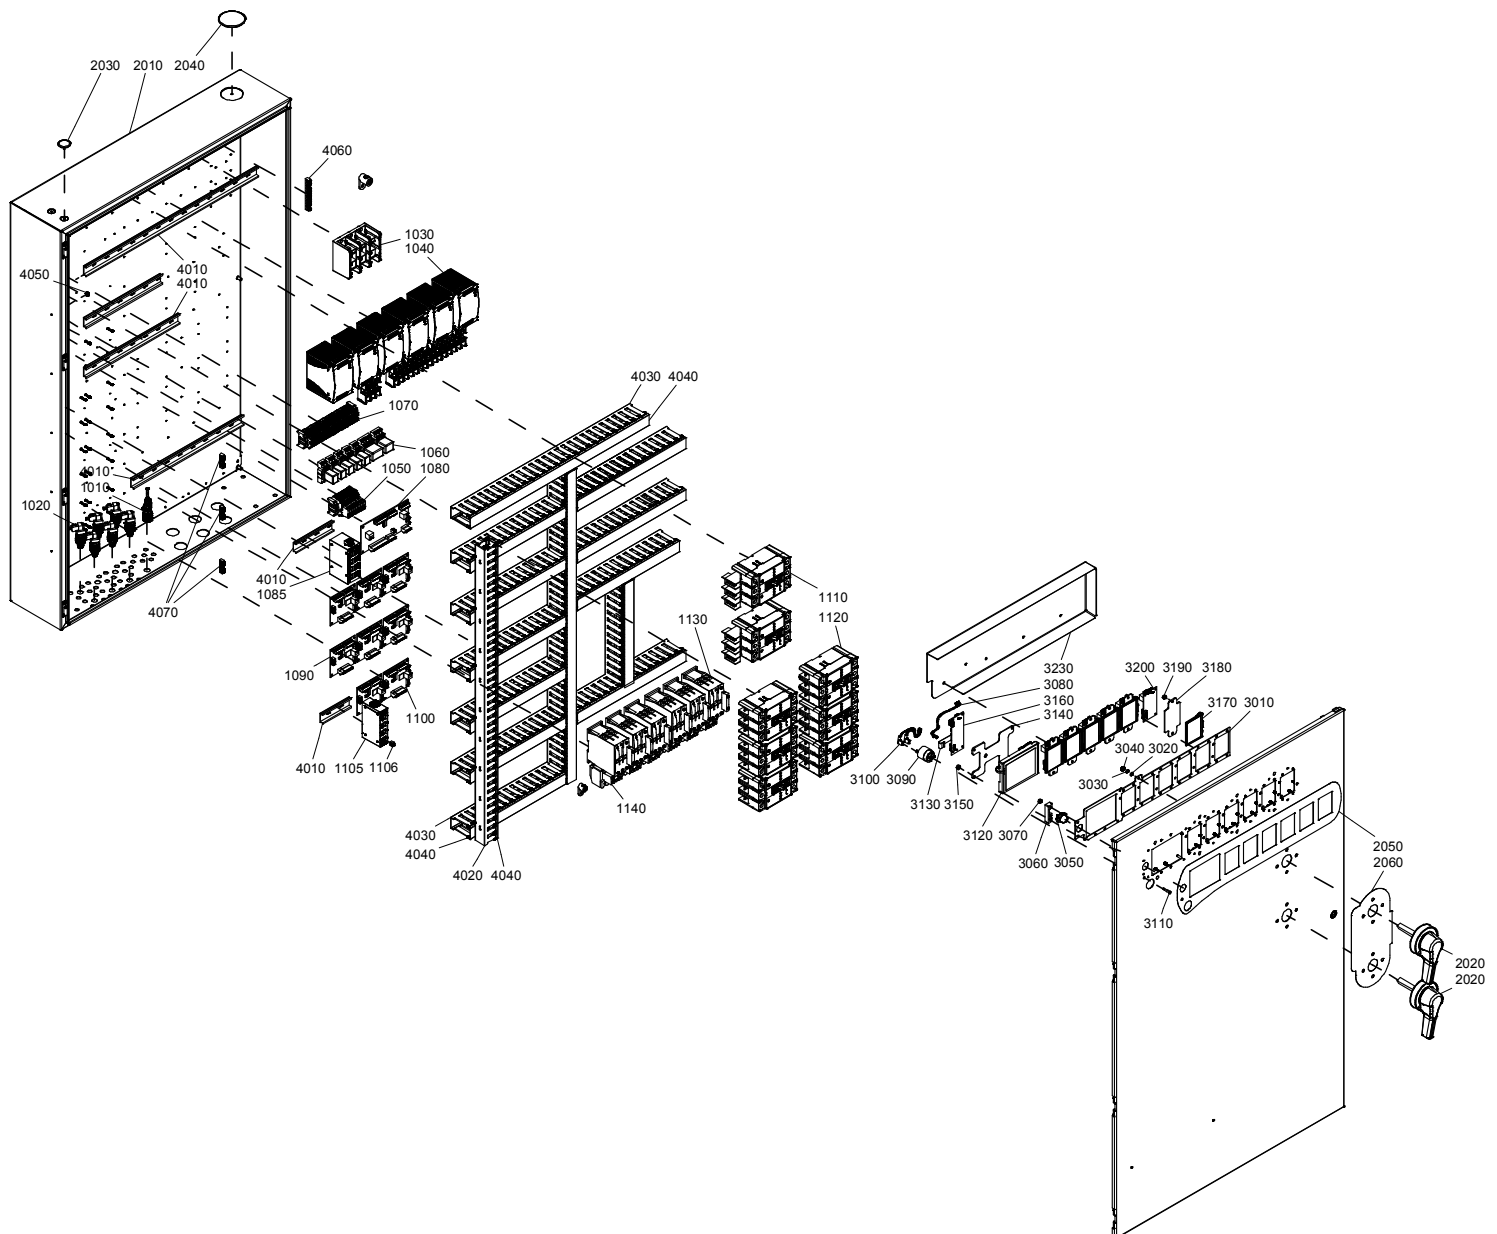

4107 8525 13-01

Control panel HX 15hp

42

Ref.No.	Part Number	Qty	Name	Remarks
3 080	4107 6519 26	1	Cable motion sensor	
3 090	4107 6508 38	1	Horn	
3 100	4107 6519 23	1	Cable horn	
3 110	4107 6507 35	1	LED power green	
3 120	4107 6515 43	1	5.7" LCD display	
3 130	4107 6515 48	1	Cable 5.7" LCD display	
3 140	4107 6517 33	1	Bracket	
3 150	4107 6516 98	4	Nut	
3 160	4107 6511 80	1	PCB 5.7" LCD display	
3 170	4107 6515 42	6	3.5" LCD display	
3 180	4107 6506 53	6	Bracket	
3 190	4107 6516 98	12	Nut	
3 200	4107 6511 81	6	PCB 3.5" LCD display	
3 210	4107 6517 62	6	Power cable 3.5" LCD display	
3 220	4107 6517 66	1	Power cable 5.7" LCD display	
3 230	4107 6516 53	1	Cover	
4 010	4107 6508 93	7	Rail	
4 020	4107 6508 94	3.5	Wire duct	
4 030	4107 6508 98	20.5	Wire duct	
4 040	4107 6509 01	24	Cover	
4 050	5537 3448 00	5	Nut	
4 060	4107 6508 36	1	Lug	
4 070	4107 6508 35	3	Lug	

Notes:

This image shows a full page of white paper with horizontal dotted lines. The lines are evenly spaced and run across the width of the page, providing a guide for handwriting practice. There are no margins, text, or other markings on the page.

Notes:

[illegible]



1800 Overview Drive Rock Hill, SC 29730
(888) 4-MEDGAS (888) 463-3427
Fax (803) 817-5750
www.beaconmedaes.com